

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

IC :

-English:

This device complies with Industry Canada RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

-French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio Exemptés de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

MT02-0101-069005
MT02-0101-069006

Automate Motor
Programming
Guide

1. ASSEMBLY

Please refer to separate Rollease
Armeda System Assembly Manual
for full assembly instructions
relevant to the hardware system
being used.

2. BATTERY MANAGEMENT

For battery motors;
Prevent discharging the battery
completely for extended periods,
recharge as soon as the battery is
discharged

CHARGING NOTES

Before first use please charge
motor for 6 hours, using the
recommended AC charger

 During operation, if
battery is low, the motor
will beep 10 times to
prompt the user
it needs charging.

3. PRODUCT RANGE

The 1WAY Quick Start Programming Guide is for 1WAY Automate Motors



INSTALLER
BEST PRACTICE AND TIPS

SLEEP MODE	SETTLE FABRIC
If pre-programmed, before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit	Run the fabric up and down several times to ensure fabric has settled to some extent and re adjust the limits if needed
LOCK REMOTE	CHARGE 100%
Prevent users accidentally changing the limit; ensure the remote is locked as your last step of programming.	For battery motors ensure the motor is fully charged as per instructions.
ZONE / GROUPS	INSTALLERS REMOTE
Ask the customer the day before to think how shades will be zoned on the remote. This may save an extra call out	Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.


DISPOSAL AND RECYCLING



Do not dispose of in
general waste.



P1 LOCATIONS

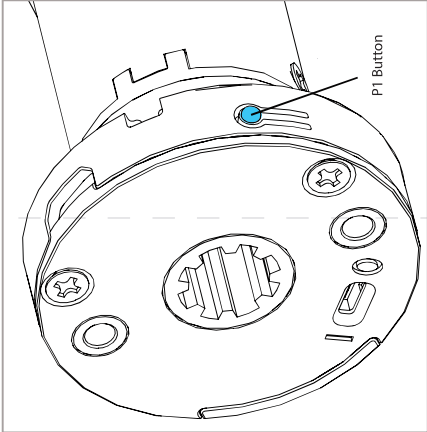

SAFETY

WARNING: Important safety instructions to be read before installation and use.
Incorrect installation or use can lead to serious injury and void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions.
Save these instructions for future reference.


- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions
- For use with motorized shading devices.
- Keep away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.



QUICK START PROGRAMMING
INSTALLER


This setup wizard should be used for new installation or factory reset motors only.
Individual steps may not work if you haven't followed the wizard from the beginning.

STEP 1 ON REMOTE

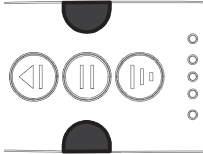

Press the channel buttons to select the channel that needs to be programmed

STEP 2 ON REMOTE

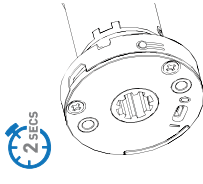

Press the P1 button on the motor for 2 Seconds until the motor responds as below



Within 4 seconds hold the stop button on the remote for 3 seconds. The motor will respond.

STEP 3 CHECK DIRECTION



Press up or down to check the motor direction. If correct skip to step 5

STEP 4 CHANGE DIRECTION



If the shade direction needs to be reversed; press and hold the up & down arrow together for 5 seconds until the motor .jogs



Reversing motor direction using this method is only possible during initial set-up.

STEP 5 SET UPPER LIMIT



Move shade to desired top limit by pressing the up or down button as required. Then press and hold up & stop together for 5 sec to save limit.



Tap the arrow several times or hold down if needed, press arrow to stop

STEP 6 SET BOTTOM LIMIT



Move shade to desired bottom limit by pressing the down or up button as required. Then press and hold down & stop together for 5 sec to save limit.



Tap the arrow several times or hold down if needed, press arrow to stop

FACTORY RESET
MOTOR RESET PROCEDURE

To reset all settings in the motor press and hold the P1 Button for 14 seconds, you should see 4 independent jogs followed by 4x Beeps at the end.



* Internal tubular pictured above. Refer to 'P1 Locations' for specific devices







USER GUIDE


QUICK START GUIDE

BUTTON OVERVIEW

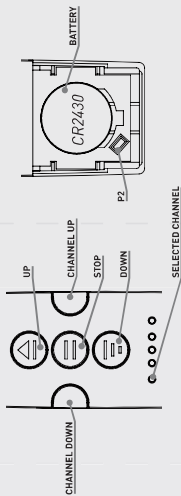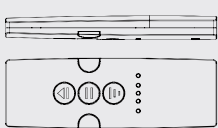

REPLACE BATTERY

 
Remove cover from remote press gently in and down to disengage cover.



Install battery with positive (+) side facing up


WALL MOUNTING

Use supplied fasteners and anchors to attach the base to wall.

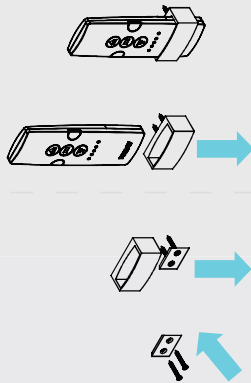

SELECTING A CHANNEL


Note: If no button is pressed, the first channel selection will be used as default.

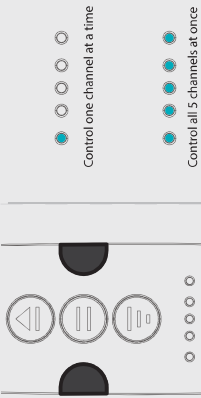

Press the channel buttons to cycle through the channels

CONTROLLING A SHADE

CONTROL SHADE UP OR DOWN

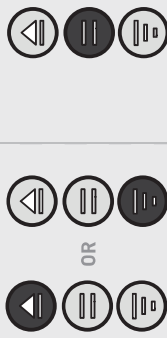

Press UP or DOWN to move shade accordingly

STOPPING THE SHADE



Press the stop button to stop shade at any point

ADJUSTING UPPER LIMIT



Hold STOP & UP

Press UP OR DOWN

Hold STOP & UP



ADJUSTING LOWER LIMIT



Hold STOP & DOWN

Press UP OR DOWN

Hold STOP & DOWN



TIILT MODE

DEFAULT IS ROLLER MODE



Hold UP & DOWN

Press STOP



MOTOR RESPONSE FOR EACH INPUT

ROLLER MODE

CHANGE FROM TILT MODE



Press UP & DOWN


Press STOP



MOTOR RESPONSE 2ND INPUT

CONTROLLERS

ADD ADDITIONAL CONTROLLER "B"

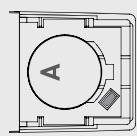

Press P2



MOTOR RESPONSE




MOTOR RESPONSE



MOTOR RESPONSE

REMOVE ADDITIONAL CONTROLLER "B"

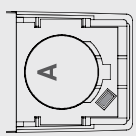

Press P2



MOTOR RESPONSE




MOTOR RESPONSE



MOTOR RESPONSE

FAVORITE POSITION

MOVE SHADE TO FAVORITE POSITION

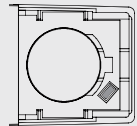

Press P2



MOTOR RESPONSE




MOTOR RESPONSE



MOTOR RESPONSE

HOLD STOP TO SEND SHADE TO FAVORITE POSITION ONCE SET

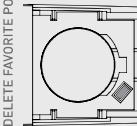

Press P2



MOTOR RESPONSE



MOTOR RESPONSE



MOTOR RESPONSE

USER GUIDE

ADVANCED PROGRAMMING

