 


NAUTICA

WIRELESS HEADPHONES

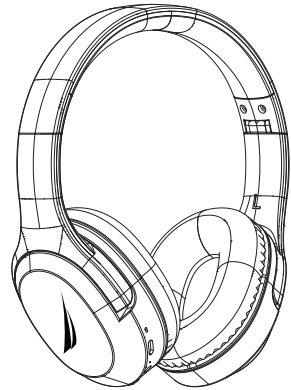

UCCHP02

Thank you for purchasing an original Nautica UCCHP02 Wireless Headphones H200.

You are getting a high quality product that's built to combine technology and design for your everyday use.

Please read the below info carefully to get the most out of your new product.

For more detailed info on care, use and warranty, please visit technofashion.com.

Safety Information

Before you use the device, read the following precautions carefully to ensure optimal product performance.

 
Use of headphones will impair your ability to hear other sounds. Use caution while using your headphones when you are engaging in any activity that requires your full attention.

This package contains small parts that may be hazardous to children and should be kept out of reach of children.

This product is not a toy – never allow children to play with this product. Always store the product out of reach of children.

None of the components can be replaced or repaired by users. Only authorized dealers or service centers may disassemble the product.

Product Description

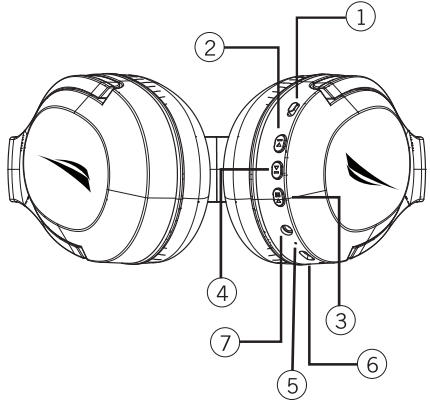

1. ANC Button

2. Vol +/- Next Track

3. Play/Pause Button

 
4. Vol -/Previous Track

5. LED Indicator

6. Type-C charging Input

7. AUX Input

Package Content

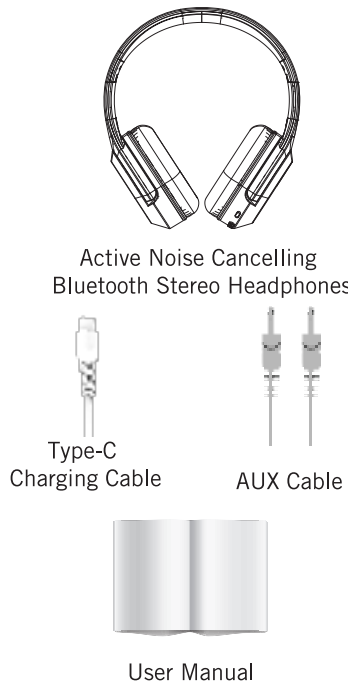

Operational Guide

Power On:
Long press Play/Pause button  to power ON

Power Off:
Long press Play/Pause button  to power OFF

Volume control:

- Short press : Increase volume
- Short press : Decrease volume

Music control:

Long press : Play next track

Long press : Play previous track

Short press Play/Pause Button  = Start / Stop track

Answering a call:
When there is an incoming call, the headphone will ring, short press Play/Pause button  once to answer the incoming call

Ending a call:
Short press Play / Pause button  while call in progress

Rejecting a call:
Long press Play/Pause button  while headphones are ringing

ANC

ANC:
Press ANC  = to turn ON/OFF active noise cancelling (ANC)

Redialing a call:
Double-click Play/Pause button 

Bluetooth Pairing

 
1. Keep the distance between your headphone and mobile phone (or other devices) within 33 Ft / 10 m.
2. Power on the headphone and it will automatically turn to Bluetooth pairing mode. The LED indicator will flash in blue and red.
3. Activate the Bluetooth function on your phone within range and select “Nautica UCCHP02” from the list shown.
4. When pairing succesful, LED light start to flash blue light at a slow speed.

Reconnect Bluetooth: When powered on, the headphone will automatically connect to the latest successfully paired device.

Charging Instructions

1. Plug the small end of the Type-C cable into the micro Type-C connector on the right earcup.
2. Plug the other end of the Type-C cable into a wall charger or computer that is powered on. LED light shows red when charging. Red light goes off when battery is full.


Important: The headphones do not play while charging

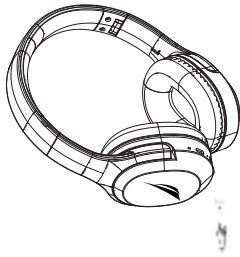

Wired Listening Mode

Use the AUX cable to connect to a non - wireless device.

 1. Power off the headphones.
2. Insert AUX cable into the connector on the right earcup.
3. Insert the other end of the cable into the connector on your device.

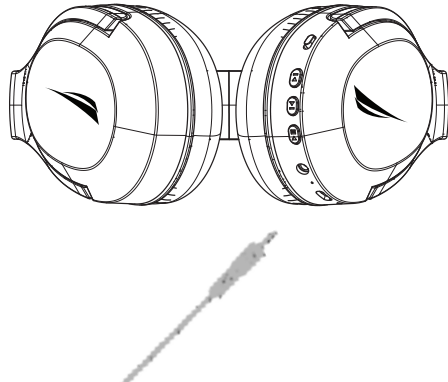

Specifications

- ANC: -20 dB ± 2 dB
- Sweatproof: Yes
- Dustproof: Yes
- Net Weight: 7,51 oz / 213 g
- Dimensions: 7 31/32 x 7 3/64in
- Charging Port: Type-C
- LED Behaviours
 - ANC On: Green light
 - Power On: Red light
 - Connect: Blue and red light flashes for 3 second
 - Power Off: Red light

Maintenance

Do not dismantle the product. Unauthorized parties may damage the product.

Do not drop, strongly vibrate, strike the product with hard object to avoid damaging internal circuit.

Do not use drastic chemicals or cleaner to clean the product.

Do not use sharp objects to scratch product surface to avoid damaging shell.

Warranty Information

Within 12 months after the purchase, in case the product is determined to be defective (at the date of original purchase) due to improper materials or workmanship, you are entitled to free repair or exchange of goods. The product should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors and materials over extended time and use are not warranted. Warranty applies to the USA only.

We will make every effort to replace limited edition or discontinued products but cannot guarantee availability for replacement.

Support

Any limited edition or discontinued product still under its applicable warranty that cannot be replaced with an identical product will be replaced with the equivalent model based on availability.

We may make changes to products and designs in the time you purchased your product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate these changes.

NAUTICA

Designed, manufactured, distributed by

TECHNOFASHION

© Technofashion, Inc. All Rights Reserved.
Designed in USA. Made in China.



PDF