S12 说明书/成品尺寸: TBD mm 材质: 120g 铜版纸 印刷: 黑白印刷

User Manual

Manual before operating your device. In order to avoid unnecessary injuries, please do not Disassemble this product by yourself, and please use a standard charger.

Product Contains



Wireless Earbuds x2





Pairs of Ear Caps x4 (XS/S/M/L) M size on earbuds

Product Specification

Driver: 6mm

Support Profile: HFP / AVRCP / A2DP Earbuds Charging Time: Up to 1 Hour Charging case Charging Time: Up to 1.5 Hours Charging case Charging Time: Up to 3 Hours (Wireless) Working Voltage: 5V

Transmission Range: Up to 10m Working Temperature: -30° - 70° Wight: 86.8g

Power On / off

1)Earbuds will auto power on and connect when you open the charging case.

2) Earbuds will auto power off and disconnect when you close the charging case.

3)If charging case open but earbuds don't power on, please long press touch button for 2 seconds to power on. (and please charge charging case)

4)If charging case close but earbuds don't power off, please long press touch button for 5 seconds to power on. (and please charge charging case)





Bluetooth Pairing

When you use earbuds first time, please connect your cellphone / laptop. Open the charging case and check the white and red LED light flash on earbuds. Turn on the Bluetooth page on your cellphone or laptop and open the cellphone Bluetooth. Select "S12" to connect the device, the white and red light off when you connect the cellphone. The device will automatically turn off if not connected cellphone within 5 minutes.

Reset Earbuds

at some time to reset.

When your earbuds got the problem, please try to reset earbuds. Short press left & right touch button for 5 times





Product Wear

Step1: Take out the earbuds. (right earbud on lest side / lest earbud on right side) Step2: Insert the ear cap into your ear. Step3:Put the ear hook over back your ear. Step4:Adjust by twisting for comfort and secure.





Product Control

| | Play/Pause Short press the touch button twice











Long press for

Long press for

2 seconds

Short press

Short press

2 seconds



button twice End a Call









Press twice

Answer a Call Short press the touch







Voice Assistant Short press the touch Press thrice

Product Charging

1)Put the earbuds back charging case to charging

2)Plug the USB type-C to charging the charging case. 3)The power display will tell you the charging case power and Earbuds



Wireless Charging







Warranty

The warranty covers your device, including accessories against manufacturing defects for 1 year from the date of purchase.

Which that are not covered in the warranty.

Unauthorized tampering, modifications or repairs of the device.

Physical damage of the device on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual.

Certification

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
- RF Exposure Information
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Safety For You

- Do not expose device to liquids, moisture or humidity. It has electronics and a battery in it. Neither of them likes getting wet.
- Oon't use abrasive cleaning solvents to clean your device. Wipe them down with a slightly damp cloth if and when necessary.
- Remove and clean the earbuds tips regularly, to ensure that you always enjoy the best sound possible from your device.
- Do not expose device to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Don't throw yours device in a fire to dispose it. The internal battery may explode.

- Don't try to disassemble your device. There are no user serviceable parts inside it.
- Try not to drop your device and keep it away from sharp objects such as keys in your pockets.
- Only charge your device from 5V USB ports such as phone chargers and laptops or PCs.
- Never listen to music at high volumes or you may permanently damage hearing.
- Pay attention to your surroundings and never wear any headphones while riding, driving or walking in traffic. You do not come with any warranty.