

KA218 美国说明书

尺寸：100*130 MM

封面157G铜板纸，彩色印刷，封2封3留白

内页：80G书纸，黑色印刷

BIGASUO

Kids Karaoke Machine

User Manual



Model:KA218

CATALOG

OPERATING INSTRUCTIONS.....	1
PRODUCT CONTENTS.....	2
SPEAKER DESCRIPTION.....	3
MICROPHONE DESCRIPTION.....	5
DETAILED USAGE GUIDE.....	6
PRODUCT ATTRIBUTES.....	8
FQA.....	9
FCC WARNING STATEMENT.....	10

Thank you for purchasing our products! This manual provides important information that will help you safely operate this karaoke machine.

Please read this user manual carefully before using this product. Thank you!

If you have any problem with the product, please don't hesitate to email us at:

us-karaoke-218@eitack.com

We will reply to you within 24 hours and give you the best solution.

OPERATING INSTRUCTIONS

All the instructions should be read carefully before operation and follow the instructions.

- * The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- * Place the machine in a stable place to prevent it from falling down.
- * Do not use the machine with attachments not approved by the manufacturer.
- * Check the machine for damage before each use. Please don't attempt to repair the machine if you are not professional.
- * Disconnect the power cable from the outlet and switch it off before cleaning the machine. Please only use a soft cloth, with no harsh abrasives or chemicals to clean, as they will damage the appearance.
- * The power cable of the speaker should be unplugged from the socket, and the power switch should be turned off when not in use for a long time.
- * Please don't leave the speaker and the microphones in a state of exhaustion for a long time, otherwise the battery will be seriously depleted.
- * Do not turn on the microphones while they are charging.
- * When the microphone is turned on, Do not point the microphone to the machine straightly to avoid howling.

 
PRODUCT CONTENTS




1 x Karaoke Machine



2 x Rechargeable
Wireless Microphones

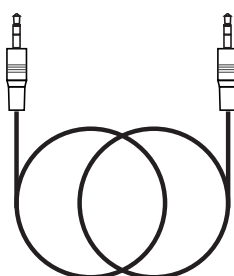

1 x 3.5 mm AUX Cable

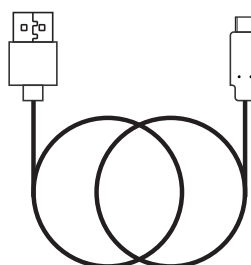 

1 x Charging Cable for
Karaoke Machine



1 x Sticker



 
1 x Shoulder strap



1 x User Manual

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at us-karaoke-218@eitack.com

SPEAKER DESCRIPTION

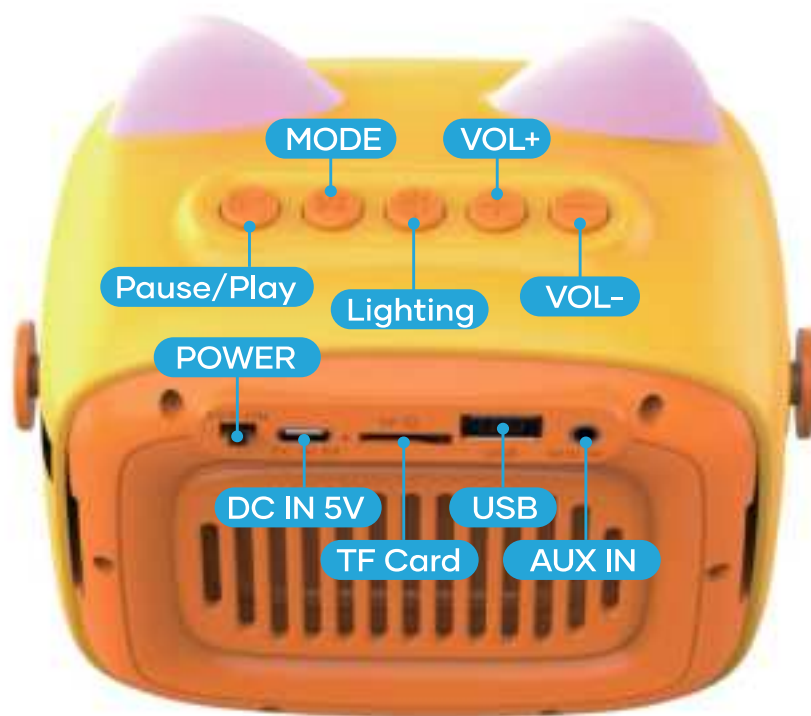

- ① Short press to pause/play
- ② Long press to forcibly disconnect the connected Bluetooth



Short press to switch playback mode: Bluetooth/AUX/USB/SD



- ① Short press to change the lighting effect
- ② Long press to turn on/off the light




- ① Short press to increase the volume of the karaoke machine
- ② Long press to switch to the next song



- ① Short press to decrease the volume of the karaoke machine
- ② Long press to switch to the previous song


NOTE:

- ① The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.
- ② When the speaker battery is low, It will make a sound.
- ③ Long press  to forcibly disconnect the connected Bluetooth.

Instructions for Use

As you power on, Bluetooth mode is the default. You could search for the Bluetooth device named" BIGASUO KA218" on your phone/iPad for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the USB. It will be converted to AUX mode when you insert the AUX cable. When inserting the TF card and USB at the same time, press the "MODE" button to switch modes.

Singing Instruction

1. When the karaoke speaker is turned on, the wireless microphone is connected to the karaoke speaker by default after it is turned on.
2. Short press the microphone's bottom  to change the original voice to a voice with different characteristics.
3. When using the mobile phone/tablet to play music, the volume of the karaoke speaker can also be adjusted through the mobile phone/tablet.
4. The volume is adjusted according to your personal preference to achieve the desired singing effect.

NOTE:

When using the Karaoke machine, you can tuck the microphone strap into the back of the karaoke machine.



MICROPHONE DESCRIPTION



Long press to turn on/off the microphone



Short press to increase the volume of the microphone



Short press to decrease the volume of the microphone



Short press to change the original voice to a voice with different characteristics

DETAILED USAGE GUIDE

How to charge the machine?

Use the included charging cable to plug into the DC 5V charging port on the top panel of the speaker to charge.

How to charge the microphones?

Use the included charging cable to plug into the DC 5V charging port on the bottom of the microphone to charge.

How to connect to Bluetooth?

Open the Bluetooth connection settings of the playback device, just search for the machine name "BIGASUO KA218" and click connect. When the speaker is not in Bluetooth mode, press the "MODE" button to switch the playback option to Bluetooth.

How to use SD mode?

Insert the TF card (according to the direction of the icon) into the TF card slot on the top panel of the machine. The playback will start immediately.

How to start AUX mode? (Playing music from an AUX-compatible device like MP3 Player, Phone, or TV)

Plug the AUX cable into the designated slot on the top of the machine to activate AUX mode. Then, plug the other end of the adapter into the designated inputs on your device and play music.

How to use USB mode? (Playing music from a USB drive)

Plug a USB stick into the USB port on the top of the machine and your music will begin playing automatically.

How to clean?

Turn the machine and microphones off and unplug them from the charging adapter. Gently wipe the outside of the machine using a clean dry cloth. Keep all vents, buttons, and openings free of lint and dirt. Do not immerse the machine in water and do not use any harsh cleaners.

How to store?

Charge the machine and microphones so that they are ready for next use.

Make sure that the machine is clean and dry.

Store the machine in a cool dry place away from damaging machine parts.

PRODUCT ATTRIBUTES

Power input	TYPE-C 5V /2A
Bluetooth transmission distance	10 meters
Support interface	TYPE-C charging port, USB multimedia interface,TF card multimedia interface,AUX audio interface
Materials	Plastic 、 Metal

FAQ

Questions	Solution
How to judge karaoke machine and microphone are fully charged?	The charging indicator light will be red when charging, and the indicator light will be off when it is fully charged.
The microphone will not turn on.	Charge before use.
The machine will not turn on.	The battery power is exhausted, use it after charging, and be sure to charge the machine after each use.
The speaker volume is too low.	You can increase the volume of your music with the speaker's volume button. In addition, the volume of the device connected to the speaker will also affect the sound of the music. You can increase the volume of the playback device to achieve the effect of improving the sound. If the situation cannot be resolved after trying, please contact us in time.

- * If any of these issues persist or if any part of the machine becomes damaged, discontinue use and consult a licensed electrician for repair.
- * Do not attempt to modify or repair the machine yourself. If you have any problem with the product, please don't hesitate to email us at:
us-karaoke-218@eitack.com
 We will reply to you within 24 hours and give you the best solution.

FCC WARNING STATEMENT

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID : 2ATFT-KA218

Kids Karaoke Machine

USER MANUAL

Model:KA218