

Handheld Computer





User's Manual

Version 0.1



Revision History

Date	Change Description	Version
	first published version	1.0



Preface

About This Manual

Thank you for purchasing the unitech product.

This manual explains how to install, operate and maintain our product. No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, such as photocopying, recording, or information storage and retrieval systems, without permission in writing from the manufacturer. The material in this manual is subject to change without notice.

Regulatory Compliance Statements



FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- –Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- 1. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2. This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure requirements, avoid direct contact to the transmitting antenna during transmitting.
- 3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Operation on the 5.15 - 5.25GHz frequency band is restricted to indoor use only. The FCC requires indoor use for the 5.15-5.25GHz band to reduce the potential for harmful interference to co-channel Mobile Satellite Systems. Therefore, it will only transmit on the 5.25-5.35 GHz, 5.47-5.725 GHz and 5.725–5.850 GHz band when associated with an access point (AP).

FCC Label Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

RF Radiation Exposure Statement

For body contact during operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 0.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.



Canadian Compliance Statement

This Class B Digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numerique de la classe B respecte les exigences du Reglement sur le material broilleur du Canada.

European Conformity Statement

unitech Electronics co., Ltd herewith declares that the unitech product is in compliance with the essential requirements and all other provisions of the RED 2014/53/EU directive, the EMC 2014/30/EU directive and the Low Voltage 2014/35/EU directive.

The declaration of conformity is available for download at : https://portal.unitech.eu/public/Safetyregulatorystatement

CE RF Exposure Compliance

This device meets EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection. For body-worn operation, this device has been tested and meets the ICNIRP guidelines and the European Standard EN 62209-2, for use with dedicated accessories, SAR is measured with this device at a separation of 0.5 cm to the body, while transmitting at the highest certified output power level in all frequency bands of this device. Use of other accessories which contain metals may not ensure compliance with ICNIRP exposure guidelines.

CE Mark Warning



This equipment complies with the requirements of Directive 2014/53/EU of the European Parliament and Commission from 24 May, 2014 governing Radio and Telecommunications Equipment and mutual recognition of conformity.



RoHS Statement



This device conforms to RoHS (Restriction Of Hazardous Substances) European Union regulations that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

Waste electrical and electronic equipment (WEEE)



unitech has set up a policy and process to meet the EU directive 2002/96/EC and update 2003/108/EC concerning electronic waste disposal.

For more detailed information of the electronic waste disposal of the products you have purchased from unitech directly or via unitech's resellers, you shall either contact your local supplier or visit us at: https://portal.unitech.eu/public/WEEE



Taiwan NCC Warning Statement

低功率電波輻射性電機管理辦法

第十二條:經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者 均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條:低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有 干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。

前項合法通信,指依電信法規定作業之無線電通信。

低功率射頻電機需忍受合法通信或工業、科學及醫療用電波輻射性電機設備 之干擾。

注意事項:

- 1. 使用過度恐傷害視力。
- 2. 使用30分鐘請休息10分鐘;2歲以下幼兒不看螢幕,2歲以上每天看螢幕不要超過 1小時。
- 3. 減少電磁波影響,請妥適使用。



Laser Information

The unitech product is certified in the U.S. to conform to the requirements of DHHS/CDRH 21CFR Subchapter J and to the requirements of IEC 60825-1. Class II and Class 2 products are not considered to be hazardous. The unitech product contains internally a Visible Laser Diode (VLD) whose emissions do not exceed the maximum limits as set forth in the above regulations. The scanner is designed so that there is no human access to harmful laser light during normal operation, user maintenance or prescribed service operations.

The laser safety warning label required by the DHHS/IEC for the unitech product's optional laser scanner module is located on the memory compartment cover, on the back of the unit.

* Laser information only applies to the products with laser components.

CAUTION! Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light. Use of optical instruments with the scanner, including binoculars, microscopes, and magnifying glasses, with will increase eye damage. This does not include eyeglasses worn by the user.

LED Information

The unitech product contains LED indicator(s) or LED ring whose luminance is not harmful to human eyes during normal operation, user maintenance or prescribed service operations.

*LED information only applies to the products with LED components.



Battery Notice

- To guarantee optimal performance, it is recommended that rechargeable batteries be replaced every year, or after 500 charging cycles are completed. It is normal for the battery to balloon or expand after one year or 500 cycles. Although it does not cause damage, it cannot be used again and must be disposed of according to the location's safe battery disposal procedures.
- If a battery performance decreases more than 20%, the battery is at the end of its life cycle. Stop use and ensure the battery is disposed of properly.
- 3. The length of time that a battery lasts depends on the battery type and how the device is used. Conserve the battery life by doing the following:
 - Avoid fully uncharging the battery because this places additional strain on it. Several partial uncharges with frequent charges are better than a fully uncharged battery. Charging a partially charged battery does not cause harm to the unit.
 - Keep the battery cool. Avoid hot vehicles. For prolonged storage, keep the battery at a 40% charge level.
 - Do not leave the battery uncharged and unused for an extended period of time, the battery will wear out and the longevity of the battery will be at least half of one with frequent charges.
- 4. Protect battery life by not over or under charging the battery.
- 5. Please do not leave battery unused for long time without charging it. Despite unitech's safety precautions, the battery pack may begin to change shape. If so, stop using it immediately. Please check to see if you are using a proper power adapter to charge the battery or contact your service provider for service.
- If you cannot charge the battery after it has been idle for an extended period of time and it begins to heat up, please do not try to charge it. It may not be functional anymore.
- 7. Please only use the original battery from unitech. Using a third party battery can damage our products. Please note that when such damage occurs, it is not covered by unitech's warranty policy.



CAUTION!

- RISK OF EXPLOSION IF BATTERY IS REPLACED INCORRECTLY.
 DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- 如果更換不正確之電池行事會有爆炸的風險 請依製造商說明書處理用過之電池
- 如果更换不正确之电池行事会有爆炸的风险 请依制造商说明书处理用过之电池

Battery charge notice

It is important to consider temperature when the battery pack is charging. Charging is most efficient at normal room temperature or in a slightly cooler environment. It is essential that batteries are charged within the stated range of 0°C to 40°C. Charging batteries outside of the specified range could damage the batteries and shorten their life cycle.

CAUTION! Do not charge batteries at a temperature lower than 0°C. This will make the batteries unstable and dangerous. Please use a battery temperature detecting device for a charger to ensure a safe charging temperature range.

CAUTION! To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.

CAUTION! If the connector is damaged, please ensure the connector is being fully repaired before use the unit to avoid causing short circuited.



Storage and safety notice

Although charged batteries may be left unused for several months, their capacity may be depleted due to build up ofinternal resistance. If this happens, they will require recharging prior to use. Batteries may be stored at temperatures between -20°C to 60°C, however they may deplete more rapidly at higher temperatures. It is recommended to store batteries at room temperature.

* The message above only applies to the usage of the removable batteries.

For the products with non-removable batteries / without batteries, please refer to the specification of each product.

Product Operation and Storage Notice

The unitech product has applicable operation and storage temperature conditions. Please follow the limitation of suggested temperature conditions to avoid failure, damage or malfunction.

*For applicable temperature conditions, please refer to the specification of each product.

Adapter Notice

- 1. Please do not leave the power adapter in the socket when it is not connected to your unitech product for charging.
- 2. Please remove the power adapter when the battery is fully recharged.
- The bundled power adapter that comes with your unitech product is not meant to be used outdoors. An adapter exposed to water or rain, or a very humid environment can cause damage to both the adapter and the product.
- 4. Please only use the bundled power adapter or same specification of adapter to charge your unitech product. Using the wrong power adapter can damage your unitech product.

^{*} The message above only applies to the product connected to the adapter.

For the products without using the adapters, please refer to the specification of each product.



Hearing Damage Warning

Zx.3 Warning

The warning shall be placed on the equipment, or on the packaging, or in the instruction manual and shall consist of the following:

- the symbol of Figure 1 with a minimum height of 5 mm; and
- the following wording, or similar:

To prevent possible hearing damage, do not listen at high volume levels for long periods.



Figure 1 - Warning label (IEC 60417-6044

Alternatively, the entire warning may be given through the equipment display during use, when the user is asked to acknowledge activation of the higher level.



Worldwide Support

unitech's professional support team is available to quickly answer questions or assist with technical-related issues. Should an equipment problem occur, please contact the nearest unitech regional service representative. For complete contact information please visit the Web sites listed below:

Tel: +886-2-89121122 E-mail: info@hq.ute.com Address: 5F, No. 136, Lane 235, Baoqiao Road, Xindian District, New Taipei City 231, Taiwan (R.O.C.) Website: http://www.ute.com Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Website: http://cn.ute.com Website: http://cn.ute.com Asia & Pacific / Middle East E-mail: info@apac.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://apac.ute.com / http://mideast.ute.com Website: http://alatin.ute.com http://alatin.ute.com http://alatin.ute.com http://alatin.ute.com	Taipei. Tai	wan – Headquarters	Europe	
Address: 5F, No. 136, Lane 235, Baoqiao Road, Xindian District, New Taipei City 231, Taiwan (R.O.C.) Website: http://www.ute.com Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan, China Website: http://cn.ute.com Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: 4F, No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@us.ute.com / info@us.ute.com / info@us.ute.com / info@us.ute.com / Address: 6182 Katella Ave, Cypress, CA 90630, USA Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Tel: +81-3-35232766 E-mail: info@jp.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 B, Telled, and the picker in	•	•	•	+31-13-4609292
District, New Taipei City 231, Taiwan (R.O.C.) Website: http://www.ute.com Tilburg, the Netherlands http://eu.ute.com Tilburg, the Netherlands http://eu.ute.com Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan, China Website: http://cn.ute.com Address: Kayabacho Nagaoka Building 8F.,1-5-19 Shinkawa, Chuo-Ku, Tokyo, 104-0033, Japan Website: http://jp.ute.com Asia & Pacific / Middle East Latin America Tel: +886-2-27911556 E-mail: info@apac.ute.com info@india.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Website: http://latin.ute.com Mebsite: http://latin.ute.com North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	E-mail:	info@hq.ute.com	E-mail:	info@eu.ute.com
Website: http://www.ute.com Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan, China Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://mideast.ute.com Website: http://japac.ute.com Address: 4F. 714-8916400 E-mail: info@us.ute.com / inf	Address:	5F, No. 136, Lane 235, Baoqiao Road, Xindian	Address:	Kapitein Hatterasstraat 19, 5015 BB,
Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Website: http://jp.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com info@india.ute.com info@mideast.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com / http://mideast.ute.com Website: http://apac.ute.com / http://mideast.ute.com Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA		District, New Taipei City 231, Taiwan (R.O.C.)		Tilburg, the Netherlands
Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: Latin America Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: 4F, No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	Website:	http://www.ute.com	Website:	http://eu.ute.com
E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: Latin America Tel: +52-55-5171-0528 E-mail: info@apac.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America E-mail: info@jp.ute.com Address: Kayabacho Nagaoka Building 8F.,1-5-19 Shinkawa, Chuo-Ku, Tokyo, 104-0033, Japan Website: http://jp.ute.com Tel: +52-55-5171-0528 E-mail: info@latin.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Website: http://latin.ute.com North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	China		Japan	
Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan, China Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Kayabacho Nagaoka Building 8F.,1-5-19 Shinkawa, Chuo-Ku, Tokyo, 104-0033, Japan Website: http://jp.ute.com Latin America Tel: +52-55-5171-0528 E-mail: info@latin.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Website: http://latin.ute.com Please scan QR Code to visit us:	Tel:	+86-59-2310-9966	Tel:	+81-3-35232766
Xinfeng 3nd Road, Huoju Hi-tech District, Xiamen, Fujan , China Website: http://cn.ute.com Website: http://jp.ute.com Website: http://jp.ute.com Website: http://jp.ute.com Mebsite: http://jp.ute.com Website: http://jp.ute.com Asia & Pacific / Middle East Latin America Tel: +52-55-5171-0528 E-mail: info@apac.ute.com info@apac.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Houston, TX 77084USA (Rep.) Website: http://latin.ute.com Website: http://latin.ute.com Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	E-mail:	info@cn.ute.com	E-mail:	info@jp.ute.com
Xiamen, Fujan , China Website: http://cn.ute.com Website: http://jp.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com	Address:	Room401C, 4F, RIHUA International Mansion,	Address:	Kayabacho Nagaoka Building 8F.,1-5-19
Website: http://cn.ute.com Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com		Xinfeng 3nd Road, Huoju Hi-tech District,		Shinkawa, Chuo-Ku,
Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@apac.ute.com		Xiamen, Fujan , China		Tokyo, 104-0033, Japan
Tel: +886-2-27911556 E-mail: info@apac.ute.com info@india.ute.com info@mideast.ute.com Address: 17171 Park Row, Suite 210 Houston, TX 77084USA (Rep.) Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	Website:	http://cn.ute.com	Website:	http://jp.ute.com
E-mail: info@apac.ute.com info@india.ute.com info@mideast.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com / http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@latin.ute.com Houston, TX 77084USA (Rep.) Website: http://latin.ute.com Please scan QR Code to visit us:	Asia & Pa	cific / Middle East	Latin America	
info@india.ute.com info@mideast.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://apac.ute.com/ Website: http://latin.ute.com North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	Tel:	+886-2-27911556	Tel:	+52-55-5171-0528
info@mideast.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei,Taiwan Website: http://mideast.ute.com North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	E-mail:	info@apac.ute.com	E-mail:	info@latin.ute.com
Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://mideast.ute.com North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA		info@india.ute.com	Address:	17171 Park Row, Suite 210
NeiHu Chiu, 114, Taipei, Taiwan Website: http://mideast.ute.com/ North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com/ info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA		info@mideast.ute.com		Houston, TX 77084USA (Rep.)
Website: http://mideast.ute.com North America Please scan QR Code to visit us: Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	Address:	4F., No. 236, ShinHu 2nd Rd.,	Website:	http://latin.ute.com
North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA		NeiHu Chiu, 114, Taipei,Taiwan		
Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	Website:	http://apac.ute.com / http://mideast.ute.com		
E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA	North America		Please sca	an QR Code to visit us :
Address: 6182 Katella Ave, Cypress, CA 90630, USA	Tel:	+1-714-8916400		
	E-mail:	info@us.ute.com / info@can.ute.com		100 (100 (100 (100 (100 (100 (100 (100
Website: http://us.ute.com	Address:	6182 Katella Ave, Cypress, CA 90630, USA		
	Website:	http://us.ute.com		EED WAR



Warranty Policy

The following items covered under the unitech Limited Warranty are free from defects during normal use:

The warranty period is varied from each country. Please consult with your supplier or unitech local office for actual length of warranty period to your purchased product.

Warranty becomes void if equipment is modified, improperly installed or used, damaged by accident or neglect, or if any parts are improperly installed or replaced by the user.



Table of Contents

Preface	i
Regulatory Compliance Statements	i
Laser Information	vi
LED Information	vi
Battery Notice	vii
Adapter Notice	ix
Hearing Damage Warning	x
Worldwide Support	x
Warranty Policy	xii
Chapter 1 - Overview	1
1.1 Package	1
1.2 Product Detail	2
1.3 Specifications	4
1.4 Getting Started	6
1.5 Keypads Definition	10
1.6 HT1 Launcher	14
Chapter 2 - Installation & Operation	16
2.1 Barcode Setting	16
2.2 HF Setting	19
2.3 UHF Setting	19
2.4 MSR Setting	19
2.5 WWAN Setting	19
2.6 WLAN Setting	20
2.7 PAN Setting	21
2.8 GPS Setting	22
2.9 PC Setting	22
2.10 Performing Factory data reset	23
2.11 Programmable Keys	24
Chapter 3 - Introduction to Applications	25
xiii	



3.1 Scan Service	25
3.2 File Manager	29
3.3 Update Center	30
3.4 Sound Recorder	31
3.5 MoboLink	32





Chapter 1 - Overview

1.1 Package

Please make sure the following contents are in the HT1 gift box. If something is missing or damaged, please contact your unitech representative.

Package contents with single slot cradle

- HT1 Handheld Computer
- Battery
- Wrist Strap
- Quick Start Guide
- QR Code Card
- USB Cable
- Single Slot Cradle + Cradle Adapter
- Regulatory Compliance Statements


Package contents without single slot cradle

- HT1 Handheld Computer
- Battery
- Wrist Strap
- Quick Start Guide
- USB Cable
- Plugs + Adapter
- Regulatory Compliance Statements



1.2 Product Detail


HT1 Front View

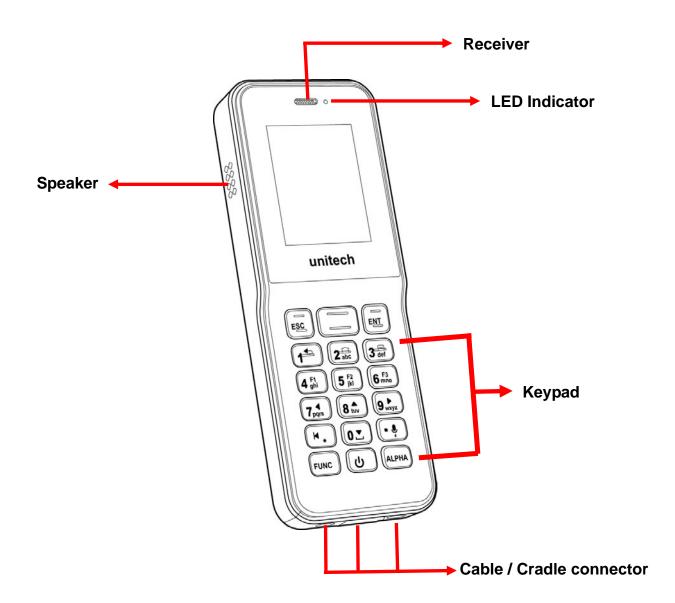





HT1 Rear View

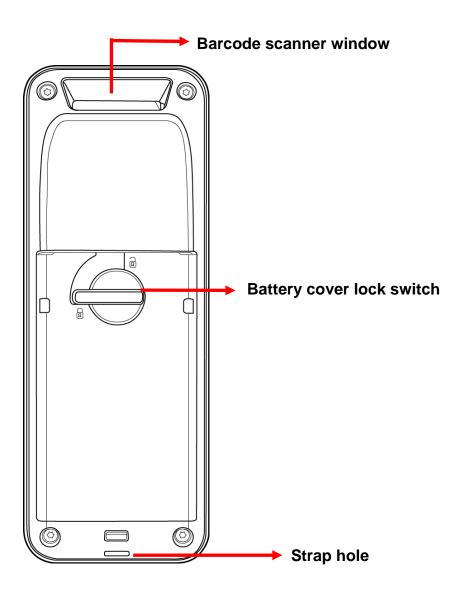





1.3 Specifications

System Features		
CPU	Freescale iMx6 1.2GHz	
Memory	1GB DDR2	
	4GB eMMC	
os	Android 4.4.3	
Languages Support	English, Simplified Chines e, Traditional Chinese,	
	Japanese, Spanish, German, French and multiple	
	languages	
Display		
2" TFT 240X320 LCD		
Keypad		
10 numeric keys, scan keys,	Alpha / Power (on/off) / Enter key, 4 function keys	
Indicator		
Green and Red LED located	above LCD	
Vibrator		
Symbologies		
2D Imager: All major codes		
1D PDF417, MicroPDF417, Composite, RSS,TLC-3		
2D Datamatrix, QR code, Micro QR code, Aztec, MaxiCo		
	Postal Codes: US PostNet, US Planet, UK Postal, Australian	
	Postal, Japan Postal Dutch Postal (KIX)	
Audio		
Speaker & MIC		
Interface		
USB	Micro USB connector	
	(OTG interface, have USB Client and USB Host function)	
PoGo	PoGo pin for charging	
Communication		
WLAN	IEEE 802.11 a/b/g/n	
PAN	Bluetooth	



HT1 User's Manual

Power Source		
Battery	Li-ion battery Detachable with back cover all in one	
Capacity	1100mAh	
Enclosure		
Weight	170g	
Dimension	147.8(L) x 53.8(W) x 30.31(H)	
Environmental		
Operating temperature	14°F to 122°F (-10°C to 50°C)	
Operating humidity	20%~85%	
Storage temp.	-22°F to 158°F (-30°C to 70°C)	
Storage humidity	20%~85%	
Drop test to Concrete	1.5m	
Environmental Sealing	IP54	
Vibration	During operation: 0.5G, 3 to 100Hz, 1 min sweep, during 15min, 3 direction	
	Non-operation: 1.5G, 5 to 55Hz, 1min sweep, during 120min, 3 direction	
	Non-operation: 1.5G, 5 to 1000Hz, 1min sweep, during 15min, 3 direction	
Magnetic field	1gauss	
EMC	Air discharge: 16kV	
	Direct discharge: 9KV	
Regulatory Approvals		
CE, FCC, BSMI, PSE		

NOTE:

Requirements in

 
AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/UK/HR. 5150MHz~5350MHz is for indoor use only.




1.4 Getting Started

1.4.1 Installing the Battery

Turn the switch left to lock the battery cover.
 Turn the switch up to unlock the battery cover.

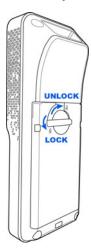

2. You can take the battery out directly.

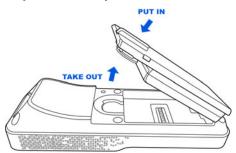

NOTE: Please make sure the battery cover is securely closed, or you may be unable to turn ON the terminal.

WARNING! There is a risk of fire and burns if the battery pack is handled improperly.

DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery pack.

Dispose of used batteries according to local recycling guidelines in your area.





1.4.2 Charging the Battery

Before you turn on and start using this device, it is recommended that you charge the battery.


If the battery has been discharged for several days, you may need to charge for several minutes before powering it on.

Use only the adapter and the USB cable that came with this device to charge the battery. When the battery power is too low, make sure to use the power adapter or put into the cradle to charge.

Charge with USB

Connect the micro USB cable to the USB port at the bottom of HT1 and plug into your PC's USB port to simultaneously charge the HT1. Or plug the AC power adapter into the electrical outlet on the USB plug.

Note: AC power adapter is included in the package without cradle.

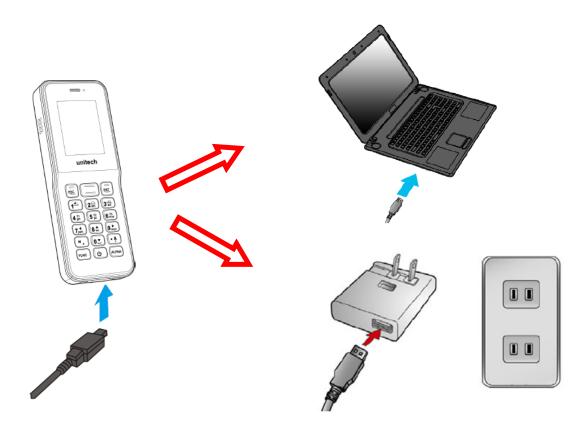






■ Charge with cradle (Highly recommended)

- 1. Plug the AC adapter cable into the power jack on the cradle, and then connect the AC adapter into an electrical outlet.
- 2. Slide the device into the cradle until it clicks in place.

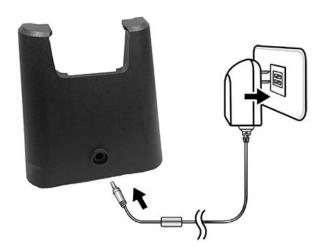





1.4.3 Turning on the terminal for the first time

After you have initially charged your device for about 24 hours, the device is ready to be used. You can now start up your device. You can then set up the languages, WiFi setting, and date and time.

Press the key once, it will appear a blue symbol the status bar at the top of the screen. Then you can refer to the following table to execute the desired function or input. Please refer to 1.5.1 Using Function keys.

Power-On Button

Turn ON your device by pressing the power button of the terminal.

1.4.4 Checking the LED status

	Status	LED	Description
Terminal Message Power	Magaga	Red light	Scanning
	Green light	Good Read	
	Red light	Charging	
	Power	Green light	Fully Charged

Checking the Battery Status

If the battery level becomes low in the course of normal use, a status icon appears on the device screen indicating low or very low battery status. In both cases, connect PC with USB to back up your data, and then recharge your device as soon as possible.





1.5 Keypads Definition



Keys	Description
O	Power key
ENT	Enter key
ALPHA	Alpha key
FUNC	Function key
	Trigger Key
ESC	Escape Key
0 <u> </u> ~	Alphanumeric keys
(H *	Back Key



1.5.1 Using Function keys

Press the key once, it will appear a blue symbol in the status bar at the top of the screen. Then you can refer to the following table to execute the desired function or input.

Keys	Description
	Return
2 abc	Home
3 def	Menu
4 F1 ghi	Programmable key F1
5 F2 jkl	Programmable key F2
6 mno	Programmable key F3
7 d pages	Left cursor key
8 tuv	Up cursor key
9 wxyz	Right cursor key
0.7	Down cursor key
. į	Google voice





1.5.2 Keypad Combination

The following table indicates how to quickly execute useful functions using numeric keypad combination. Press and hold the key, and then press the corresponding key to execute the desired function.

Key	Description
FUNC +	Kovnad hacklight toggling
FUNC +	Keypad backlight toggling
FUNC + D	Increase screen backlight brightness
FUNC +	Decrease screen backlight brightness
FUNC + W.	Scan Service



1.5.3 Using Alpha keys

Press the key, it will appear a red symbol in the status bar at the top of the screen. Then you can refer to the following table to execute the desired function or input.

	Alpha On		On
Key	Alpha Off	CAPS Off	CAPS On AB
0.7	0	Space	Space
	1	1	1
2 abc	2	a, b, c, 2	A, B, C, 2
3 def	3	d, e, f, 3	D, E, F, 3
4 F1 ghi	4	g, h, i, 4	G, H, I, 4
5 F2 jkl	5	j, k, l, 5	J, K, L, 5
6 mno	6	m, n, o, 6	M, N, O, 6
7 d	7	p, q, r, 7	P, Q, R, 7
8 tuv	8	t, u, v, 8	T, U, V, 8
9 b wxyz	9	w, x, y, z, 9	W, X, Y, Z, 9
	#	#	#
(N.)	Back Key	*	*





1.6 HT1 Launcher

HT1 launcher makes the apps bigger and clear on the screen which allows users to access any app they want more easily.

Here is the introduction of the main menu.




FUNC key	Press FUNC key to move Left / right /up/down or select options on a menu.
Enter key	Enter or execute a command or apps on a menu.
AB / ab ALPHA key	Input words or commands.





1.6.1 Home Key

When press home key, there are items pop up from the menu such as Reboot, Settings and Applications. To select the related option, please press **ENT** key to enter the option.

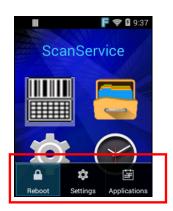





Chapter 2 - Installation & Operation

2.1 Barcode Setting

Go to ScanService, press ENT key.



2. You are now enter the **ScanService** application:

There are three main items : **Settings, Test and Version.**



2.1.1 Settings

Choose the default barcode symbologies for a different application.









2.1.1.1 For Save / Load Settings, and Factory Default section

To save data, Please go to and then select **Save / Load Settings**, press **ENT** key to enter the next section.

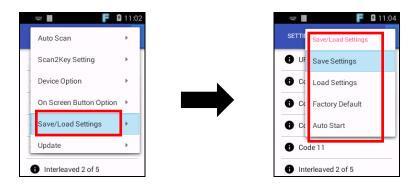

Please select Save Settings – input path - OK

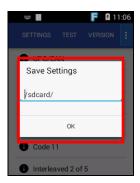


The save setting data is stored in File Manager. (Please see 3.2 File Manager)





2.1.2 Test

Scanned data information / Save / Clear all scanned data

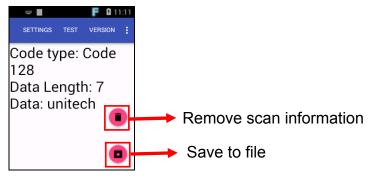


2.1.3 Version

Show the recent version of ScanService



2.1.2 More Options

For more options and settings, please go to :

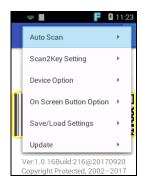





2.2 HF Setting

Current model is not available.

2.3 UHF Setting

Current model is not available.

2.4 MSR Setting

Current model is not available.

2.5 WWAN Setting

Current model is not available.



2.6 WLAN Setting


1. Go to **Settings** and press **ENG** key.



2. In Wireless & networks section, Select **Wi-Fi**. To see available networks, turn Wi-Fi **ON**. And choose the available networks



3. Choose the available networks, and enter the Password and choose **Connect.**

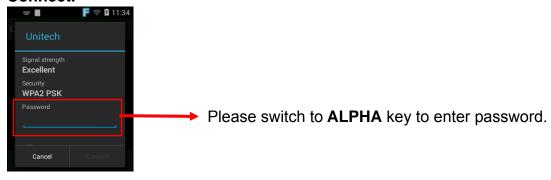



2.7 PAN Setting

1. Go to **Settings** and press **ENG** key.



2. In Wireless & networks section, Select **Bluetooth**.



- 3. Turn Bluetooth on to see a list of available devices.
- 4. To pair the available device, choose the available device.



5. When enabled, the Bluetooth icon is displayed in the status bar.




2.8 GPS Setting

Current model is not available.

2.9 PC Setting

1. Connect the USB charging cable to the USB port of the PC device.

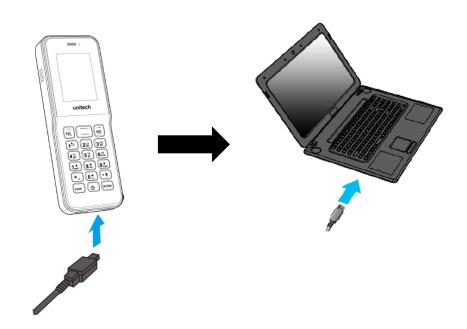

2. After connecting HT1 to PC with USB, you can find a removable storage on **my computer**.




2.10 Performing Factory data reset

1. Go to **Settings** and press **ENG** key.



2. Go to **Backup & reset**, select **Factory data reset**, it will erase all data from the device.

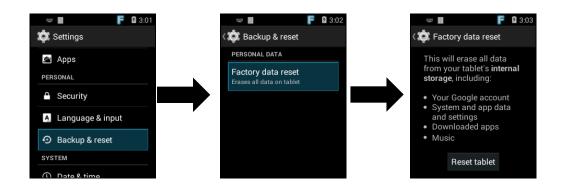





2.11 Programmable Keys





Chapter 3 - Introduction toApplications

3.1 Scan Service

Go to ScanService, press ENT key.




2. You are now enter the **ScanService** application. Choose **Test** to start scanning barcodes.








3. Aim the Barcode Scanner Window to the barcode and press trigger button.

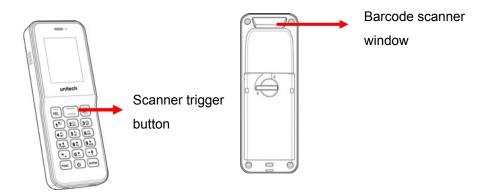

4. After scanning the barcodes, the barcode information is as shown below. Scanned data information / Save / Clear all scanned data

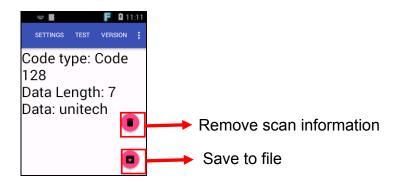







3.1.1 More Options


For more options and settings, please go to

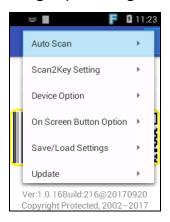


Auto Scan

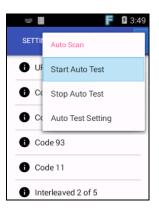


■ Scan2Key Setting

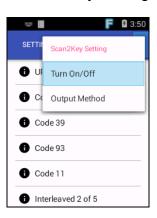


■ Device Option

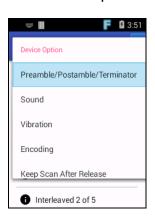

On Screen Button Option

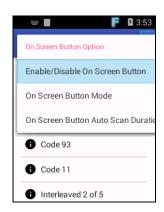

■ Save/ Load Settings

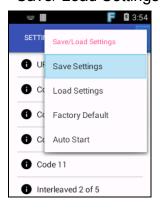

Update







3.1.2 Multi Decode Scan

Multi decode scan function allows users to scan multiple barcodes at once.

- 1. Go to **Settings**, Choose **Scanner Options**, press **ENT** key.
- 2. Enable **Multi Decode Mode**, and input the barcode decode count, back to **Test** screen and start multi decode scan.




For video demonstration, please go to unitech youtube channel : https://youtu.be/coJ6y0hqT9c



3.2 File Manager

1. Go to File Manager, press ENT key.

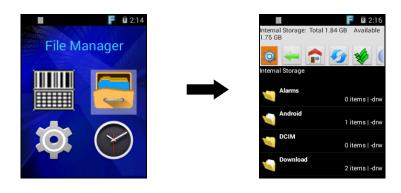

Settings

🔲 : Return to the previous page

: Main page

: Refresh

: Folder arrangement

: Folder Information




3.3 Update Center

1. Go to **Update Center**, press **ENT** key.



2. To update or check the latest version of software and applications, you will need to do it manually.

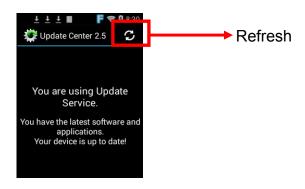




3.4 Sound Recorder

Go to Sound Recorder, press ENT key.



2. You can start recording your message.

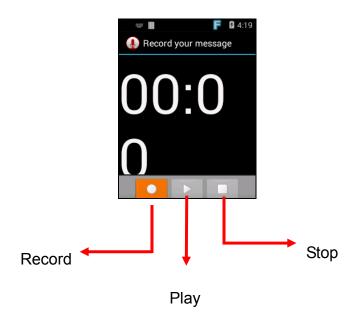




3.5 MoboLink

MoboLink is a software platform that helps unitech customers to remote manage their purchased devices and applications. The core of the MoboLink platform provides functionalities in the MDM (Mobile Device Management) and MAM (Mobile Application Management) domains, and then further extends into other management functions such as alert notification management and account management.

1. Go to MoboLink, press ENT key.




2. MoboLink setting is as shown below:

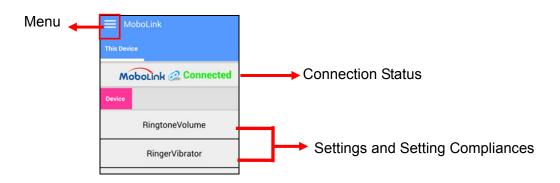






3. Choose , go to Settings.

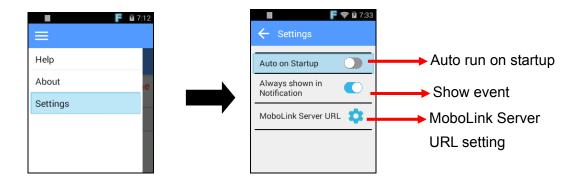

4. In the Settings section, go to **MoboLink Server URL** to setup MoboLink server URL.

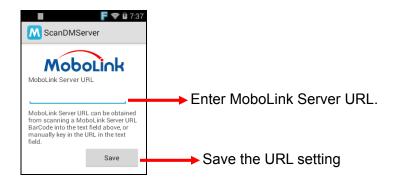

3.5.1 More about MoboLink

For detailed operation, solution and usage, please refer to **MoboLink** user's guide. (http://mobolink.tw.ute.com/support)