



AERO PRO

TRUE WIRELESS EARBUDS WITH CHARGING CASE



FCC ID: 2AAPKMA-3383

QUICK START GUIDE

GETTING STARTED

- ① Micro USB charging port
- ② Charging Case LED indicators
- ③ Charging Case Power Button
- ④ Left earbud LED indicator
- ⑤ Left control button
- ⑥ Right earbud LED indicator
- ⑦ Right control button

Ⓕ Left Earbud / Ⓖ Right Earbud
Pause/Play/End Call, Next Track



CHARGING YOUR CASE

- Charge on the go charging case, with the included micro USB cable for 2-3 hours. (LED (2A) will blink red)
Do not charge longer than suggested time. Do not charge overnight.
- When LED (2A) is illuminated solid red battery case is fully charged.



Charging LED Indicators



Flashing RED- Battery Case is charging
Solid RED- Battery Case is fully charged

Solid BLUE- Battery Case is charging earbuds
OFF- Battery Case is off



CHARGING YOUR EARBUDS



- Place Right and Left Earbuds in battery case charging cradle and press the power button on the battery case (3)
- Charging case LED indicator (2B) will illuminate Blue and the earbud LED indicators (4, 6) will illuminate Red, indicating that the earbuds are charging properly. When Earbuds LEDs (4, 6) turn solid blue, earbud batteries are fully charged.
- After earbuds are fully charged, press the charging case power button (3) to turn the charging case OFF.

MONOMODE (SINGLE EARBUDUSE)




- Remove earbud from charging cradle.
- Earbud will power on automatically. Led indicator begin flashing blue and red

STEREO MODE (DUAL EARBUD USE)



- Remove earbud from charging cradle.
- Earbuds will power on automatically. Led indicator on both earbuds will begin flashing blue indicating that the earbuds are linking together.
- Once Earbuds are linked together, one earbud's LED indicator will begin flashing blue and red indicating its ready to pair to your mobile device.

PAIRING

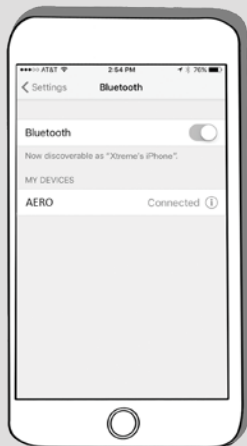

- Enable Bluetooth search mode on your mobile device and search for pairing name “AERO PRO” and select it on your mobile phone. Once the earbuds are successfully paired a notification will sound.
- Now you can enjoy your True Wireless Bluetooth Earbuds.

*Note: Once earbuds have been initially paired successfully with your mobile device they will automatically pair the next time they are powered on.

OPERATING BLUETOOTH EARBUDS

Function	Operation
Power On	Press (5) or (7) for 3 seconds
Power Off	Press (5) or (7) for 5 seconds
Play/Pause	Single press (5) or (7)
Answer/Reject	Answer (7) or Reject (5)

Earbuds	LED indications (4) & (6)
Power On	Red & Blue LED will flash alternately
Link Mode	Flashing Blue + Red
Paired Successfully	Flashing Blue
Low Battery	Flashing Red
Power Off	LED Off
Earbuds in Cradle	
Charging	Solid Red
Fully Charged	LED Off

Charging Case	See CHARGING YOUR CASE
---------------	------------------------



AERO PRO

ÉCOUTEURS STÉRÉO SANS FIL



GUIDE DE DÉMARRAGE RAPIDE

COMMENCER

- ① Port de chargement Micro USB
- ② Indicateurs LED du boîtier de charge
- ③ Bouton d'alimentation du boîtier de charge

- ④ Indicateur LED d'écouteur gauche
- ⑤ Bouton de contrôle gauche
- ⑥ Indicateur LED d'écouteur droit
- ⑦ Bouton de contrôle droit

L  couteur gauche / R  couteur droit
Pause / Lecture / Répondre à un appel, Piste suivante



CHARGER VOTRE BOÎTIER

- Chargez le boîtier de chargement, avec le câble micro-USB inclus pendant 2-3 heures. (LED (2A) clignotera en rouge)
Ne chargez pas plus longtemps que le temps suggéré. Ne pas charger pendant la nuit.
- Lorsque la DEL (2A) est allumée en rouge, le boîtier de la batterie est complètement chargé.



Indicateurs LED de charge

2A

Rouge clignotant - Le boîtier de la batterie est en charge
Rouge solide - Le boîtier de la batterie est complètement chargé

2B

Bleu solide - Le boîtier de la batterie charge les écouteurs
Éteint - Le boîtier de la batterie est éteint

CHARGER VOS ÉCOUTEURS



- Placez les écouteurs droit et gauche dans le boîtier de chargement de la batterie et appuyez sur le bouton d'alimentation du boîtier de la batterie (3)
- L'indicateur LED du boîtier de chargement (2B) s'allume en bleu et les voyants LED des écouteurs (4, 6) s'allument en rouge, indiquant que les écouteurs sont correctement chargés. Lorsque les voyants des écouteurs (4, 6) virent au bleu, les piles des écouteurs sont complètement chargées.
- Une fois les écouteurs sont complètement chargés, appuyez sur le bouton d'alimentation du boîtier de chargement (3) pour éteindre le chargeur.

MODE MONO (USAGE UNIQUE D'ÉCOUTEURS)




- Retirez l'écouteurs du socle de chargement.
- L'écouteur s'allume automatiquement. L'indicateur LED commence à clignoter en bleu et rouge

MODE STÉRÉO (DOUBLE USAGE DE L'ÉCOUTEURS)



- Retirez les deux écouteurs du socle de chargement
- Les écouteurs s'allument automatiquement. L'indicateur LED sur les deux écouteurs commencera à clignoter en bleu indiquant que les écouteurs se connectent ensemble.
- Une fois les écouteurs connectés, le voyant LED d'un écouteur commencera à clignoter en bleu et rouge indiquant qu'il est prêt à être couplé à votre appareil mobile.

L'APPARIEMENT

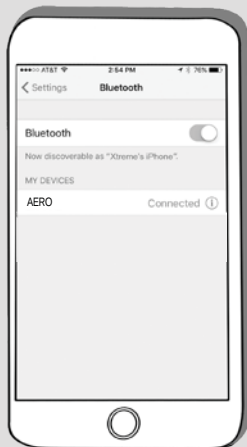

- Activer le mode de recherche Bluetooth sur votre appareil mobile et recherchez appairer le nom "AERO PRO" et sélectionner sur votre téléphone mobile. Une fois les écouteurs sont appariés une notification sonera.
- Maintenant, vous pouvez profiter de vos vrais écouteurs Bluetooth sans fil.

* Remarque: Une fois que les écouteurs ont été appariés avec votre appareil mobile, ils seront automatiquement appariés lors de la prochaine mise sous tension.

OPERATING BLUETOOTH EARBUDS

Fonction	Opération
Allumer	Appuyez sur (5) ou (7) pendant 3 secondes
Éteindre	Appuyez sur (5) ou (7) pendant 5 secondes
Jouer pause	Une seule presse (5) ou (7)
Répondre / Rejeter	Réponse (7) ou Rejet (5)

Écouteurs	Indications LED (4) & (6)
Allumer	
Mode lien	Clignotant Bleu + Rouge
Jumelé avec succès	Bleu clignotant
Batterie faible	Rouge clignotant
Éteindre	LED éteinte
Écouteurs à Cradle	
Charge	Rouge solide
Complètement chargé	LED éteinte

Boîtier de charge	Voir CHARGER VOTRE BOÎTIER
-------------------	----------------------------

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.