



Expressions used in this document

- The product illustrations may differ from the actual product.

English

A How to wear the earphones

B Parts and their functions

Main unit (Earphones)
(Earphones hereafter in the instructions)

- Left earphone (left)**
- Right earphone (right)**

- Touch sensor (left)
- Touch sensor (right)
 - Touching these enables you to perform a variety of operations.
(→ "Operating with the touch sensors")
- Call microphone
- Earpieces
- Recharging terminals
- Feed forward microphone
- Earphone LEDs *1, 2
- Driver port
- Raised dot indicating the left side

*1 Examples of earphone LED lighting/blinking patterns

Lighting alternately in blue and red	Bluetooth® pairing (registration) standby
Blinking slowly (blue)*3	Bluetooth® connection standby
Blinking twice about every 2 seconds (blue)*3	A Bluetooth® pairing (registration) has been established or a call is in progress
Blinking (blue)*3	A call is being received

*2 Refer to Step 2 in "Charging" about the earphone LEDs lighting and blinking pattern during charging.
*3 The battery is low when it is blinking in red. (→ "Battery level notification")

Main unit (charging case)
(Charging case hereafter in the instructions)

- Product Identification Marking
 - The product part number is shown on the Product Identification Marking.
- Terminal section
 - Do not touch the terminal section.
- Charging case LEDs
 - Refer to Step 2 in "Charging" about the earphone LEDs lighting and blinking pattern during charging.
- Recharging terminals
 - Connect the USB charging cord (supplied) when charging. (→ "Charging")

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Using the USB charging cord (supplied) to charge the earphones and the charging case

When the earphones have not been put into the charging case, the charging case itself is charged.

- AC adapter (sold separately)**
- Computer**
 - Turn on the computer.
- USB charging cord*1 (supplied)**
 - Use only the supplied USB charging cord when connecting to a computer.

1 Use the USB charging cord to connect the charging case to a computer or AC adapter (sold separately: DMW-AC9).

- Charging of the charging case starts.
 - The charging case LEDs light white while the charging case is charging, then turn off when charging is complete.

2 Put the earphones into the charging case.

- The way the LEDs light when you put the earphones into the charging case depend on the usage status.

Usage status	Earphone LED lighting/blinking patterns
Charging for the first time (after purchase)	The earphone LEDs light (red) about 8 seconds after you put earphones into the charging case.
Charging any time after the first time (When there is still battery charge)	When you put earphones into the charging case, the earphone LEDs light (red), then turn off. After approx. 3 seconds, the earphone LEDs light (red) again. If the earphone LEDs do not light (red) again, the earphones are fully charged.
When the batteries are depleted (When there is no battery charge at all)	The earphone LEDs light (red) about 5 seconds after you put earphones into the charging case.

3 Confirm that the earphone LEDs (red) have illuminated (charging starts)

- The earphones LEDs light (red) while the earphones are charging. Charging is complete when they turn off.
 - To charge the batteries from empty to full
 - It takes approximately 2 hours to charge the earphones
 - It takes approximately 2.5 hours to charge the charging case by itself
 - It takes approximately 4 hours to simultaneously charge the earphones and the charging case

D Turning the earphones on and off

- To turn the earphones on**
Take the earphones out of the charging case.
 - The earphones turn on.
 - A beep will sound and the earphone LED (blue)* blinks slowly.
 - Battery is low when it is blinking in red.
- To turn the earphones off**
Put the earphones into the charging case.
 - The way the LEDs light when you put the earphones into the charging case depend on the usage status. Refer to Step 2 in "Charging" for how they light.

E Connecting a Bluetooth® device

Preparation

- Move the Bluetooth® device to within approx. 1 m of the earphones.
- Refer to the operating instructions for your Bluetooth® device to confirm the operations as necessary.

Pairing (registering) your earphones with Bluetooth® devices

- Take the earphones out of the charging case.**
 - When pairing with a device for the first time:
 - This unit will start to search for a Bluetooth® device to connect to, and the earphone LEDs will light alternately in blue and red. (Approx. 3 seconds)
 - When pairing with a device after the first time:
 - While the earphone LEDs light (blue) (about 3 seconds), if you touch and hold the touch sensor (right) for 7 seconds, the earphone LEDs will light alternately in blue and red.
- Turn on the Bluetooth® device and enable the Bluetooth® function.**
- From the Bluetooth® menu of the device, select device name "EAH-AZ70W" (●).**
 - A MAC address (an alphanumeric character string that is displayed by and unique to the device) may be displayed before "EAH-AZ70W" is displayed.
 - If you are prompted to enter a password, enter four zeroes (0000), the password of the earphones.
 - When the earphone LEDs blink (blue)* twice at approximately 5 second intervals, pairing has been completed and connection has been established.
 - Battery is low when it is blinking in red.

Confirm that the earphones and the Bluetooth® device are connected.

Connecting with a paired Bluetooth® device

- Take the earphones out of the charging case.**
 - A beep will sound and the earphone LED (blue)* blinks slowly.
 - Battery is low when it is blinking in red.
- Do Steps 2 and 3 of "Pairing (registering) your earphones with Bluetooth® devices".**
- Confirm that the earphones and the Bluetooth® device are connected.**

F Using the earphones

Listening to music

- Connect the Bluetooth® device and the earphones. (→ "Connecting a Bluetooth® device")**
- Select the music or video on the Bluetooth® device and start playback.**
 - The earphones will output the music or the audio of the video being played back.
 - Operating time (may be shorter due to operating conditions):
 - The playback time is approximately 24 hours.

Operating with the touch sensors

List of operations available with the touch sensors

Function	Touch sensor (left)	Touch sensor (right)
Playback/pause	Touch once	Touch once
Raise the volume	Touch rapidly 3 times	—
Lower the volume	Touch rapidly 2 times	—
Forward a track	—	Touch rapidly 2 times
Back a track	—	Touch rapidly 3 times
Receive phone call	Touch once	Touch once
Reject a phone call	Touch and hold for about 2 seconds	Touch and hold for about 2 seconds
End a phone call	Touch once	Touch once
Change control of external sounds	—	Touch and hold for more than 2 seconds
Start the voice assistant	Touch and hold for about 0.5 seconds	—
Set to the Bluetooth® pairing mode	—	While the earphone LEDs light* (blue) (about 3 seconds), touch and hold for 7 seconds
Return to the factory settings	—	Touch and hold for about 10 seconds while in the pairing mode

* During the time when the earphone LEDs light (blue) after removing the earphones from the charging case

G To remove the battery when disposing of this unit

D Turning the power on/off

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilisées dans ce document

- Les illustrations de produit peuvent différer de l'apparence réelle du produit.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Français

A How to wear the earphones

For Noise cancelling
XXXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilisées dans ce document

- Les illustrations de produit peuvent différer de l'apparence réelle du produit.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

B Part names

- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX

* XX: Standby/ON

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilisées dans ce document

- Les illustrations de produit peuvent différer de l'apparence réelle du produit.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Expressions utilisées dans ce document

- Les illustrations de produit peuvent différer de l'apparence réelle du produit.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

B Part names

- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX

* XX: Standby/ON

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

B Part names

- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX

* XX: Standby/ON

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

B Part names

- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX
- XX

* XX: Standby/ON

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

Espanol

A How to wear the earphones

For Noise cancelling
XXXXX
XXXXXX

F Using the earphones
XXXXXXXXX

Listen to music

Remote controlling

Making a phone call

Making a phone call
NC

Ambient

C Charging

The rechargeable battery (installed in the unit) is not charged initially. Charge the battery before using the unit.

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Connect XXXXXX to a computer (●) using the USB charging cord (supplied) (●).

Activating voice functions

Restoring to the factory settings

G To remove the battery when disposing of this unit

Warning

Troubleshooting (→ Front page)

Expressions utilizadas en este documento

- Las ilustraciones de producto pueden diferir de la apariencia real del producto.

E Connecting a Bluetooth® device

Troubleshooting (→ Front page)

English

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
Other trademarks and trade names are those of their respective owners.

Siri is a trademark of Apple Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective developer companies.
Note that the ™ mark and ® mark do not appear in this document.

OS

- XXXXXXX
- XXXXXXX

Authentication information
XXXXXXXXXXXXX
Example:

Tentative

Français

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
Other trademarks and trade names are those of their respective owners.

Siri is a trademark of Apple Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective developer companies.
Note that the ™ mark and ® mark do not appear in this document.

OS

- XXXXXXX
- XXXXXXX

Authentication information
XXXXXXXXXXXXX
Example:

Tentative

Espanol

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
Other trademarks and trade names are those of their respective owners.

Siri is a trademark of Apple Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective developer companies.
Note that the ™ mark and ® mark do not appear in this document.

OS

- XXXXXXX
- XXXXXXX

Authentication information
XXXXXXXXXXXXX
Example:

Tentative

Espanol

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.
Other trademarks and trade names are those of their respective owners.

Siri is a trademark of Apple Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Other system names and product names appearing in this document are in general the registered trademarks or trademarks of the respective developer companies.
Note that the ™ mark and ® mark do not appear in this document.

OS

- XXXXXXX
- XXXXXXX

Authentication information
XXXXXXXXXXXXX
Example:

Tentative