



DB73 Product manual

Catalogue

● Security Information.....	1
● Introduction to Camera Components.....	2
● Installing batteries and charging.....	4
● Camera/Video Mode.....	5
● INFO main function menu.....	6
● Photo menu.....	7
● Video menu.....	8
● System Settings Menu.....	8
● Replay videos and photos.....	9
● Playback Menu.....	10
● APP.....	10
● Technical Specifications.....	11
● Fault problems and solutions.....	12
● Name and content of harmful substances in the product.....	13

Security Information

Before using this product, please read the following safety instructions and follow all routine safety precautions.

Any operation that does not comply with this manual may result in damage to this product.

Warning

 
If the battery is used improperly, it may explode, cause a fire, or even chemically burn. Please follow the following precautions:

1. Do not disassemble to avoid short circuiting the battery, do not let metal come into contact with battery terminals, do not crush the battery pack, and do not let the battery pack be subjected to external forces such as knocking, falling, or stepping.
2. Do not place it in high temperatures exceeding 60 degrees Celsius, avoid direct sunlight or park it in a car under intense sunlight.
3. Do not burn or discard in the fire; Do not use damaged or leaking lithium-ion batteries.
4. Please keep the battery out of reach of children; Please keep the battery dry.
5. When using the power adapter, please connect it to the nearest wall socket. If any problems occur while using the device, please immediately unplug the power adapter from the wall socket.

be careful

1. Electromagnetic waves of specific frequencies may affect image quality.
2. Before you start working with this product, please make a trial video to familiarize yourself with its use.
3. When the machine malfunctions, do not disassemble or repair it arbitrarily. Only authorized maintenance personnel can carry out repairs on the machine.
4. If not used for a long time, please charge the device to about 50% every three months before storing it to effectively extend the battery life, Please fully charge before use.

Introduction to Camera Components

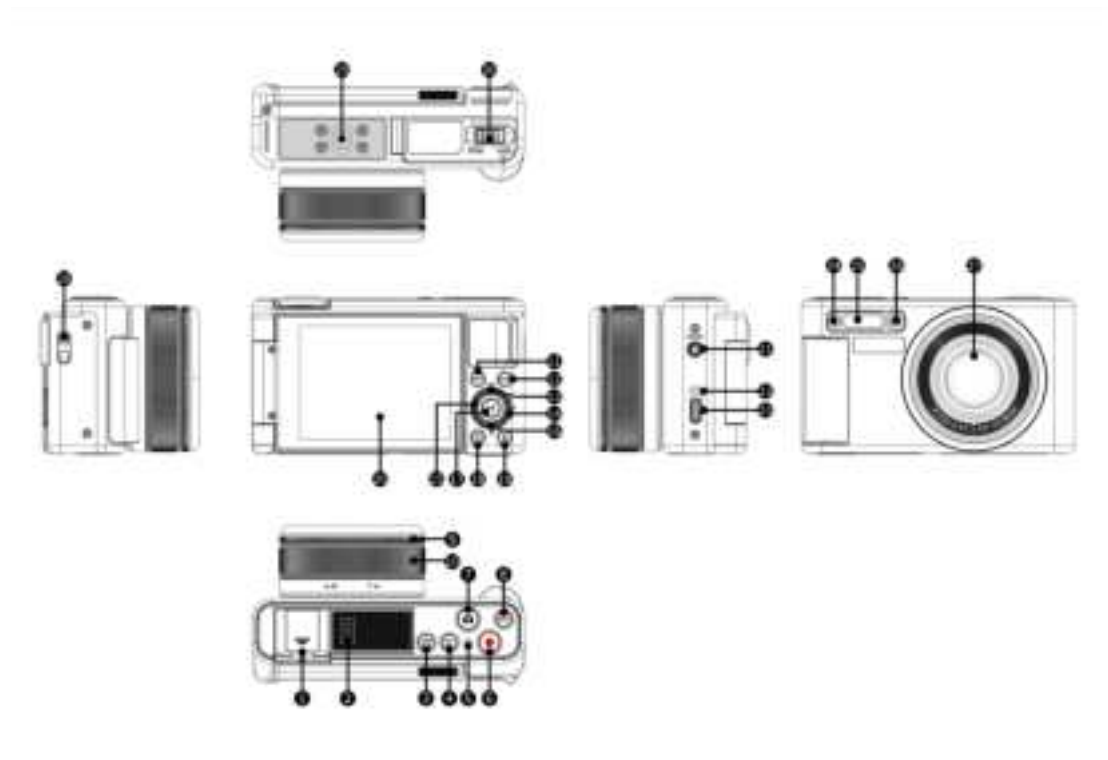


1	Hot shoe interface	External dedicated flash for external use.
2	Speaker interface	Play sound.
3	Power button	Press for 1 second to turn on/Press and hold for 2 seconds to turn off.
4	AEL/AFL exposure lock key/focus lock key	Simultaneously lock/unlock the current exposure and current focus.
5	Work indicator light	When in standby mode: constantly on; During recording: continuously flashing; When taking photos: blink once.
6	record button	Start/Stop Recording.
7	Photo button	Two segment button, lightly press to focus in photo and video modes; Press again to take a photo in photography mode; In other modes, simply tap to exit the preview mode.
8	Mode shooting mode switch key	Retrieve the list of shooting modes.
9	MF focusing ring	Rotate left and right in MF/AF+MF menu mode for manual autofocus assistance.
10	W/T zoom ring	Rotate left and right to adjust zoom in video/camera mode; Rotate in the W direction in playback mode to enter playback thumbnail mode; When replaying images, rotate left and right to zoom in and view.
11	INFO main function	Quickly access the main function list.

	menu key	
12	Menu key	Retrieve the function list.
13	Up key (DISP key)	Switch the display mode of the screen; Select upwards in the menu; Increase the volume when playing videos in playback mode.
14	Right click (+)	Select to the right in the menu; In P/S mode, the EV/shutter parameters below can be directly switched; Replay video 2X fast forward.
15	Left click (-)	Select to the left in the menu; In P/S mode, the EV/shutter parameters below can be directly switched; The LED light function can be directly turned on/off in recording mode; Replay video 2X fast return.
16	Down key (EV key)	EV shortcut menu; Switch down the menu in the menu; Reduce the volume when playing videos in playback mode.
17	OK button (filter style)	Filter shortcut menu; Confirm function in the menu; Replay video playback or pause playback.
18	Playback key	Enter/exit playback mode; End playback when replaying the video.
19	Delete key	Quickly delete the last file.
20	display	Preview of camera images and playback of local video photos.
21	MIC microphone interface	External microphone.
22	Charging indicator light	It stays on during charging and turns off when fully charged.
23	USB interface	External USB cable for charging/connecting to computer.
24	IR night vision light	Night vision function usage.
25	Built-in flash	The built-in flash function is used.
26	AF Assist Lamp	Assist in focusing below LV6 in dark environments. (This function is not available in MF mode)
27	Camera lens	View the scene.
28	Wrist buckle	Buckle the wrist strap.
29	1/4 screw hole	Install the tripod.
30	Battery compartment	Install the battery and storage card.

- When using the flash, please manually turn it on and press the flash button to select the function.
- Plug in the external flash first. If the LED light function is not supported, the menu will automatically hide.
- Flash cannot be used in continuous shooting mode and recording mode.

 Installing batteries and charging

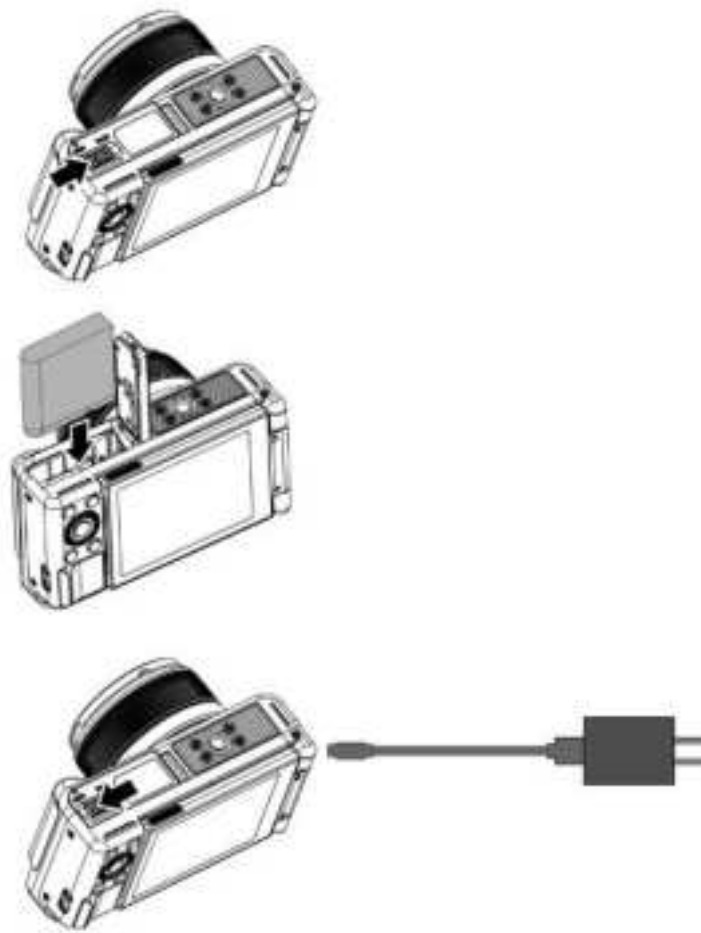

- Install the battery into the camera according to the direction shown in the diagram.
- Low battery display: When the voltage of the battery is too low, the battery level icon in the upper right corner of the display screen will turn red. Please charge the battery promptly after low battery appears to avoid affecting your use.
- When using a memory card that has been used by other devices for the first time, be sure to perform formatting on the camera.
- It is recommended to use regular U3 level storage cards. Storage cards below U3 level cannot be guaranteed to function properly.

A diagram of a camera's LCD screen with various settings and icons. The screen is divided into several sections. At the top, there are seven numbered labels (1-7) pointing to icons: 1 points to a green 'P' (Program mode), 2 points to 'SD 128400', 3 points to a yellow lightning bolt icon, 4 points to 'SF', 5 points to '6400', 6 points to a battery level indicator, and 7 points to a green battery icon. On the left side, there are five numbered labels (18-22) pointing to icons: 18 points to a green square icon, 19 points to a blue square icon, 20 points to a red star icon, 21 points to a blue square icon, and 22 points to a blue square icon. On the right side, there are five numbered labels (8-12) pointing to icons: 8 points to 'AFL', 9 points to 'AEL', 10 points to a person icon, 11 points to a globe icon, and 12 points to a pencil icon. At the bottom, there are four numbered labels (14-17) pointing to text: 14 points to 'EV-0.5', 15 points to 'ISO3200', 16 points to 'F1.6', and 17 points to '1/30'. In the center of the screen, there is a histogram. A green battery icon is also visible in the top right corner.

— 5 —





9	Exposure lock	20	Filter style status
10	Face tracking	21	Metering status
11	Image Stabilization	22	Focus modes

- Press for 1 second to turn on the camera and enter the preview main interface.
- Set the required functional options through settings such as the settings menu and camera mode application.
- Lightly press the camera button to focus, and press the camera button again to take a photo.
- Press the 'Record' button to start recording; Press the 'Record' button again to stop recording.

INFO main function menu



【Press the INFO key on the preview main interface to bring up the INFO main function menu, select by pressing up/down/left/right, confirm by pressing the OK key, and exit by pressing the menu key】

	Shooting mode	Program Auto/Shutter Priority/Scene Selection/IR /Video/Intelligent Auto, you can choose the desired mode for taking photos or recording.
	Focus Mode	Auto focus/Manual focus/Auto focus+Manual focus, you can choose the desired focus method for taking photos.
	White Balance	Auto/Daylight/Cloudy/Tungsten Light/Fluorescent(H)/Fluorescent (L)/Color Temperature 3000K~9000K, with the option to select the desired white balance parameters for photography.
	Filter Style	Standard/Natural/Vivid/Monotone/High Contrast B&W/Negative/High Contrast/Retro/CCD/Warm Colors/Cool Colors/Red Tone /Green Tone/Blue Tone/Yellow Tone, with the option to select the desired filter style parameters for photography.







	Flash Mode	Off/LED Lights/Auto Flash/Fill Flash, and select the desired flash mode according to the lighting environment for taking photos.
	Drive Mode	Single shot/continue shooting:3/continue shooting:5/continue shooting:7/self-timer: 2 sec/self-timer: 5 sec/self-timer: 10 sec, can choose single shot/continuous shot/fixed shot for taking photos.
	WDR	On/Off, you can choose the desired way to take photos.
	Beauty	On/Off, you can choose the desired way to take photos.
	ISO	ISO Auto/ISO 100/ISO 200/ISO 400/ISO 800/ISO 1600/ISO 3200 , You can choose the desired IOS sensitivity for taking photos.
	Wi-Fi	On/Off, you can share photos and videos in real-time through the app.

Photo menu



【Press the menu button on the preview main interface to enter the photo menu, select by pressing up/down/left/right, confirm by pressing the OK button, and exit by pressing the menu button】

Shooting Mode	Program Auto/Shutter Priority/Scene Selection/IR /Video/Intelligent Auto
Resolution	72M/64M/48M/36M/24M/13M/8M/5M
Quality	Super Fine/Fine/Normal
Photo Ratio	4: 3/16: 9
Date Stamp	Off/Date/Date&Time
Focus Mode	AF/MF/AF+MF
Real time focusing	On/Off
Face tracking	On/Off
AF Assist Lamp	Off/Auto

Small Fish Eye Effect	On/Off
White Balance	Auto/Daylight/Cloudy/Tungsten Light/Fluorescent(H)/Fluorescent (L)/Color Temperature 3000K~9000K
Filter Style	Standard/Natural/Vivid/Monotone/High Contrast B&W/Negative/High Contrast/Retro/CCD/Warm Colors/Cool Colors/Red Tone /Green Tone/Blue Tone/Yellow Tone
Beauty	On/Off
WDR	On/Off
Exposure Compensation	-3~+3
ISO	ISO Auto/ISO 100/ISO 200/ISO 400/ISO 800/ISO 1600/ISO 3200
Metering Mode	Average/Center/Spot
Flash Mode	Off/LED Lights/Auto Flash/Fill Flash
Drive Mode	Single shot/continue shooting:3/continue shooting:5/continue shooting:7/self-timer: 2 sec/self- timer: 5 sec/self- timer: 10 sec
Interval Timer shooting	Off/3 Sec/5 Sec/10 Sec/30 Sec/1Min
Interval Mode Duration	Unlimited/5 Min/10 Min/15 Min/20 Min/30 Min/60 Min
Image Stabilization	On/Off

- Press the Mode key to switch between setting K value in the white balance menu and setting contrast/saturation/sharpness in the filter style menu.

Video menu




【After entering the photo menu by pressing the menu button on the preview main interface, press the up button and then the right button again to switch to the recording menu interface (or you can directly press the right button continuously to switch to the recording menu interface). Press up/down/left/right to select, press OK to confirm, and press the menu button to exit】

Resolution	5K30FPS/4K60FPS/4K30FPS/2.7K60FPS/2.7K30FPS /1080P120FPS/1080P60FPS/1080P30FPS/720P120FPS/ 720P60FPS/720P 30FPS
Image	On/Off

Stabilization	
Pre-record	On/Off
Date Stamp	Off/Date/Date&Time
Mic	0~20
Slow Motion	Off/1080P4X/1080P 2X/720P4X/720P 2X
Loop Record	Off/1 Min/3 Min/5 Min
Time-Lapse Video	Off/1 Min/3 Sec/5 Sec/10 Sec/30 Sec/1Min
Duration	Unlimited/5 Min/10 Min/15 Min/20 Min/30 Min/60 Min

 System Settings Menu

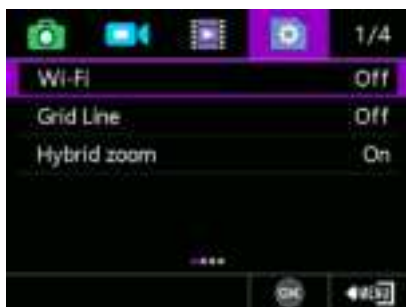

【After entering the photo menu by pressing the menu button on the preview main interface, press the up button and then right-click three times to switch to the system settings menu interface (you can also directly right-click to switch to the system settings menu interface). Press up/down/left/right to select, press OK to confirm, and press the menu button to exit】

Wi-Fi	On/Off
Grid Line	Off/White Line/Yellow Line/Red Line
Hybrid zoom	On/Off
Sounds	Shutter (On/Off) /Boot-up (On/Off) /Beep (On/Off) /Volume (On/Off)
Date&Time Setup	Date and time settings
Time Style	YY/MM/DD MM/DD/YY DD/MM/YY

Language	English/简体中文/繁體中文/日本語/한국어 /Français/Deutsch/Italiano/Español/Português/Русский/Пolski/ Tiếng Việt
Screen Brightness	Low/Middle/High
Screen Saver	Off/1 Min/2 Min/3 Min
Auto Power Off	Off/5 Min/10 Min
Light Frequency	50HZ/60HZ
Format Card	Yes/No
Factory Reset	Yes/No
Version	Current software version number in use

Replay videos and photos



- Press for 1 second to turn on the camera and enter the preview main interface.
- Press the replay button to enter replay mode.
- Press the left and right keys to switch between videos and images; Press the INFO key to switch between video playback/photo playback/video and photo playback.
- Play back the video, press the OK button to play/pause playback, press the left button 2X to rewind playback, press the right button 2X to fast forward playback, press the up button to increase playback volume, press the down button to decrease playback volume, and press the playback button to stop playing the video.
- Rotate the T-end of the zoom ring to zoom in on a partial view of the photo, and rotate the W-end of the zoom ring to exit and zoom in on the photo.
- Rotate the zoom ring W end into the thumbnail mode.

Playback Menu



【In the preview main interface, after entering the playback mode, press the menu button to enter the playback menu. Press up/down/left/right to select, press OK to confirm, and press the menu button to exit】

Delete	Single/All
Protect	Protect This File/Unprotect This File/Protect All/Unprotect All
Slide Show	2 Sec/5 Sec

- Pressing the 'delete' button in standby mode can directly delete the current file.
- Locked files cannot be deleted and must be manually unlocked.

APP

• APP download and installation

- ① Scan the QR code below directly with your phone to download and install.
- ② Download and install DIGI Filters directly by searching for it on the App Store or mobile app store.



- If the phone prompts 'Do you want to allow the app to obtain usage permission 'during installation, please select' Yes' for all options.
- When waiting for more than one minute to connect, the Wi-Fi function will automatically exit.
- This Wi-Fi function belongs to a limited distance point-to-point wireless connection, with a maximum distance of about 3 meters. Please use this function within the effective distance
- Due to different mobile phone brands and configurations, sometimes entering the main interface of the APP may be slow or prompt that the device is not connected. Please try entering again.
- When Wi-Fi fails to connect:
 - ① Restart the local machine and try the above connection steps again.
 - ② Confirm if the Wi-Fi password is entered correctly. The default Wi-Fi password for the camera is 12345678.

•Connect to Wi-Fi



【After entering the photo menu by pressing the menu button on the preview main interface, press the up button and then right-click three times to switch to the system settings menu interface (you can also directly right-click to switch to the system settings menu interface), turn on Wi-Fi, and search for the Wi-Fi name on the phone: DB73-XXXXXX; Enter password 12345678, click on DIGI Filters to enter the APP preview interface, and start operating】

Technical Specifications

Sensor	Sony 13 million CMOS sensor
Aperture and Focal length	F.no 1.6~ 2.8 f:3.45mm~10.5mm
Display	2.8" 4: 3 Display
Zoom	3X optical zoom and 4X digital zoom
Shooting distance	Wide: 0.5m~INF Tele: 1m~INF
File format	Video: MP4 Photo: JPEG
Video resolution	5K: 5120*2880(30fps) 4K: 3840*2160(60fps)(30fps) 2.7K: 2688*1512 (60fps)(30fps) FHD 1080P : 1920*1080(120fps) (60fps) (30fps) HD 720P : 1280*720(120fps)(60fps) (30fps)
Photo resolution	72M/64M/48M/36M/24M/13M/8M/5M
Storage medium	External TF card (supports up to 256GB), U3 or above
Microphone	built-in
Speaker	built-in
I/O interface	MIC/USB
Wi-Fi	Yes
Hot boots	Yes
Computer system compatibility	Windows 7/8/10/11、Mac OSX10.5 以上
Power input	DC5V/2A Type-C USB
volume	Length 106 X Thickness 65.5 (with lens cover 4.5) X Height 61.3MM
weight	220±10g
Storage environment temperature	-20 ~ 60℃
Working environment temperature	0 ~ 40℃

Fault problems and solutions

Fault performance	Possible reasons and solutions
Unable to power on	<ul style="list-style-type: none"> •The battery is not properly installed/the battery is dead, please install the battery correctly/charge the battery. •Is the operating environment temperature within the allowable range? Please use within 0-40 °C .
The battery runs out quickly	<ul style="list-style-type: none"> •The battery performance will decrease at low temperatures. Please preheat before use. •The battery is not fully charged, please recharge it. •If the situation persists after recharging, it indicates that the battery has reached the end of its service life. Please purchase the product again. •Proper use of automatic shutdown or screen saver, screen brightness, and other functions can effectively save power consumption.
Poor focus	<ul style="list-style-type: none"> •Exceeding the focal length range, shooting within the autofocus range. •The ambient brightness is too low, please manually fill in the light. •The lens has foreign objects that are not clean. Please wipe the lens and reuse it.
Unable to use memory card/unable to record or take photos	<ul style="list-style-type: none"> •Card damage/TF card does not meet product read-write requirements, replace TF card/format TF card on this machine. •The storage card capacity is insufficient, please check the storage card. •The storage card format is incorrect. Please format it on your computer and try using it again.
The Wi-Fi signal is unstable	<ul style="list-style-type: none"> •If the distance is too far, please use within 3 meters. •The camera is placed on a metal table or shelf, causing wireless signal interference. Please use it in a location away from metal. •The Wi-Fi antenna signal of the mobile phone used is weak, please replace the phone.

Name and content of harmful substances in the product

Component Name	Harmful substances					
	Lead (pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Host shell and components	X	O	O	O	O	O
Internal electronic components of the host	X	O	O	O	O	O
Charger casing and components	O	O	O	O	O	O
Internal electronic components of charger	O	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364

O: The content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572.

X: The content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T26572, and there is no mature alternative solution in the industry. This product complies with the EU RoHS environmental directive requirements.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.