


OMAKER

BLUETOOTH SPEAKER

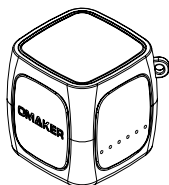

W4
User Manual

CAUTION

 
①

1. All the safety and operating instructions should be read before the appliance is operated.
2. All operating and user instructions should be followed.
3. The appliance should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, ect. It should not be exposed to dripping or splashing water, and no Objects filled with liquid, such as a vase, should be placed on the appliance.
4. Warning: To reduce the risk of fire of electric shock, do not expose this appliance to rain or moisture.
5. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings. Or placed in a built – in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings .

PACKAGE CONTENTS

②

- Speaker 1pc
- USB cable 1pc
- User manual 1pc



OPERATION GUIDANCE

1. Power On: Long press the power button, the LED will lit up with Blue light.
 - a. The speaker will search previous-connected devices. If there is no devices connected before, the speaker will enter auto-pairing mode. If connected successfully, the Blue LED will lit up.
 - b. Bluetooth speaker model name: W4

OPERATION GUIDANCE

③

2. Power Off: Long press the power button.
3. Disconnect the Bluetooth mode: double click the power button under the connected status, you will enter the pairing mode.
4. Play/Pause: Press the power button to Play or Pause music
5. Auto-Power-Off: If there is no device connect to the speaker in 10 minutes, the speaker will turn off automatically.
6. Charge: Under the charging status, the red LED will lits up. When the speaker is fully charged, the LED will turn off automatically.
7. Battery Low Alert: When the battery status is below 20%, the speaker will have the low-battery alert.

SPECIFICATIONS

Power Output: 3W
Frequency Response: 80Hz-20KHz
Power: DV 5V
S/N Ratio: ≥75dB
Dimension: W47XD47XH51MM

④

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

⑤

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.