vtech

CS5319-15

CS5319-2

Abridged user's manual

CS5319 WHAT'S IN THE BOX

Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for warranty service.



2 sets for CS5319-2





1 set for CS5319-2

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Read and understand all instructions 2. Follow all warnings and instructions marked on the
- 3. Use only with UL listed Bluetooth devices.

for cleaning.

- 4. Unplug this product from the wall outlet before cleaning Do not use liquid or aerosol cleaners. Use a damp cloth
- 5. CAUTION: Do not install the telephone base at a height above 2 meters.
- 6. Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or showe
- 7. Do not place this product on an unstable table, shelf stand or other unstable surfaces. 8. Avoid placing the telephone system in places with
- extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes
- 9. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- 10. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company. 11. Do not allow anything to rest on the power cord. Do not
- install this product where the cord may be walked on.
- 12. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- 13. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility Opening or removing parts of the telephone base o handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- 14. Do not overload wall outlets and extension cords. 15. Unplug this product from the wall outlet and refer
- servicing to an authorized service facility under the following conditions: · When the power supply cord or plug is damaged or
- fraved.
- · If the product has been exposed to rain or water.

operation.

- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal
- · If the product has been dropped and the telephone base and/or handset has been damaged

- · If the product exhibits a distinct change in performance. 16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- 17. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- 18. Only put the handset of your telephone next to your ear when it is in normal talk mode
- 19. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 20. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily
- CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT262342) for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the instruction
- Do not use the battery in following conditions » High or low extreme temperature during use,
- storage or transportation. » Replacement of a battery with an incorrect type that can defeat a safeguard.
- » Disposal of a battery into fire or a hot oven, or nechanically crushing or cutting of a battery, that can result in an explosion
- » Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- » A battery subjected to extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas 22. Use only the adapter included with this product. Incorrect

adapter polarity or voltage can seriously damage the

23. The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

product.

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposa

Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if

- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemake
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

- Privacy: The same features that make a cordless elephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordles telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

You can use up to two handsets at a time on an

(a) on another handset to join the call.

To exit the call, press OFF on the handset or

call continues until all handsets hang up.

When you subscribe to call waiting service from

• Press **FLASH** to put the current call on hold and

• Press FLASH at any time to switch back and forth

your telephone service provider, you hear an

When a handset is already on a call, press TALK or

place it in the telephone base or charger. The

Join a call in progress

Call waiting

SETUP

After the telephone is installed or power returns following a power outage and battery depletion the handset will prompt you to set the date and

Date and time

When the handset prompts, follow the steps below to

- (MM), date (DD) and year (YY). Then press SELECT.
- 2. Use the dialing keys (**0-9**) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.
- 3. Press **SELECT** to save.



press **SELECT**. Then, follow the steps

in all screen displays:

- 2. Press ▼ or ▲ to scroll to **Settings** and then press **SELECT**.
- Español, and then press SELECT to save.



To end paging:

BLUETOOTH®

Press

✓ FIND HS again.

not in use.

OVERVIEW



you can set up again by pressing MENU. Scroll to select **Set date/time**, and then

NOTE: If you accidentally set the

INSTALL AND CONNECT

Install the battery



Change LCD language settings

You can select English, French, or Spanish to be used



elephone base

- Use the dialing keys (0-9) to enter the month

NOTE: If you have skipped the prompt,

- . Press **MENU** when the handset is not in use.
- Press SELECT again to choose LCD language. 4. Press ▼ or ▲ to choose **English**, **Français** or

LCD language to Spanish or French. press **MENU** and then enter **X364**# to change the handset LCD language back to English while the handset is

· Page all system handsets. • Press and hold for 4 seconds to pair a Bluetooth headset after pressing TALK or ■ on the handset

• Steady on when paired and connected to a

• Off when no Bluetooth headset is paired.

Handset

- Bluetooth LED


2 – Charging pole

to get a dial tone.

3 – 🖥 / FIND HS

Flashes quickly when pairing.

Bluetooth headset is in use.

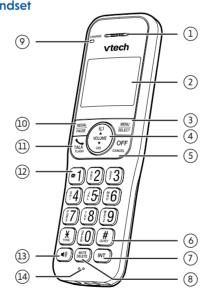

3-MENU/SELECT Show the menu. While in a menu, press to select an item, or save an entry or setting

1 – Earpiece

2 - LCD display

Connect and charge

- 4 ♥ / VOLUME ▲ · Review the directory when the phone is not
- · Scroll up while in a menu, or in the directory,
- caller ID log or redial list.
- Move the cursor to the right when entering numbers or names.
- · Increase the listening volume during a call. CID / VOLUME ▼ Review the caller ID log when the telephone
- · Scroll down while in a menu, or in the directory caller ID log or redial list.
- Move the cursor to the left when entering numbers or names. · Decrease the listening volume during a call.
- 5-OFF/CANCEL

is not in use.

- Hang up a call. • Return to the previous menu or exit completely
- without making changes.
- · Delete digits while predialing. • Silence the handset ringer temporarily while the phone is ringing.
- <u>Press and hold</u> to erase the missed call indicator while the handset is not in use.

6 – QUIET # • Press and hold to set and turn on the QUIET

mode, or turn it off • Show other dialing options when reviewing a caller ID log entry

7 – INT

• Press to initiate an intercom conversation or transfer a call.

8-MUTE/DELETE • When the telephone is ringing, press to mute

- the ringer temporarily.
- Mute the microphone during a call. Delete the displayed entry while reviewing the directory, caller ID log or redial list. Delete digits or characters when entering

numbers or names. 9 - CHARGE light

- · On when the handset is charging in the telephone base or charger.
- · Review the redial list Press and hold to insert a dialing pause while

10 - REDIAL/PAUSE

dialing or entering numbers into the directory. 11 - TALK/FLASH

Press repeatedly to add or remove 1 in front o the caller ID log entry before dialing or saving

Answer an incoming call when you receive a

• Press and hold to set or dial your voicemail

call waiting alert.

- 13 ◀》 • Make or answer a call using the handset
- During a call, press to switch between the speakerphone and the handset earpiece.

14 - Microphone

speakerphone

Chargei



1 – Charging pole

Display icons

 \mathcal{X}

The battery icon flashes when the battery is low and needs charging. The battery icon animates when the battery is charging. The battery icon becomes solid when the battery is fully charged. The ECO mode activates automatically to reduce power consumption when the handset is within range of the telephone

The handset ringer is turned off.

received from your telephone

The entry you are reviewing is

There are new voicemail

new in the caller ID log.

service provider.

- 1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the
- desired feature menu. Press SELECT.
- To return to the previous menu, press CANCEL.
- Press TALK or ■), and then dial the telephone

Answer a call

• Press **OFF** or put the handset back in the telephone base or charger. Speakerphone

switch between speakerphone and handset earpiece.

 During a call, press VOLUME ▲and **VOLUME** ▼ to adjust the listening volume.

but the other party cannot hear you.

1. During a call, press **MUTE**. The handset displays Muted. 2. Press **MUTE** again to resume the conversation.

Call transfer using intercom While on an outside call, you can use the intercom feature to transfer the call from one handset to

current call is put on hold. Use the dialing keys to enter a destination handset number if necessary. 2. To answer the intercom call on the destination

handset, press TALK, ■), INT or any dialing key on

the destination handset. You can now have a

you on the outside call in a three-way conversation. Press and hold INT on the originating handset

connected to the outside call. You can press INT to switch between the outside call (Outside call displays) and the

intercom call (Intercom displays). • The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or

Pair and connect a Bluetooth headset

- Refer to your Bluetooth headset user's manual to Press TALK or ■ on the handset.
- telephone base for 4 seconds · The telephone then enters pairing mode. • The Bluetooth LED on the telephone base
- back of the telephone base 4. Press **OFF** on handset or place the handset in the telephone base or charger after pairing.
- **Connected** when successfully paired and connected to a Bluetooth headset, the Bluetooth LED becomes steady on.
- the incoming call with your Bluetooth headset. Bluetooth headset in use - when the connected Bluetooth headset is in use, the Bluetooth LED becomes steady on.

· Make or answer a call

- Bluetooth headset will be removed.
- NOTES:
- Pairing while pairing to a Bluetooth headset,
- the Bluetooth LED will turn off. You can answer

Set your Bluetooth headset to pairing mode. Press TALK or ■ on the handset.

- 3. Press and hold / FIND HS at the back of the
 - flashes. To cancel pairing, press / FIND HS at the
- Bluetooth headset connection status:
- **NOTE**: When there is an incoming call, you hear a ringing tone on your Bluetooth headset and
- No connection the Bluetooth LED turns off.

Remove paired Bluetooth headset

- 2. Press and hold / FIND HS at the back of the
- You can use your connected Bluetooth headset to answer calls or end the call. If you fail to connect your Bluetooth headset to the telephone, re-try the pairing steps above.

telephone base for 4 seconds. The paired

To pair another Bluetooth headset to the

replaced by the new Bluetooth headset While on a call using your Bluetooth headset keep your headset closer to the telephone base (within 15 feet) and make sure that

there are no physical obstacles such as large

furniture or thick wall in between.

entry is deleted to make room for the new entry.

telephone, perform the pairing steps above and the current paired headset will be

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest

REDIAL LIST

Review and dial a redial list entry 1. Press **REDIAL** when the handset is not in use. 2. Press **▼**, **▲** or **REDIAL** repeatedly until the

desired entry displays.

Review and dial a redial list entry). 2. When the desired redial entry displays, press

INTERCOM

- between two handsets. the dialing keys to enter a destination handset number if necessary.
- any dialing key on the destination handset. 3. To end the intercom call, press **OFF** or place the

2. To answer the intercom call, press TALK, ■), INT or

call, there is an alert tone. • To answer the outside call, press TALK. The

3. Press TALK or ■ to dial. Delete a redial list entry

1. Search for or review the redial list entries (see

DELETE.

Use the intercom features for conversations

- 1. Press **INT** on your handset when not in use. Use
- handset back in the telephone base or charger. Answer an incoming call during an intercom call

If you receive an incoming call during an intercom

- intercom call ends automatically.
- To end the intercom call without answering the outside call, press **OFF**. The telephone continues



Use the handset menu

To exit completely, <u>press and hold</u> CANCEL.

Make a call

 Press TALK, ■ or any dialing keys. End a call

• During a call, press ■ on the handset to

The mute function allows you to hear the other party

The handset displays **Microphone on** briefly.

1. Press **INT** on your handset during a call. The

private conservation before transferring the call. 3. From this intercom call, you have the following

• You can let the destination handset join

- · You can transfer the call. Press OFF, or place your handset back in the telephone base or charger. The destination handset is then
- charger. The outside call continues with the original system handset.



Go to www.vtechphones.com (US) to register your



· If liquid has been spilled onto the product.

 $H226\Lambda CB-B228\Lambda CB-BEKEM-BL^{-}\lambda$ C22319-X_US-CAN_ACIB_V1 © 2024 VTech Technologies Canada Ltd. All rights reserved. 04/24. 2024 VTech Communications, Inc. | Specifications are subject to change without notice.

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Advanced American Telephones and its parent, VTech Holdings Limited, is under license.

Viech product news.

teatel and to to complete lateral (Canada) for the latest

product for enhanced warranty support and latest

imited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective-

Use this feature to find the system handset. VTech product news. To start paging:

> • Press / FIND HS at the back of the telephone base when not in use. All idle handsets ring and display ** Paging **.

take the new call

between calls.

Find handset



feature. You can pair a Bluetooth headset to your alert tone if there is an incoming call while you are telephone system and answer calls with your Bluetooth headset.

NOTES: Before you begin, make sure that your Bluetooth enabled headset is not connected o any other Bluetooth device. If you have rouble pairing your Bluetooth headset to your CS5319/CS5319-15/CS5319-2 telephone system, try turning off the Bluetooth feature of the nearby devices that your Bluetooth headset has

Your telephone system is enhanced with Bluetooth

NOTE: Do not press and hold **I**/FIND H for more than 4 seconds. It may lead to handset derogistration

handset deregistration.

previously paired.


headset within this range For more details about the Bluetooth feature, read the online Complete user's manual.


Bluetooth wireless technology operates within a short range (a maximum of approximately 15 eet) from the telephone base. Keep connected


 Press TALK, OFF/CANCEL or any dialing keys on NOTE: Do not press and hold / FIND HS

the Bluetooth LED flashes quickly.


Connect the telephone base and charger If you subscribe to digital subscriber line (DSL) $h\bar{i}gh$ -speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.

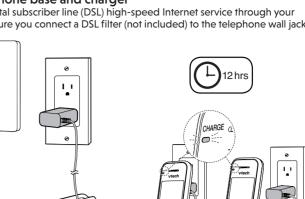


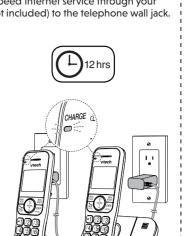


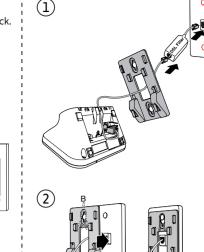

Mount (optional)

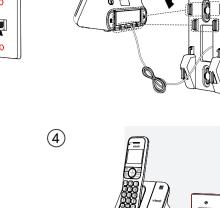

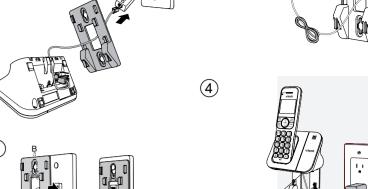

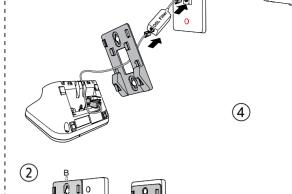













Add a directory entry

1. Enter the number when the phone is not in use. Press MENU, then go to Step 3.

Press **MENU** when the phone is not in use, ther press **SELECT** to choose **Directory**. Press **SELECT** again to choose Add contact. 2. Use the dialing keys to enter the number.

Copy a number from the redial list by pressing **REDIAL** and then press ∇ , \triangle or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number.

- 3. Press **SELECT** to move on to enter the name.
- 4. Use the dialing keys to enter the name. Additional key presses show other characters of that particular key.
- 5. Press **SELECT** to save.

While entering names and numbers, you can: • Press **DELETE** to backspace and erase a digit or

- Press and hold **DELETE** to erase the entire entry
- Press ▼ or ▲ to move the cursor to the left or
- Press and hold **PAUSE** to insert a dialing pause
- or entering numbers only). • Press **0** to add a space (for entering names only).

Review a directory entry

Entries are sorted alphabetically.

Delete a directory entry

- 1. Press when the phone is not in use. 2. Press ▼ or ▲ to browse through the directory, or
- 1. Search for or review the directory entries (see Review a directory entry).

use the dialing keys to start a name search.

- 2. When the desired entry displays, press **DELETE**.
- 3. When the handset displays Delete contact?, press **SELECT**.
- Edit a directory entry

1. Search for or review the directory entries (see

- Review a directory entry). 2. When the desired entry displays, press **SELECT**.
- 3. Use the dialing keys to edit the number, then press **SELECT**.
- 4. Use the dialing keys to edit the name, then press

Dial a directory entry

- 1. Search for or review the directory entries (see
- 2. When the desired entry appears, press TALK or ■》

You can copy up to 10 directory entries into the speed dial locations (0-9) so that you can dial these numbers using shortcuts.

Assign a speed dial entry

- 1. Press **MENU** when the handset is not in use.
- SELECT
- 3. Scroll to **Speed dial**, then press **SELECT**.
- press **SELECT**.
- **SELECT** to save

- 1. Press **MENU** when the handset is not in use.
- SELECT
- 4. Scroll to a desired speed dial location and then
- Reassign SD displays.
- Copy from DIR... and the first directory entry
- **SELECT** to save

Dial a speed dial entry

• Press and hold a dialing key (0-9) to dial the number stored in the corresponding location

Delete a speed dial entry

- 2. Press ▼ or ▲ to scroll to **Directory**, then press
- 3. Scroll to **Speed dial**, then press **SELECT**.
- 4. Scroll to a desired speed dial location and then press **DELETE**.
- The screen displays Clear SD #X? 5. Press **SELECT** to confirm.

CALLER ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry

has up to 24 digits for the phone number and 15

characters for the name. If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more

than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

Press ▼ or ▲ to browse through the caller ID log.

Missed call indicator

in the caller ID log, the handset displays XX missed

NEW, the number of missed calls decreases by one When you have reviewed all the missed calls, the missed call indicator no longer displays.

If you do not want to review the missed calls one by one, press and hold CANCEL on the idle handset to erase the missed call indicator. All the entries are then considered old.

- 1. Search for or review the call ID log entries (see Review a caller ID log entry).
- 2. When the desired entry appears, press TALK or ■) to dial.

Save a caller ID log entry to the directory

- Review a caller ID log entry) 2. When the desired caller ID log entry displays,
- 3. Use the dialing keys to edit the number, if
- necessary. Then press **SELECT**.

d'éviter les courts-circuits provoqués par des matériaux

L'organisme 'Wireless Technology Research, LLC (WTR)', une

pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans

drogues (FDA) des États-Unis, la firme WTR recommande aux

Ils ne doivent PAS placer le téléphone sans fil directemen

sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.

sur l'oreille qui se trouve dans la direction opposée au

firme de recherche indépendante, a mené une évaluation

l'organisme. Appuyée par l'Administration des aliments et

• Ils doivent tenir le téléphone sans fil à une distance d'au

Ils doivent utiliser le téléphone sans fil en l'appuyant

L'étude effectuée par l'organisme WRS n'a pas identifié de

risque pour les détenteurs de simulateurs cardiagues causé

par les gens qui utilisent un téléphone sans fil à proximité de

Confidentialité: Les mêmes caractéristiques qui constituen

des avantages pour les téléphones sans fil affichent également

des restrictions. Les appels téléphoniques sont transmis entre

des restrictions. Les appers leterploitiques soit i maistins et ille combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans

radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications

téléphoniques sans fil comme étant aussi confidentielles que

doit être branché à une prise électrique fonctionnelle. La prise

électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil

Possibilité d'interférences aux téléviseurs : Certains téléphones

Alimentation électrique : Le socle de ce téléphone sans fil

si le socle est débranché ou mis hors tension ou si le courant

sans fil fonctionnent sur des fréquences pouvant causer

des interférences aux téléviseurs et aux magnétoscopes

Pour réduire ou prévenir de telles interférences, ne placez

ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du

Piles rechargeables: Manipulez les piles avec soin afin de ne

Respectez la polarité adéquate entre la pile et le chargeur.

pas les court-circuiter avec des bagues, bracelets ou clés. Les

piles ou le conducteur peut surchauffer et causer des blessures

Les bloc-piles rechargeables à l'hydrure métallique de nickel :

Jetez ces blocs-piles de manière écologique et sécuritaire. Ne

de ce type, elles pourraient dégager une matière toxique qui

The RBRC seal on the nickel-metal hydride

battery indicates that VTech Communications Inc. is voluntarily participating in an industry

ogram to collect and recycle these batteries

at the end of their useful lives, when taken ou

of service within the United States and Canada.

The program provides a convenient alternative

les incinérez pas et ne les percez pas. Tel que les autres piles

des blessures corporelles si elles sont brûlées ou percées.

to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation makes it easy for you to drop off the spen

battery at local retailers participating in the RBRC program or at

authorized VTech product service centers. Please call 1(800) 8 BATTERY® for information on Ni-MH battery recycling

and disposal bans/restrictions in your area. VTech's involvement

magnétoscope afin de réduire possiblement les interférences.

pas le socle du téléphone sans fil près ou sur un téléviseur

fil soient interceptées par des équipements de réception

Avis aux détenteurs de stimulateurs cardiaques

stimulateur cardiaque.

À propos des téléphones sans fil

celles des téléphones à cordons

THE RBRC SEAL

moins six pouces du stimulateur cardiaque

instructions et limites spécifiées dans ce guide d'utilisation.

Rechargez la pile incluse avec cet appareil, selon les

Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux

necessary. Then press **SELECT**.

Delete the caller ID log entries

- 1. Search for or review the call ID log entries (see If you turn off the volume, the Review a caller ID log entry). handset will be silenced and displays 2. When the desired caller ID log entry displays,
 - Ringer off. · When the ringer volume is set to Off,

muted.

Quiet mode

Temporary ringer silencing

To silence the handset ringer:

call screening are muted.

is not in use.

- To delete all caller ID log entries:
- 1. Press **MENU** when the phone is not in use.
- 2. Press ▼ or ▲ to scroll to Caller ID log and then press **SELECT**.
- 3. Scroll to **Del all calls** and then press **SELECT**

SOUND SETTINGS

Key tone

press **DELETE**.

You can turn the key tone on or off.

- 1. Press **MENU** when the handset is not in use.
- 2. Press ▼ or ▲ to scroll to **Settings** and then press
- 3. Scroll to choose **Key tone**, then press **SELECT**.
- 4. Scroll to choose **On** or **Off**, then press **SELECT** to

Ringer tone

You can choose from different ringer tones for each

- Press MENU when the handset is not in use. . Press ▼ or ▲ to scroll to **Ringers** and then press
- 3. Scroll to choose Ringer tone, then press SELECT. 4. Scroll to sample each ringer tone, then press **SELECT** to save
- NOTE: If you turn off the ringer volume, you will not hear ringer tone samples.

Ringer volume

You can adjust the handset ringer volume level, or turn the ringer off.

- 1. Press **MENU** when the handset is not in use. 2. Press ▼ or ▲ to scroll to **Ringers** and then press
- SELECT.
- 3. Press **SELECT** again to choose **Ringer volume**.
- 4. Scroll to choose a volume level. A sample of each ringer volume plays as you scroll through the choices.
- Press SELECT to save.

RETRIEVE VOICEMAIL FROM

the handset still rings when you press

FIND HS at the telephone base.

When the telephone is ringing, you can temporarily

Press MUTE or OFF. The handset displays Ringer

You can turn on the quiet mode for a period of time.

During this period, all tones (except paging tone) and

1. Press and hold QUIET # on the handset when it

2. Use the dialing keys (0-9) to enter the duration,

To turn off the quiet mode, press and hold

QUIET # on the handset when it is not in use.

and then press **SELECT** to save.

next call rings normally at the preset volume.

silence the ringer without disconnecting the call. The

 
TELEPHONE SERVICE

Voicemail is a feature available from most

telephone service providers. It may be included with your telephone service, or may be optional. Fees may apply.

Retrieve voicemail

If you subscribe to a voicemail service offered by your telephone service provider, the handset displays and New voicemail when you received a voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.



Set speed dial voicemail number

You can save the voicemail number to $\mathbf{M}\mathbf{1}$ on each handset for easy access. When you want to retrieve voicemail messages, press and hold 1. Contact your telephone service provider for more information and assistance about your voicemail service.

- 1. Press **MENU** when the handset is not in use.
- 2. Press ▼ or ▲ to scroll to **Settings** and then press
- Scroll to choose Voicemail #, then press SELECT.
- 4. Use the dialing keys to enter the voicemail number (up to 30 digits), then press **SELECT**.

Clear the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to clear the indicators. NOTE: This feature clears the indicators

1. Press **MENU** when the phone is not in use.

only, it does not delete your voicemail

2. Press ▼ or ▲ to scroll to **Settings** and then press SELECT. 3. Scroll to Clr voicemail and then press SELECT

ECO MODE

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

GENERAL PRODUCT CARE

Taking care of your telephone Your cordless telephone contains sophisticated

electronic parts, so it must be treated with care.

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower

Electrical storms Electrical storms can sometimes cause power

surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

NEED HELP? For operations and guides to help you using your

telephone, and for the latest information and supports, go and check the online help topics and

Use your smartphone or mobile device to access our online help.

> • Go to https://help.vtechphones.com/cs5319 (US); OR https://phones.vtechcanada.com/en/support/ general/manuals?model=cs5319 (Canada) • Scan the QR code on the right. 回数中国

Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

 If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear. You can also call our Customer Support at 1 (800) 595-9511 [in US]







FOR C-UL COMPLIANCE ONLY

Mesures de sécurité importantes Afin de réduire les risques d'incendie, de blessures corporelles

- Observez toutes les instructions et mises en garde inscrites sur l'appareil. 3. N'utiliser qu'avec des dispositifs Bluetooth homologués
- 4. Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol N'utilisez qu'un chiffon doux et légèrement humecté
- N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la
- Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être
- soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphon contre les sources d'humidité, la poussière, les vapeurs et les Le boîtier de l'appareil est doté de fentes et d'ouvertures
- mé qui ne possède pas d'aération adéquate. 10. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez
- votre marchand ou votre fournisseur d'électricité. 11. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon
- 12. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points qui constituerait un risque d'incendie ou d'électrocution N'échappez pas de liquides dans l'appareil.
- qualifié s'il doit être réparé. En enlevant le couvercle ous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et
- Si du liquide a été échappé dans l'appareil.
- que la pluie ou l'eau. • Si le produit ne fonctionne pas normalement en
- espectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans le les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le nement normal de l'appareil.

- Si le produit a été échappé et que le socle et/ou le
- 16. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une 17. N'utilisez pas le téléphone pour rapporter une fuite de

Si le produit affiche une nette diminution de sa

flammèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroi comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flammèche dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants c

gaz à proximité de la fuite. En certaines circonstances, une

- nettoyage, des vapeurs d'essence, etc.); une fuite de gaz
- Ne placez que le combiné de votre téléphone près de votre oreille lorsqu'en mode de conversation. 19. Ces adaptateurs ont été concus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/
- 20. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit etre installe a proximite du ateriel et doit etre aisement accessible.
- 21. MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeable inclus ou les piles de rechange (BT162342/BT262342). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Mettre au rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des piles
 - · des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant l'utilisation, le stockage ou le transport. · remplacement d'une batterie par un type incorrect

pouvant supprimer une protection

mise au rebut d'une batterie dans un feu ou dans un ur chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une

maintien d'une batterie dans un environnement

· batterie soumise à une pression de l'air inflammables.

à très haute température pouvant provoque

une explosion ou la fuite de liquide ou de gaz

22. N'utilisez que les adaptateurs inclus avec ce produit 'utilisation d'un adaptateur dont la polarité ou la tensio serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. 23. La plaque signalétique appliquée est située au bas ou à

CONSERVEZ CES INSTRUCTIONS

N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en

échapperait est corrosif et pourrait causer des brûlures

Soyez prudents lorsque vous manipulez les piles afin

ou des blessures aux yeux ou à la peau. L'électrolyte est

N'utilisez que la pile incluse ou l'équivalent.

 Ne jetez pas la pile au feu. Vérifiez les instruction. spécifiques de mise aux rebus auprès des autorités locales

roximité du produit.

toxique si avalé.

- Review a directory entry)

SPEED DIAL

- 2. Press ▼ or ▲ to scroll to **Directory**, then press
- 4. Scroll to a desired speed dial location and then
- 5. Scroll to a desired directory entry, then press

Reassign a speed dial entry

- 2. Press ▼ or ▲ to scroll to **Directory**, then press
- 3. Scroll to **Speed dial**, then press **SELECT**.
- press **SELECT** twice.
- 5. Press **SELECT** again.
- 6. Scroll to a desired directory entry, then press

- 1. Press **MENU** when the handset is not in use.
- SELECT

1. Press CID when the phone is not in use.

When there are calls that have not been reviewed

Each time you review a caller ID log entry marked

Dial a caller ID log entry

1. Search for or review the call ID log entries (see

4. Use the dialing keys to edit the name, if

conducteurs.

...... in this program is part of its commitment to protecting our environment and conserving natural resources.

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks FCC, ACTA and IC regulations

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or

- levision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation. Privacy of communications may not be

 Consult the dealer or an experienced radio/TV technician WARNING: Changes or modifications to this equipment no expressly approved by the party responsible for compliance could void the user's authority to operate the equipment This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not

ensured when using this telephone To ensure safety of users, the FCC/ISEDC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ISEDC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body othe than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian

CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

his equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, an a product identifier in the format US:AAAFQ##TXXXX. This ntifier must be provided to your telephone service provide upon request. The plug and lack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted

by ACTA. A compliant telephone cord and modular plug is

a compatible modular jack that is also compliant. An RJ11 jack

This equipment must not be used with Party Lines. If you have

specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does

not disable your alarm equipment. If you have questions about

vided with this product. It is designed to be conn

should normally be used for connecting to a single line. See the nstallation instructions in the user's manual The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following th US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In nost, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

what will disable alarm equipment, consult your telephone service provider or a qualified installer. If this equipment is malfunctioning, it must be unplugged rom the modular jack until the problem has been corre

Replacement to this telephone equipment can only be made

by the manufacturer or its authorized agents. For replacement procedures, follow the instructions outlined under the **Limited** warranty. If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the prope

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, nedical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call

Perform such activities in off-peak hours, such as early morning

If this product is equipped with a corded or cordless handset, it

Industry Canada This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

RENs of all the devices not exceed five.

before hanging up.

or late evening.

required to notify you if such changes are planned.

(2) This device must accept any interference, including Privacy of communications may not be ensured when using this The term "IC:" before the certification/registration number

only signifies that the Industry Canada technical specifications

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN indicates the maximum number of devices allowed to be connected to a telephone interface. The ermination of an interface may consist of any combination of devices subject only to the requirement that the sum of the

This product meets the applicable Innovation, Science and

CALIFORNIA ENERGY COMMISSION

Economic Development Canada technical specifications.

BATTERY CHARGING TESTING

functions, except battery charging, will be disabled.

back to the power outlet.

To activate the CEC battery charging testing mode:

INSTRUCTIONS This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for rnia Energy Commission (CEC) compliance testing

the CEC battery charging testing mode is activated, all telephone

 Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding. 2. While you press and hold / FIND HS at the back of the

telephone base, plug the telephone base power adapter

immediately press it again within 2 seconds. When the phone successfully enters the CEC battery charging testing mode, all handsets display To register HS... and ...see

3. After about 10 seconds, release 7 / FIND HS and

To deactivate the CEC battery charging testing mode: 1. Unplug the telephone base power adapter from the power

outlet, and then plug it back in. Then the telephone base is powered up as normal.

When the phone fails to enter this mode, repeat Step 1 through

2. Press and hold / FIND HS at the back of the telephone base for about four seconds. Press #/QUIET on the handset and it shows Registering... The handset shows **Registered** and you hear a beep when the registration process completes. This process takes about

What does this limited warranty cover? The manufacturer of this VTech product, VTech Communications, Inc. ("VTech"), warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided by VTech in sales package ("Product" are free from material defects in material and workmanship, pursuant to the following terms and conditions, when

LIMITED WARRANTY

for Products purchased and used in the United States of America What will VTech Communications do if the Product is not free om material defects in materials and workmanship during the

limited warranty period ("Materially Defective Product")

nstalled and used normally and in accordance with operating

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we choose to replace th Product, we may replace it with a new or refurbished Product of the same or similar design. VTech will return replacement products to you in working condition. VTech will retain defective parts, modules, or equipment. Replacement of the Product, at VTech's option, is your exclusive remedy. You should expect the replacement to take approximately 30 days. How long is the limited warranty period?

The limited warranty period for the product extends for ONE (1)

'EAR from date of purchase (90 davs on products purchased as

replacement Product is shipped to you or (b) the time remaining

Refurbished*). This limited warranty also applies to replacemen

warranty on products that are purchased as Refurbished*), whichever is longer. *Refurbished products purchased from our online store carry a

on the original one-year limited warranty (90-day limited

Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation abnormal operation or handling, neglect, inundation, fire water or other liquid intrusion; or

What is not covered by this limited warranty?

service representative of VTech; or

This limited warranty does not cover

Product to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or Product to the extent that the problem is caused by use with non-VTech electrical accessories; or

Product that has been damaged due to repair, alteration

or modification by anyone other than an authorized

- Product whose warranty/quality stickers, Product serial removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for repair
- from outside the United States, or used for commercia or institutional purposes (including but not limited to Products used for rental purposes): or Product returned without valid proof of purchase (see 2 below); or

trols, and installation or repair of systems outside the

Charges for installation or set up, adjustment of customer

To obtain warranty service in the United States of America

please visit our website at <u>www.vtechphones.com</u> or call 1 (800) 595-9511 for instructions regarding where to return the Product. In Canada, go to <u>phones.vtechcanada.com</u> or dial 1 (800) 267-7377 **NOTE:** Before calling for service, please review the user's manual - a check of the Product's controls and features may save

Except as provided by applicable law, you assume the risk

of loss or damage during transit and transportation and are

responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. VTech will return replaced product under this limited warranty to you,

vou a service call.

Other limitations

on any such modification.

exclusion may not apply to you

transportation, delivery or handling charges prepaid. VTechassumes no risk for damage or loss of the Product in transit. What must you return with the Product to get warranty service? Return the entire original package and contents including the Product to the VTech service location along with a

description of the malfunction or difficulty;

Include "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and Provide your name, complete and correct mailing address, and telephone number

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this product. VTech provides no other warranties for this product. The warranty exclusively

and you may also have other rights which vary from state to Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use) are limited to one year from date of purchase. Some states do not allow limitations o how long an implied warranty lasts, so the above limitation may

incidental, consequential, or similar damages (including, but not

limited to lost profits or revenue, inability to use the product, or

other associated equipment, the cost of substitute equipment,

product. Some states do not allow the exclusion or limitation of

incidental or consequential damages, so the above limitation or

In no event shall VTech be liable for any indirect, special,

and claims by third parties) resulting from the use of this

describes all of VTech's responsibilities regarding the product

There are no other expressed warranties. No one is authorized

to make modifications to this warranty and you should not rely

State Law Rights: This warranty gives you specific legal rights

DISCLAIMER AND LIMITATION OF LIABILITY VTech Communications, Inc. and its suppliers assume no

Company: VTech Communications, Inc.

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada

TECHNICAL SPECIFICATIONS

(For the US only)

Frequency Crystal controlled PLL synthesizer control Handset: 1921.536-1928.448 MHz **Transmit** frequency Telephone Base: 1921.536-1928.448

conditions at the time of use.

Telephone base: 6V DC @ 0.4A Charger: 6V DC @ 0.4A

Nominal Maximum power allowed by FCC effective range and IC. Actual operating range may vary according to environmental

DECT channel: 5

Handset: 2.4V Ni-MH battery requirement

Directory: 50 memory locations; up to 30 digits and 15 characters

Caller ID log: 50 memory locations;

up to 24 digits and 15 characters

Memory

Please retain your original sales receipt as proof of

responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR 97223, United States

energy and help protect our environmen We are proud to mark this product

when used with most T-coil equipped hearing aids and cochlear implants. The

TIA-1083 Compliant Logo is a trademark Association. Used under license The ENERGY STAR program (www. energystar.gov) recognizes and encourages the use of products that save

Telephones identified with this logo

have reduced noise and interference



with the ENERGY STAR label indicating it meets the latest energy efficiency guidelines.

combiné a été endommagé

- ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone : Lisez et comprenez bien toutes les instructions.
- ATTENTION : Ne pas installer le socle téléphonique à une auteur supérieure à 2 mètres.
- érieusement endommage Évitez d'installer le système téléphonique dans les endroits
- similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet

d'aération situées à l'arrière ou en dessous. Afin d'empêche

la surchauffe, ces ouvertures ne doivent pas être obstruée

en plaçant l'appareil sur un lit, divan, tapis ou autre surface

- 13. Afin de réduire les risques d'électrocution, ne démonte pas l'appareil, mais apportez-le plutôt à un centre de service
- 14. Ne surchargez pas les prises de courant et les rallonges 15. Débranchez cet appareil de la prise de courant et mmuniquez avec le département de service à la clientèle de VTech dans les cas suivants :
- Si l'appareil a été exposé à une source d'humidité telle

Lorsque le cordon d'alimentation est endommagé ou