

使用说明书  
Mini PC

 
**注意事项**

- 本产品仅适用于海拔2000米以下非热带地区。
- 请勿靠近水源或潮湿的地方，如浴室、厨房、地下室、游泳池等。
- 确保设备安装放置在平整处，避免本机跌落地面或受其它强烈冲击。
- 在阴凉、干燥、通风处存放。
- 设备存放温度：-15℃~45℃
- 尽量避免在强磁、强静电环境下使用。
- 当设备长期不使用，请切断电源，防止在雷雨天受到电击或异常电源电压的损伤。
- 一旦有水或其它液体泼洒到本机上，应立即关机，将本机擦拭，晾干后才使用。
- 切勿使用任何含化学成分清洁剂或其它液体擦拭本机，避免因腐蚀和受潮造成损伤，如确实有必要清洁，请用干燥的软布或纸巾擦拭。
- 请勿遮盖、堵塞外壳上的通风孔。请勿置于床、沙发、毛毯或类似物体表面使用。
- 请使用可靠接地插座，勿让插座过载，否则会引起火灾或电击。
- 请勿把异物放入设备内，否则可能会引起短路而导致火灾或电击。
- 请勿过度拉扯、扭曲电源线。
- 购买并使用正规品牌的内存和硬盘。
- 本公司对人为非正常的软硬件操作、维修或其他意外情况导致的设备内资料损失或删除不承担任何责任，也不承担因此而导致的其它损失。
- 请随时备份您的重要资料，以免丢失。
- 请不要自行拆卸本机，否则可能会丧失保修权利。

1

**产品介绍**

按键及接口布局示意图和说明

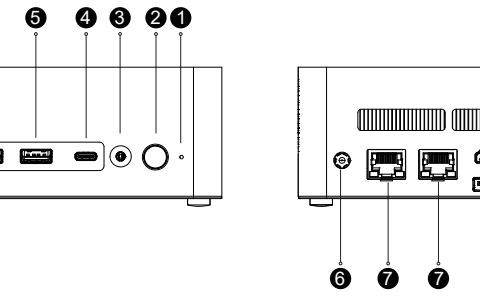


1 复位键  
2 电源按键  
3 3.5mm音频接口  
4 Type-C 接口  
5 USB 接口  
6 电源适配器接口  
7 以太网接口  
8 DP 接口  
9 HDMI 接口

**塑料包装安全警告：**  
请将塑料包装袋放在婴儿和儿童接触不到的位置，避免窒息危险。

2

**包装清单**

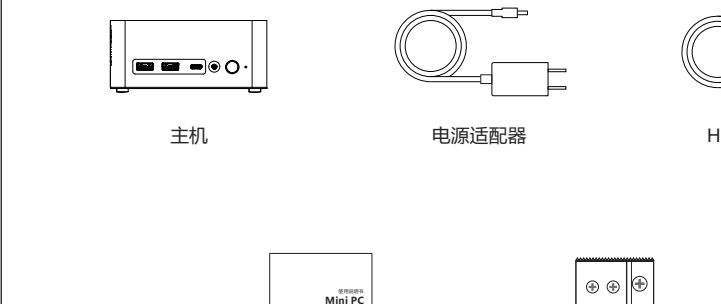 

主机  
电源适配器  
HDMI 线  
使用说明书  
螺丝包


**提示：**  
说明书中的产品、配件、用户界面等插图均为示意图，仅供参考。由于产品的更新与升级，产品实物与示意图可能略有差异，请以实物为准。

3

**快速安装指南**

 • 请自行准备有线或无线键盘、鼠标。

安装步骤：  
1. 连接电源适配器接入电源；  
2. 连接显示器HDMI接口；  
3. 连接键盘有线键盘鼠标（无线键盘进入系统后连接）；  
4. 连接以太网口接入家用路由器。  
5. 按下电源键，开机使用。

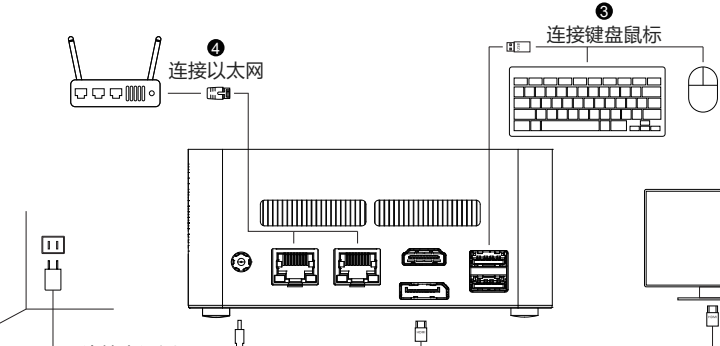

4

**电脑保修条款说明**

**一、服务范围**

1. 产品自销售之日起（以购机发票或三包凭证日期为准）七日内，整机出现电性能故障，您可以选择维修、换货或退货；  
2. 产品自销售之日起第八日至第十五日（以购机发票或三包凭证日期为准）；整机出现电性能故障，您可以选择维修或换货；  
3. 自购机之日起一年内（以购机发票或三包凭证日期为准）产品如出现主要部件故障，请送至本公司授权服务机构；  
4. 自购机之日起一年内（以购机发票或三包凭证日期为准）产品随机配备的外接设备、摄像头、各类网卡、线材、喇叭电池等机器内部的其它部件出现故障，请送至  
5. 本公司电脑服务机构只负责咨询和维修业务，退换货请您与销售商联系，退换货时请保证原机的所有附件（随机资料和其它配件）完好无缺。

**二、响应时间**

1. 为确保您的服务需求得到有效满足，当您的电脑出现故障时，请您首先拨打本公司电脑服务热线进行咨询和报修。

5

**电脑保修条款说明**

2. 2小时电话响应：当您到您的报修电话时，我们的授权服务机构将在2小时内与您取得联系，确定维修事宜。  
3. 7天x24小时服务：我司认证的服务机构将为您提供7天x24小时。

**三、服务细则**

1. 保修凭证：您的电脑在保修范围之内的硬件故障时，均可凭该电脑的“电脑维修主证书”（含三包凭证）或购机发票享受我们的维修服务；  
2. 保修起始日期：通常情况下，将以您的购机发票或“电脑保修证书”标注的日期计算。若您不能提供有效的保修凭证，或购买日期超过生产日期45天，我们将以产品的生产日期加45天计算保修日期；  
3. 在保修范围内维修或更换后的产品或部件，在剩余保修期内继续享有保修，剩余保修期不足3个月的按3个月计算，但对初始保修期在1年以下的产品或部件，在上述情况下，剩余保修期不足30天的按30天计算。

6

**有毒、有害物质或元素情况一览**

依据中国政府针对“电子信息产品污染控制管理办法”为控制和减少电子信息产品废弃后对环境造成的污染，促进生产和销售低污染电子信息产品，保护环境对人体健康，仅提供有关产品可能含有有毒及有害物质如下：

| 部件名称  | 有毒有害物质或元素 |       |       |           |           |             |
|-------|-----------|-------|-------|-----------|-----------|-------------|
|       | 铅(Pb)     | 汞(Hg) | 镉(Cd) | 六价铬(Cr6+) | 多溴联苯(PBB) | 多溴二苯醚(PBDE) |
| 电路板组件 | ×         | ○     | ×     | ○         | ○         | ○           |
| 金属外壳  | ×         | ○     | ○     | ×         | ○         | ○           |
| 塑料外壳  | ○         | ○     | ○     | ○         | ○         | ○           |
| 紧固件   | ○         | ○     | ○     | ×         | ○         | ○           |
| 电源    | ○         | ○     | ○     | ×         | ○         | ○           |
| 安装硬件  | ○         | ○     | ○     | ×         | ○         | ○           |
| 电缆    | ×         | ○     | ○     | ○         | ○         | ○           |
| 连接部件  | ×         | ○     | ○     | ×         | ○         | ○           |

○：表示该有毒有害物质在该部件所有均质材料中的含量均SJ/T11363-2006标准规定的限量要求以下。  
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量。

7

**有毒、有害物质或元素情况一览**

凡有下列情况之一者，不属于三包范围内。  
1. 超过三包有效期内；  
2. 未按产品使用说明的要求使用、维护、保管而造成的损失；  
3. 非承担三包的修理者拆动造成损失的；  
4. 无效三包凭证及有效购买凭证(能证明商品在有效期内的除外)；  
5. 擅自涂改三包凭证的；  
6. 三包凭证上的产品型号或编号与商品实物不符合的；  
7. 使用盗版软件造成损坏的；  
8. 使用过程中感染病毒造成损坏；  
9. 因不可抗力造成损坏的。

温馨提示：保修条例仅适用中国。

8

**有毒、有害物质或元素情况一览**

依据中国政府针对“电子信息产品污染控制管理办法”为控制和减少电子信息产品废弃后对环境造成的污染，促进生产和销售低污染电子信息产品，保护环境对人体健康，仅提供有关产品可能含有有毒及有害物质如下：

| 部件名称  | 有毒有害物质或元素 |       |       |           |           |             |
|-------|-----------|-------|-------|-----------|-----------|-------------|
|       | 铅(Pb)     | 汞(Hg) | 镉(Cd) | 六价铬(Cr6+) | 多溴联苯(PBB) | 多溴二苯醚(PBDE) |
| 电路板组件 | ×         | ○     | ×     | ○         | ○         | ○           |
| 金属外壳  | ×         | ○     | ○     | ×         | ○         | ○           |
| 塑料外壳  | ○         | ○     | ○     | ○         | ○         | ○           |
| 紧固件   | ○         | ○     | ○     | ×         | ○         | ○           |
| 电源    | ○         | ○     | ○     | ×         | ○         | ○           |
| 安装硬件  | ○         | ○     | ○     | ×         | ○         | ○           |
| 电缆    | ×         | ○     | ○     | ○         | ○         | ○           |
| 连接部件  | ×         | ○     | ○     | ×         | ○         | ○           |

○：表示该有毒有害物质在该部件所有均质材料中的含量均SJ/T11363-2006标准规定的限量要求以下。  
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量。

9

**有毒、有害物质或元素情况一览**

凡有下列情况之一者，不属于三包范围内。  
1. 超过三包有效期内；  
2. 未按产品使用说明的要求使用、维护、保管而造成的损失；  
3. 非承担三包的修理者拆动造成损失的；  
4. 无效三包凭证及有效购买凭证(能证明商品在有效期内的除外)；  
5. 擅自涂改三包凭证的；  
6. 三包凭证上的产品型号或编号与商品实物不符合的；  
7. 使用盗版软件造成损坏的；  
8. 使用过程中感染病毒造成损坏；  
9. 因不可抗力造成损坏的。

温馨提示：保修条例仅适用中国。

10

**有毒、有害物质或元素情况一览**

凡有下列情况之一者，不属于三包范围内。  
1. 超过三包有效期内；  
2. 未按产品使用说明的要求使用、维护、保管而造成的损失；  
3. 非承担三包的修理者拆动造成损失的；  
4. 无效三包凭证及有效购买凭证(能证明商品在有效期内的除外)；  
5. 擅自涂改三包凭证的；  
6. 三包凭证上的产品型号或编号与商品实物不符合的；  
7. 使用盗版软件造成损坏的；  
8. 使用过程中感染病毒造成损坏；  
9. 因不可抗力造成损坏的。

温馨提示：保修条例仅适用中国。

11

User manual  
Mini PC

 
**Attention**

- This product is suitable for non-tropical areas below 2000 meters above sea level.
- Do not put the equipment in bathrooms, kitchens, basements, etc.
- Ensure that the equipment is installed in a stable place to avoid the machine falling or other serious impacts.
- Store and use in a cool, dry and ventilated place, and do not close to the radiation source or heat source.
- Equipment storage temperature: -15°C~45°C
- When the device is not in use for a long time, please cut off the power to prevent damage from electric shock or abnormal power supply voltage during thunderstorms.
- Once liquid is spilled on the device, it should be shut down immediately, and the machine should be wiped and dried before use.
- Do not use any chemical detergents or liquids to wipe the machine to avoid damage caused by corrosion and moisture. If it is really necessary to clean, wipe it with a soft, dry towel.
- Do not cover or block the ventilation holes. Do not use on beds, sofas, blankets or similar surfaces.
- Please use a reliable grounding socket and do not overload the socket, otherwise it will cause fire or electric shock.
- Do not put external objects into the device, otherwise a short circuit may cause fire hazard or electric shock.
- Do not pull or twist the power cord excessively.
- Please purchase and use genuine brand memory and hard disk.
- Please keep a backup of your important data on time to avoid loss.
- Please do not disassemble the device or the warranty rights will be lost.

1

**Product Introduction**

The layout of buttons and ports

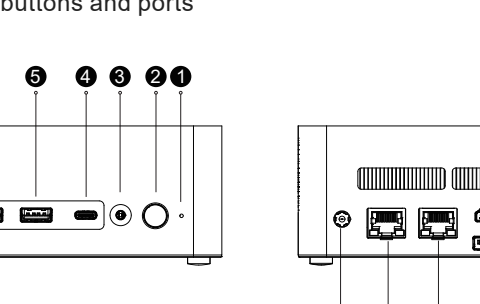


1 Reset button  
2 Power key  
3 3.5mm audio port  
4 Type-C port  
5 USB port  
6 Adapter port  
7 Network port  
8 DP port  
9 HDMI port

**Plastic Packaging Safety Warning:**  
Please keep Plastic packaging bags out of reach of infants and children to prevent the risk of suffocation.

2

**Product Introduction**

 The layout of buttons and ports

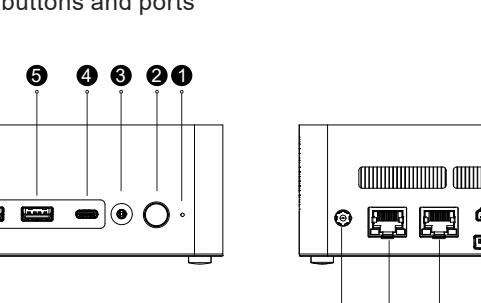


1 Reset button  
2 Power key  
3 3.5mm audio port  
4 Type-C port  
5 USB port  
6 Adapter port  
7 Network port  
8 DP port  
9 HDMI port

**Plastic Packaging Safety Warning:**  
Please keep Plastic packaging bags out of reach of infants and children to prevent the risk of suffocation.

3

**Product Introduction**

 The layout of buttons and ports

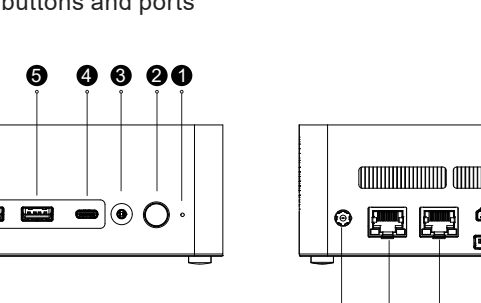

1 Reset button  
2 Power key  
3 3.5mm audio port  
4 Type-C port  
5 USB port  
6 Adapter port  
7 Network port  
8 DP port  
9 HDMI port


**Plastic Packaging Safety Warning:**  
Please keep Plastic packaging bags out of reach of infants and children to prevent the risk of suffocation.

4

**Installation guide**

 • Please prepare yourself: Wired or wireless keyboards and mouse.

Installation Steps:  
1. Connect the power adapter to the power supply;  
2. Connect the HDMI interface of the display;  
3. Connect the keyboard to the wired keyboard and mouse (the wireless keyboard can be connected after entering the system);  
4. Connect to network with a router;  
5. Press the power button to turn on the machine.

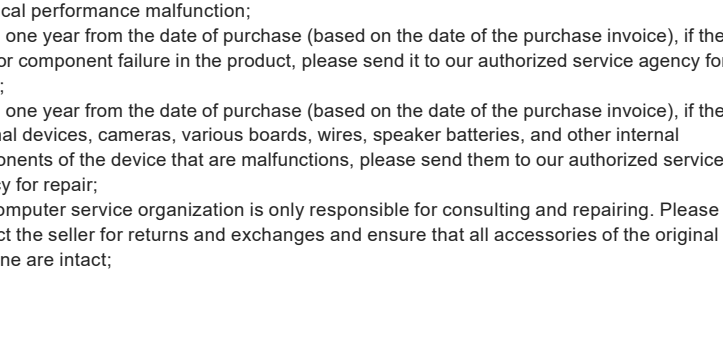

5

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

6

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

7

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

8

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

9

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

10

**Warranty Terms**

**① Service scope**

1. Within seven days from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair, exchange, or return if the entire device had electrical performance malfunction;  
2. From the eighth to fifteenth day from the date of sale of the product (based on the date of the purchase invoice), consumers can choose to repair or exchange the product if there was an electrical performance malfunction;  
3. Within one year from the date of purchase (based on the date of the purchase invoice), if there is a major component failure in the product, please send it to our authorized service agency for repair;  
4. Within one year from the date of purchase (based on the date of the purchase invoice), if the external devices, cameras, various boards, wires, speaker batteries, and other internal components of the device that are malfunctions, please send them to our authorized service agency for repair;  
5. Our computer service organization is only responsible for consulting and repairing. Please contact the seller for returns and exchanges and ensure that all accessories of the original machine are intact;

**② Response time**

1. To ensure the consumers' demands are effectively met, Please call our service hotline for consultation and repair if malfunctions;

11