

尺寸：70*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）



MINISO

PRODUCT MANUAL

 
Wireless Earbud MS186

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

01 Introduction to Headphones	2
02 pairing operation	4
03 Touch Operation	7
04 Introduction of Bluetooth remote control	13
05 Item list	16
06 Warranty Statement	19

Welcome to MINISO Wireless Earphones

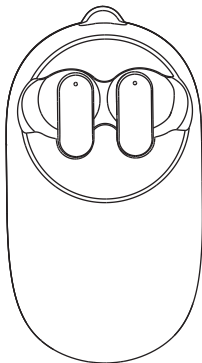


Take out and pair it

When using for the first time, please take out both sides of the earphones at the same time. The white light on the earphones will flash intermittently, and the earphones will automatically pair.


Product Description

Bluetooth LED
Display light

 
Multi function key
touch position

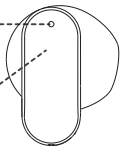

Charging Contacts

 

LED indicator

 

Type-c Interface

Specification of Product

Model of Product: MINISO-MS186

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter: $\phi 13\text{mm}$

Impedance: $32\ \Omega$

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity: $-42\text{dB}\pm 3\text{dB}$

Earphone Input: $5\text{V}\cdots 25\text{mA}$

Bluetooth remote control Model: MS186C

Bluetooth remote control Input : $5\text{V}\cdots 300\text{mA}$

Bluetooth remote control Output : $5\text{V}\cdots 50\text{mA}$

Earphone Battery Capacity: 25mAh

Bluetooth remote control battery capacity : 300mAh

Duration: Approx. 4H (Earphone)

Earphone Charging Time: Approx. 1H


Bluetooth remote control charging time : Approx. 1.5H

Connect with Bluetooth device



Open the Bluetooth settings of the Bluetooth device you want to pair with, go to Options, find the Bluetooth pairing name of the headset "MINISO-MS186" and the Bluetooth pairing name of the Bluetooth remote control "MINISO-MS186C", click on the pairing name. Connect.

Indicator Light Description

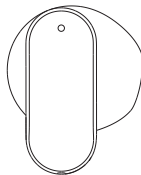


·When the headset is on: the white light flashes alternately.

·When the headset is off: the white light flashes 3 times and then turns off.

·Pairing status: The primary ear white indicator blinks slowly, and the secondary ear indicator is off.

· Connection successful: no light

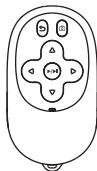

· Headphone charging: The white light on the headphone is always on, and the white light on the headphone is off after it is full.

· Bluetooth remote control charging: plug in the Type-c charging cable, the indicator light on the remote control flashes red, and the red light is always on when it is fully charged.

Power On

Auto Power On: Remove the headset from the Bluetooth remote control, the headset will turn on and beep "Du" four times.

Manual power on: When the headset is off (outside the Bluetooth remote control), press and hold the headset touch button for about 3 seconds, the headset will turn on and beep "Du" four times.

Manual power on (Bluetooth remote control): long press the remote control return button for about 3 seconds, the remote control will power on and the red light will flash.

Power Off


Auto power off (headset): put the left and right headset in the on state directly into the Bluetooth remote control, the headset turns off and charges. If the headset is not connected to a Bluetooth device, it will turn off automatically after 3 minutes and beep "Du" four times.

Auto power off (Bluetooth remote control): the device is not connected to a Bluetooth device in the power-on state, and will automatically power off after 5 minutes. If the device is connected to a Bluetooth device and the Bluetooth remote control is not used for 2 hours, the device will automatically shut down and the indicator light will turn off.

Manual shutdown (headphones) : Long press the touch keys of the left and right headphones in the power-on state for about 5 seconds, and the headphones will shut down and emit 4 sounds of "Du".

Manual shutdown (Bluetooth remote control) : Long press the back button of the Bluetooth remote control in the power-on state for about 5s, and the Bluetooth remote control will automatically shut down.

Once Press

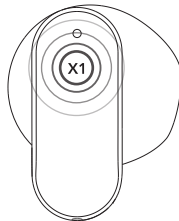

Music mode



 
Play/Pause

Phone mode



Call Answer/End

Double Press

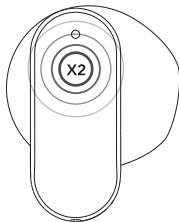

Music mode

 


Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

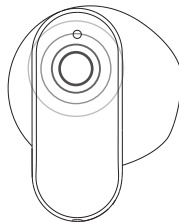

Wake up voice assistant



 
When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

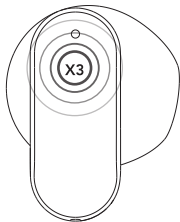

Music mode



 
Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear **all** connected devices and click the left and right earphones 5 times at the same time.

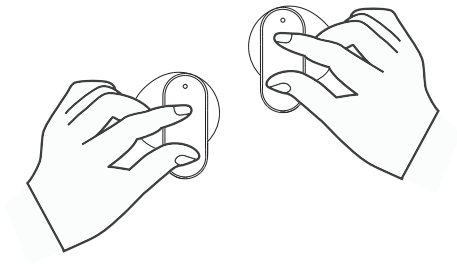

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

 Switch between game mode and music mode

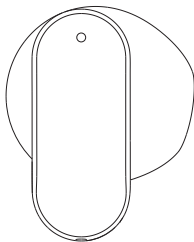

Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode




Press and hold again for 2 seconds


Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

 Controller key description

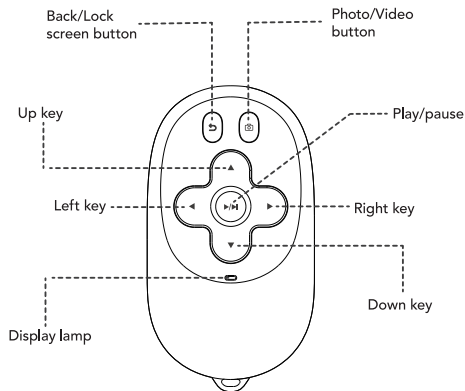

Follow the instructions

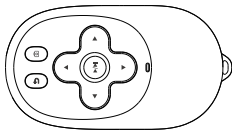 

- Back/Lock button: Press once to return to the home screen and press twice to lock the screen.
- Photo/Video button: In the photo mode, press once to take a picture. In the video mode, press once to start recording and press once again to end recording.
Note (In non-shooting mode, short press this button will increase the volume).
- Up key: Short press up page, long press to increase volume.
- Down key: Short press to turn down the page, and long press to lower the volume.
- Left button: Turn the page left first.
- Right button: Turn the page right first.
- Play/Pause button: click once to play/pause, (under Tiktok video playback, double click to like).

Common operating problems

The Camera/Video button cannot control the camera or video

- Please go to the corresponding software to check whether "Use volume keys to control shooting" is enabled.

 
IPhone or Ipad controls fail

- Please first check whether the auxiliary touch is turned on and whether the tracking sensitivity is 10%-50%.


*Note: If the key function cannot be officially used or abnormalities occur during the use of the Apple cell phone or Ipad, please operate in the following way.

- Reset the touch point: long press the photo button after connecting the cell phone to enter the touch point setting, the red light is always on, then short press the up, down, left and right buttons to adjust the position of the touch point, the touch point position adjustment is complete, long press the photo button to confirm, the red light is off.
- Perform a close-open assisted touch operation on the device side.


Item list




Headphones *1

 

Charging case *1

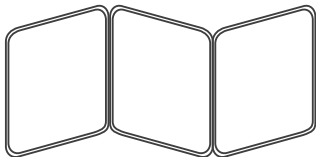 

Instruction *1

 

Charging cable *1



Lanyard *1

FCC ID: 2BHJR-MS186

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference **will** not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: MIRAMONT SOLUTIONS LLC
Address: 34218 HOURGLASS ST, TEMECULA,
CA 92592, United States
Contact Name: Wenyi Wang
Telephone No: (951) 401-3633
Email: scotttv6688@gmail.com

Warranty statement

MINISO product warranty card

Product number			SN number	
User info	name		Purchase date	
	telephone			
	address			
	Invoice number			
Sales unit information	name	(stamp)		
	address			
	telephone			

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7@hifi-earphone.com



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document:

If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.


● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery to be damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

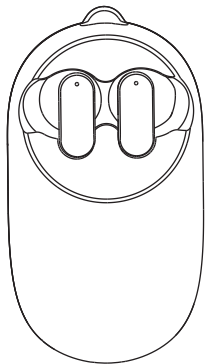

Copyright©2024 MINISO Group affiliated
companies and its licensors. All rights reserved

Creating sound
to live with