


## TF Card Installation

1. Take out the back cover, and the card sockets will be shown.
2. Insert the TF card into the card slot according to the direction shown, and finally close the cover.

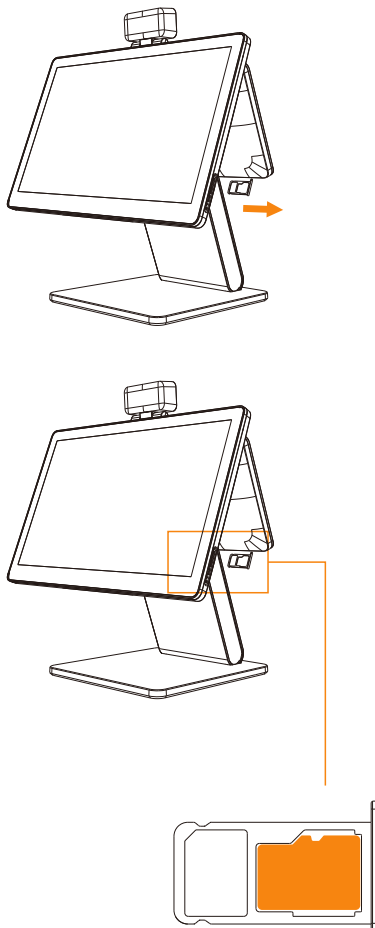

## Specification

Processor	Dual-Core 1.8GHz + Quad-Core 1.4GHz or above
OS	Android 11 or above
Memory	2GB DDR, 16GB eMMC, Ext. TF card slot
Display	Main Display: 15.6-inch, 1920*1080 Customer Display: 10.1-inch, 1280*800 or above
Camera (Optional)	Single-lens Camera Dual-lens Camera 3D Depth Sensing Camera
Communications	WiFi/Bluetooth
Smart Card Reader (Optional)	Support
Contactless Card Reader(Optional)	ISO14443 Type A/B, Mifare
Peripheral Ports	4 USB, 1 Micro USB, 1 RJ11, 1 RJ12, 1 RJ45, 1 Audio Jack
Audio	Digital Audio Speaker
Power Supply	12V/3A
Others	1 Power Key
Environmental	Operating temperature: -5℃ ~ 45℃ Storage temperature: -25℃ ~ 60℃
MDM (Optional)	Mobile Device Management

## Accessories

Main Device	1 Set
Power Adapter	1 Piece
User Guide	1 Volume

Before using the device, ensure that all the accessories above are included in the package.

If you have any problems, please contact the services provider of the distributors.

Telpo


# C8

Smart Cash Register


# User Manual

Telepower Communication Co.,Ltd.

## Brief Introduction


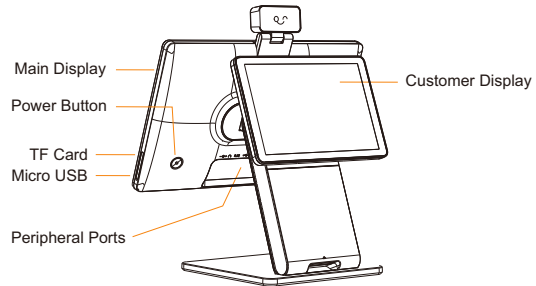


## I/O interface

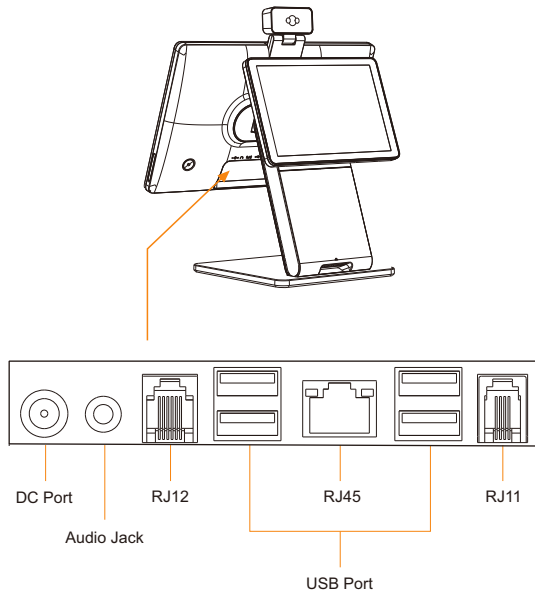


## Wire Trimming


1. Pull the back cover up from the bottom groove.

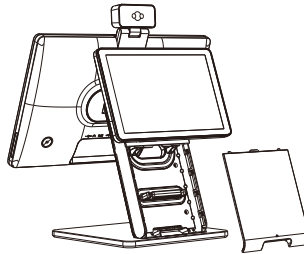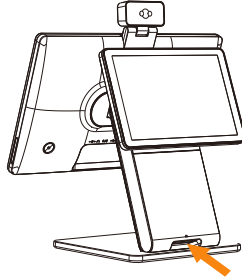

2. Thread the wire through the threading hole from below to the corresponding interface under the main screen.


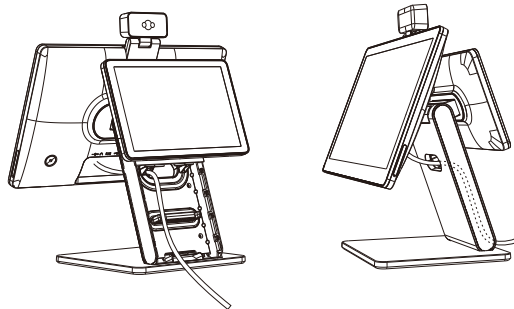


3. Align the top three clasps of the cover with the column clasps, and then press down the cover.

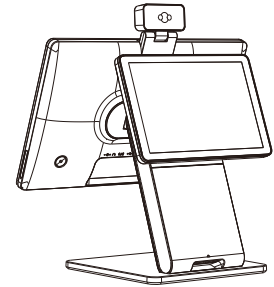

## Power On

1. Connect the power supply and press the power button to turn on the terminal.

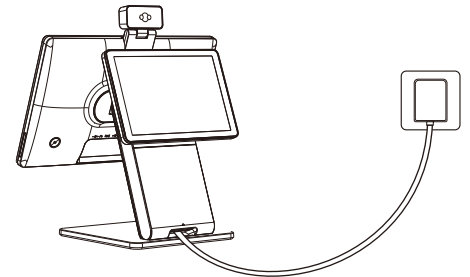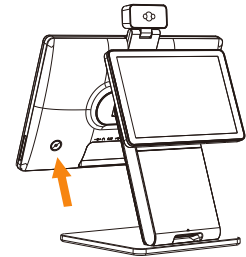

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.