

 
 
 
 
 
 


80mm

80mm

onn.™


Wireless Party Speaker
Quick Start Guide

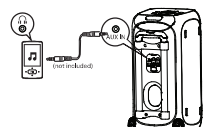 

 


 
<p>What's in the Box?</p> <p>1 AC charging cable 1 Quick Start Guide 1 Wireless Party Speaker</p>  	<p>Check to make sure you have everything below</p> 	<p>Get to Know Your Wireless Party Speaker</p>  <ol style="list-style-type: none"> 1. LED Display 2. Source 3. Bluetooth / Party sync 4. Power 5. Master volume control 6. Previous track 7. Play / Pause 8. Next track 9. Wall light 10. Bass boost 11. Light 12. 3.5 mm AUX input 13. Reset 14. USB Emergency power port 15. AC charging port 16. Microphone volume control 17. Guitar volume control 18. 1/4" Guitar port 19. 1/4" Microphone port 	<p>Get to Know Your Wireless Party Speaker</p>  <p>Tips:</p> <ul style="list-style-type: none"> - Installation must be done by qualified persons using safe rigging standards. - The installer is responsible for proper selection and use of mounting hardware, to properly and safely pole-mount the speakers. - Always follow instruction and precaution advice from speaker stand manufacturer. 	<p>Let's Get Started!</p> <p>01</p> <p>The battery icon will flash when charging, and all battery segments will be lit and remain solid white once fully charged.</p> <p>Fully charge the battery if you might not use this speaker in the near future. Place it in a cool, dry place. Recommend to charge it at least one time for every half year, in order to keep the battery performing well. Empty battery too long may result in fewer hours of usage between charges.</p> <p>Built-in Rechargeable Li-ion Battery: 14.8V/2500mAh</p> 	<p>Connect Your Wireless Party Speaker</p> <p>02</p> <p>Connect to your device through Bluetooth® wireless technology, search for the entry "onn. Party Speaker L".</p>  <p>PLACEMENT</p> <p>Caution: Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. Place the speaker on a flat, stable surface and ensure that the rubber feet side is down.</p>	<p>Want Your Party to the Next Level?</p> <p>03</p> <ol style="list-style-type: none"> 1. Power on both speakers, press & hold # of each speaker to enter Party Sync Mode. 2. When two speakers paired, you will hear left channel, right channel. The left channel is the master. 3. Use your mobile device to pair with the master speaker by Bluetooth pairing method. 4. Press & hold # again to disconnect Party Sync Mode. 
--	--	--	---	---	--	---

80mm

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

Need help? We're here for you every day 7 a.m. - 9 p.m. CST. 1-888-510-2630 Give us a call!



<p>Wired Use? Yes!</p> <p>04</p> <ol style="list-style-type: none"> 1. Use a 3.5 mm AUX cable (not included) to connect the speaker to your audio source. 2. In AUX mode, # # # can't be used, you can ONLY control them by your audio source device. 	<p>Listen to Your Favorite Radios</p> <p>05</p> <ol style="list-style-type: none"> 1. Press # to select FM mode. 2. Press # or # to scan and select FM stations step by step. 3. Press hold # or # to seek (jump to the next available station). 4. In FM Mode, press and hold # to assign the current station to a preset number, the LED screen will show "SAV" to show the station has been saved. The preset number can be changed by pressing #. 5. In FM Mode, press # repeatedly to select a saved radio station. 	<p>Want to Sing A Song?</p> <p>06</p> <ol style="list-style-type: none"> 1. Connect your Microphone (not included) or Guitar (not included) to the MIC or GUITAR port. 2. Play Guitar through the speaker. 3. Sing along with the Microphone when music played on Bluetooth/AUX-/FM mode. 4. Rotate the MIC or GUITAR knob to adjust the Microphone or Guitar volume. 	<p>Want More Lighting Effects?</p> <p>07</p> <ol style="list-style-type: none"> 1. Press & hold # to turn on/off the light. 2. Press # once to turn on/off the light effect. 3. Quick press # to switch between 6 different multicolor LED lightings. 	<p>Charge Your Device</p> <p>08</p> <p>USB-A charging port with emergency power can charge your other smart devices (5V==2.1A output), when this Wireless Party Speaker is powered on.</p> 	<p>But Wait ... There's More!</p> <p>09</p> <ul style="list-style-type: none"> -Do not sit or lean on the speaker or push it sideways to avoid tip-over and possible damages. -Place the speaker on a flat, stable surface and ensure that the rubber feet side is down. -Always keep the charging port dry before connecting AC power. -To ensure it is waterproof, always close the protective cover securely.  <p style="text-align: right;">November 23, 2022_v1</p>
--	--	--	---	---	--

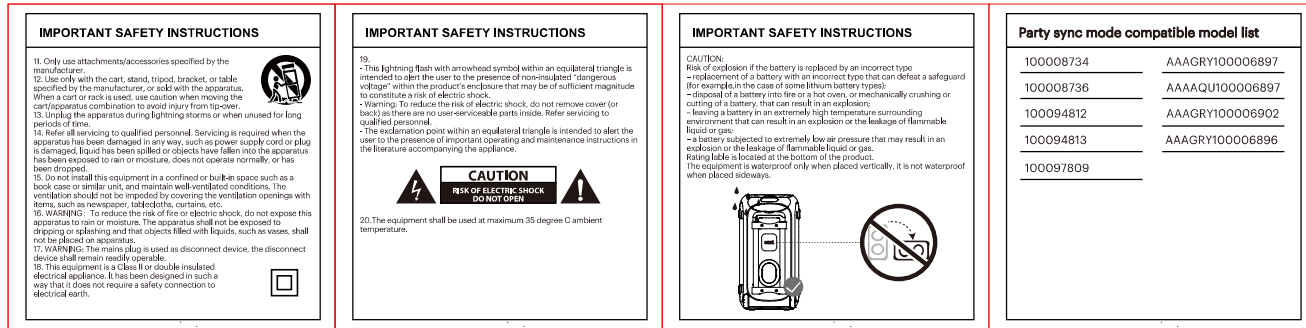 
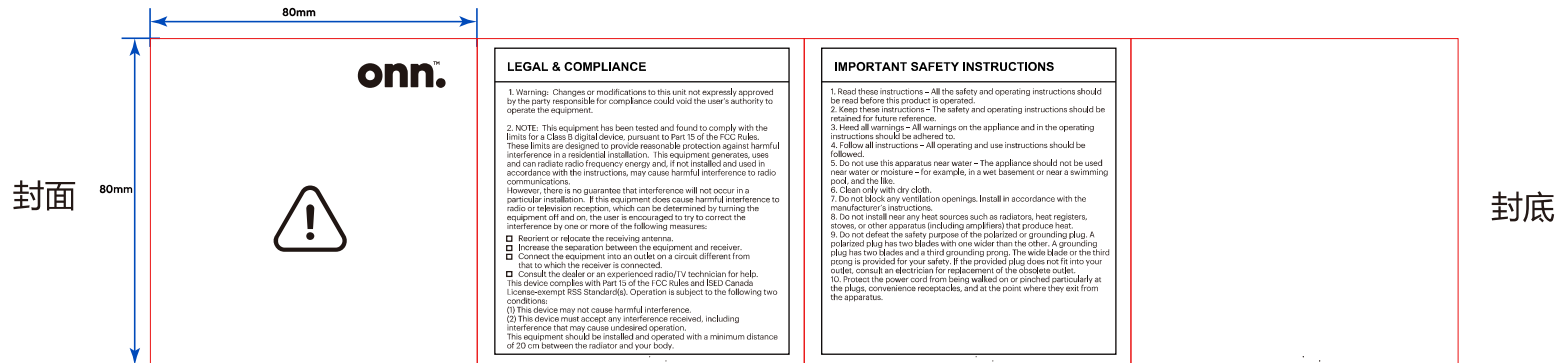 
Font:
Graphik Regular


ICE



VERMILLION





 奋达科技	料号	12.005.0004.06404		尺寸(mm)	展开尺寸: 320x80, 成型尺寸: 80x80		环保要求	说明书类说明: 1、公差 (mm): 0<≤50 (+0.3/-0.2), 50<≤150 (+1/-0.5), >150 (+1.5/-1)。有特殊要求的, 按标示公差执行。 2、要求图文清晰可辨, 内容完整, 折叠正确, 无重影, 墨层、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	PA2323 户外音箱项目	产品型号	PA2323	材质	80g书纸		<input checked="" type="checkbox"/> RoHS2.0、Reach	
日期	20221208	部件名称	安规手册	页码P数	8/p		<input type="checkbox"/> 包装指令94/62/EC	
包装工程师	李小明	平面工程师	李莹	颜色	单色印刷		<input type="checkbox"/> 大豆油墨印刷	
设计版本	变更提出人	变更原因	是否有可参考	表面处理	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 光油 <input type="checkbox"/> 哑油 <input type="checkbox"/> 水性光油 <input type="checkbox"/> 水性哑油 <input type="checkbox"/> UV油 <input type="checkbox"/> 光胶 <input type="checkbox"/> 哑膜 <input type="checkbox"/> 防刮花哑膜		<input type="checkbox"/> 无氯漂白工艺	
A0			<input type="checkbox"/> 刀模 <input type="checkbox"/> 颜色	工艺	<input checked="" type="checkbox"/> 无 <input type="checkbox"/> 烫金 <input type="checkbox"/> 烫银 <input type="checkbox"/> 击凸 <input type="checkbox"/> 击凹 <input type="checkbox"/> 压网 <input type="checkbox"/> 局部UV <input type="checkbox"/> 其它		<input type="checkbox"/> 粘合剂为非石油基	
				条码要求	<input type="checkbox"/> 无条码 <input checked="" type="checkbox"/> 有条码 (清晰易扫描)		<input type="checkbox"/> 油墨中禁止使用矿物油 (法国)	<input checked="" type="checkbox"/> TPCH (美国)
				装订方式	<input checked="" type="checkbox"/> 风琴折 <input type="checkbox"/> 包心折 <input type="checkbox"/> 骑马钉 <input type="checkbox"/> 胶装 <input type="checkbox"/> 线装 <input type="checkbox"/> 其它			