

**MONSTER®**

# ROCKER SPORT

PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER

**270**

**USER MANUAL**



**MODEL: MNRKR270-SPORT**

# THANK YOU FOR CHOOSING MONSTER

Congratulations on your Rocker 270 Sport indoor/outdoor wireless speaker. Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. We take great pride in presenting this product to you now. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit: [MyMonsterAudio.com](http://MyMonsterAudio.com).

## FOLLOW US:



@MyMonsterAudio



@MyMonsterAudio



/MyMonsterAudio

## PACKAGE CONTENTS

Included with your Rocker 270 Sport purchase:



**Rocker 270 Sport**



**AC Power Cable**  
(Length: 6')



**User Manual &  
Quick Start Guide**

# TABLE OF CONTENTS

<b>PRODUCT CONTROLS</b>	<b>1</b>	<b>FEATURES</b>	
<b>POWER &amp; BATTERY</b>		▪ Standby Mode	<b>5</b>
▪ Power/Charging	<b>2</b>		
▪ AC Pass Through Outlet	<b>2</b>	<b>TROUBLESHOOTING</b>	<b>7</b>
▪ Battery Level Indicator	<b>2</b>	<b>NOTES</b>	<b>8</b>
▪ USB Power Banks	<b>2</b>	<b>SPECIFICATIONS</b>	<b>9</b>
<b>AUDIO</b>		<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>10</b>
▪ AUX-IN (3.5 mm)	<b>2</b>	<b>LIMITED WARRANTY</b>	<b>11</b>
▪ Bluetooth Pairing	<b>3</b>	<b>FCC WARNING STATEMENT</b>	<b>12</b>
▪ 1/4" Guitar/Mic Inputs & Gain	<b>3</b>		
▪ FM Radio	<b>3</b>		
▪ True Wireless System (TWS)	<b>4</b>		
▪ Equalizer Presets (Bluetooth/AUX-IN ONLY)	<b>5</b>		
▪ Saving Radio Stations (FM)	<b>5</b>		

# PRODUCT CONTROLS

## Control Panel



### Control Panel

- 1. MIC/GUITAR 1/4" Input
- 2. GAIN Knob
- 3. USB Power Bank
- 4. AUX IN
- 5. LED Display
- 6. SOURCE Button
- 7. BLUETOOTH Button
- 8. TWS Button
- 9. NUMBER Buttons
- 10. BATTERY LEVEL Button
- 11. VOLUME Knob
- 12. ARROW Buttons

 
### LED Display

- 13. LED Display
- 14. BATTERY Indicator
- 15. AUX Indicator
- 16. FM Display
- 17. Bluetooth Indicator

### Back Panel

- 18. POWER ON/OFF Switch
- 19. INPUT POWER Port

## LED Display

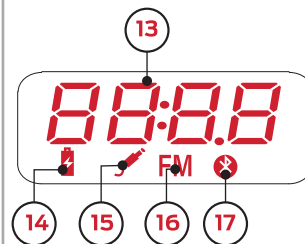

## Back Panel

 


# POWER & BATTERY

**IMPORTANT:** Before first use, charge for ~7 hours.

## Power/Charging

- Connect the INPUT POWER port to an external power source using the included power cord.

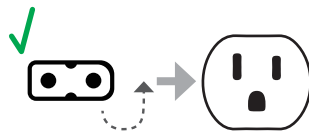


**Full Charge** – achieved in 7 hours while powered OFF  
– achieved in 15 hours while powered ON.



- If the unit was fully charged, it is better to charge for the unit after 3 month if not use, and don't exceed 6 months.
- Need to charge for the unit after use, don't exceed 15 days if the unit no power.

 - Flip the switch UP to turn ON the speaker.  
(“HI” will appear on the LED display. The speaker will connect to the last selected source.)
- Flip the switch DOWN to turn OFF the speaker.

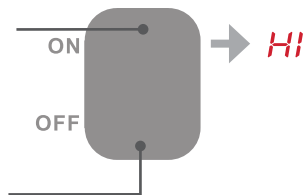

## USB Power Banks

- Connect device to the speaker via the 5V1A USB port to charge device from the speaker's internal battery.



(USB cable not included.)

 


**USB port is for charging ONLY**  
– they will not make audio connections.

# AUDIO

## AUX-IN (3.5mm)

- Connect a music device to the AUX IN port with a standard 3.5 mm jack. The speaker will automatically change to AUX mode.

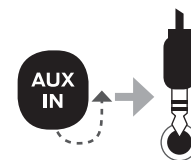

Speaker will make audible and visual LED display confirmation.

AUX

“AUX IN”

## Bluetooth Pairing

- 1 Place your mobile device within 3 feet of the speaker.



Make sure **Bluetooth** is enabled on your mobile device.



- 2 Press the **BLUETOOTH** button to set the speaker to Bluetooth mode.

(Press)



The speaker will automatically enter pairing mode.

The speaker will make audible and visual **LED** confirmation. **Bluetooth** icon will flash in pairing mode.



If the **Bluetooth** icon is **NOT** flashing, press and hold the **BLUETOOTH** button to manually enter pairing mode.

- 3 Select "**MONSTER RKR 270 SPORT**" on your mobile device to pair with the speaker.



The speaker will make audible confirmation and the **Bluetooth** icon will stop flashing.



**"Connected"**



**~30 feet** max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

 
## 1/4" Guitar/Mic Inputs & Gain/Echo Controls

- Connect an instrument, microphone, or other device to the **MIC/GUITAR** port(s) with a standard 1/4 inch jack.



The device(s) will automatically transmit audio playback through the speaker in the current mode.

- Turn **GAIN** control knobs clockwise to increase their effect, and counter-clockwise to decrease their effect.

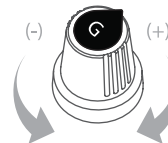

Each 1/4 inch port has its own **GAIN** knobs that can be adjusted independently.



**Devices plugged into the 1/4 inch ports will transmit audio playback in all modes/sources.**

## FM Radio

- 1 Press the **SOURCE** button to change the speaker to **FM RADIO**.

(Press)



Speaker will make audible and visual **LED** display confirmations.

**106.9** FM  
**"Radio"**

- 2 Press the **ARROW** buttons to change radio frequency. Press and hold the **ARROW** buttons to scan for a station.

(Press or Hold)



## True Wireless System (TWS)

Wirelessly connect two **ROCKER 270 SPORT** speakers together.

 
- 1** Place two Rocker 270 Sport speakers within 10 feet of each other.




- 2** Connect your music device to one of the speakers via **BLUETOOTH**.



Leave the second speaker in **BLUETOOTH** mode without connecting to a device.

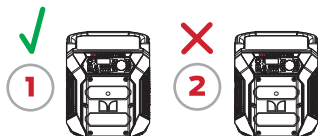

 - 3** Press and hold the **TWS** pairing button for 3 s to activate **TWS** pairing.

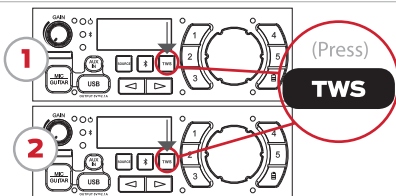

To disconnect a speaker, press the **TWS** button.

(Press)

**TWS**



**~30 feet** max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

## Equalizer Presets (Bluetooth/AUX-IN ONLY)

- Press a NUMBER BUTTON (1-5) to change the speaker's equalizer settings.

Setting will show on the speaker's LED display.

E-1

BUTTON	SETTING	LED
1	FLAT	E-1
2	JAZZ	E-2
3	DEFAULT	E-3
4	GUITAR	E-4
5	VOCAL	E-5

## Saving Radio Stations (FM)

- Save the current radio station by pressing and holding one of the NUMBER BUTTONS (1-5).

106.9 MHz

(Hold)

1

The LED display will confirm the saves station (P-1, P-2, etc.)

P 1

Press the NUMBER KEY while in radio mode to go to the corresponding SAVED station.

(Press)

1

# FEATURES

## Standby Mode

- Press and hold the VOLUME knob for ~3 seconds to put the speaker in standby mode.

(Press & Hold ~3 seconds)



 
LED indicators will shut off. Power LED will turn on.

OFF



- Press any button or turn the VOLUME knob to wake the speaker up from standby.

(Turn)



**The speaker will automatically enter standby mode after ~15 minutes of inactivity or lack of connection.** Standby mode can be manually enabled in any mode.





# TROUBLESHOOTING

<b>Speaker is not powering on</b>	<ul style="list-style-type: none"> <li>▪ Verify that the <b>POWER</b> switch is fully turned to the <b>ON</b> position. (see pg. 2)</li> <li>▪ Ensure the speaker is not in <b>STANDBY MODE</b>.</li> <li>▪ Make sure <b>AC POWER</b> cord is fully inserted into the unit. (see pg. 2)</li> </ul>
<b>Buttons are not responding</b>	<ul style="list-style-type: none"> <li>▪ Reset the speaker by turning the power <b>OFF</b>, and then back <b>ON</b>. (see pg. 2)</li> <li>▪ Unplug the <b>AC POWER</b> cord, then plug it back in. (see pg. 2)</li> </ul>
<b>No music is playing</b>	<ul style="list-style-type: none"> <li>▪ Make sure the speaker is set to the same source as your audio device. If you are playing audio via <b>AUX</b> cable, make sure the speaker is in <b>AUX IN</b> mode, etc. (see pg. 3-5)</li> <li>▪ Make sure the <b>VOLUME</b> is high enough on your audio device as well as the speaker.</li> </ul>
<b>Bluetooth audio quality is poor</b>	<ul style="list-style-type: none"> <li>▪ Move your music device closer to the speaker.</li> <li>▪ Remove objects that may be interfering with the wireless connection.</li> </ul>
<b>Bluetooth device is not pairing</b>	<ul style="list-style-type: none"> <li>▪ Verify that the speaker and your device have <b>BLUETOOTH</b> mode active. (see pg. 3)</li> <li>▪ Make sure the speaker and/or your device is not already paired with another device.</li> <li>▪ Check that the speaker is in pairing mode. (see pg. 3)</li> <li>▪ Turn the speaker <b>OFF</b>, and then back <b>ON</b>. Press and hold the <b>BLUETOOTH</b> button to manually enter pairing mode. (see pg. 3)</li> </ul>
<b>Contact our support team for additional services</b>	<p><b>Call:</b> 1-800-976-0677</p> <p><b>Email:</b> <a href="mailto:support@mymonsteraudio.com">support@mymonsteraudio.com</a></p> <p><b>Hours of Operation:</b> Monday - Friday: 7:00 am - 5:00 pm (PST) Saturday - Sunday: CLOSED</p>

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

# SPECIFICATIONS

General	
Bluetooth Version	5.0
Power Input	AC 100-240V
Speaker Drivers	5" driver x1 + 2" Tweeter x3 + Tube
THD + Noise	<10%
Cabinet Material	Plastic
Battery Capacity	11.1V2200mAh
USB Bank Output	5V1A
Dimensions (W x H x D)	10" x 6.5" x 11.4"
Weight	9.92 lbs

Operating Temperature	
Operating Temperature Range	32F° - 104F°
Operating Humidity Range	40~90% RH
Storage Temperature Range	-13F° to 158F°

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
  - 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
  - 3) Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
  - 4) Follow all instructions – All operating and use instructions should be followed.
  - 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water- The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
  - 6) Clean only with dry cloth.
  - 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
  - 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - 11) Only use attachments/accessories specified by the manufacturer.
  - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
  - 13) Unplug this apparatus during lighting storms or when unused for long periods of time.
  - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
  - 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
  - 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
  - 18) Attention should be drawn to the environmental aspects of battery disposal.
  - 19) The use of apparatus in moderate climate.
  - 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.



Protective earthing terminal. The apparatus should be connected to a mains socket outlet with protective earthing connection.

# FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



## RF exposure statement

This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

## IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

 <p>A lightning flash and arrowhead within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<div><b>CAUTION</b></div> <div><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></div> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>An exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## WARNING

Prevent fire and shock hazards. Do not use extension cords or outlets that expose plug blades. Do not expose cables and plugs to rain or moisture.

Do not attempt to perform any servicing that is not included in the operating instructions. Do not attempt to replace the battery, as incorrect installation can cause fire or explosion. For service, contact qualified service personnel.

Do not remove cover or back of product. There are no user-serviceable parts inside. Attempting to modify controls or performance beyond manufacturer specifications may result in hazardous exposure to radiation.



# MUSIC WITHOUT LIMITS



Monster and the Monster logo are registered trademarks of Monster Inc., and its subsidiaries in the U.S. and other countries, used under license. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries. NWS, NOAA, and the NOAA Radio logo are registered trademarks of the National Weather Service in the United States and used with kind permission.

**MONSTER®** 1-800-976-0677 ▪ [support@mymonsteraudio.com](mailto:support@mymonsteraudio.com) ▪ [MyMonsterAudio.com](http://MyMonsterAudio.com)