cover pages 1 & 2 pages 3 & 4



Package Contents:

- True Wireless Headphones
- USB Charging Cable
- Instruction Manual

SPECIFICATION

Bluetooth Version Sound Cutput Charge Time (hrs) Play Time thirst Included Accessories:

Standby Time Operating Range Music playing time Special features

Dustproof and Sweatproof 200mAh SV/IA Charge connector TYPE-C

3mW

220g


Cable

33ft

Charging

User manual

Zh.

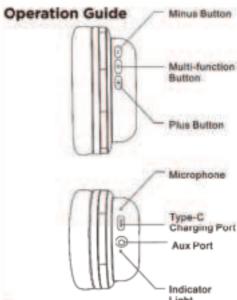

Function of Buttons

- (1) Long press to power on/off; click to play/pause, answer/hang up call; double-click to redial
- Long press to next song; click to increase volume
- Long press to previous song; click to decrease volume

Getting Started

Before using this device, fully charge it. Charging instructions can be found on page 6.

Do not wear the headphones while setting up, the voice prompt is loud. Press and hold the Power button until the indicator LED flashes red and blue.

2 3

- 1. Go to Bluetooth' Settings on your mobile device.
- 2. Turn Bluetooth' ON, on your device.
- 3. On your Bluetooth' device, select "BC-OH-102" from the list of available devices.
- 4. When successfully paired, the indicator LED will turn off, You can now put on the headphones.

Bluetooth' Functions

 Long press the Power button to turn the headphones on or off.

Note: Once they are paired, the headphones will recognize your device, it is not necessary to set up the pairing again.

Note: This equipment has been tested and found

to comply with the limits for a Class B digital

- · Short press the Next Track button to increase volume. Long press the button to next track.
- Short press the Play / Pause button to play or pause. Long press the button to power on or off,

When a phone call is incomming, short press Play / Pause to answer, long press to reject the incomming call.

After a call, press the button two times to redial the last number called.

 Short press the Previous Track button to the previous track to decrease, volume. Long press the button to skip.







pages 5 & 6 pages 7 & 8 back

5

Troubleshooting

Headphones do not pair with device:

- 1. Turn the headphones off.
- 2. Restart your device.
- 3. Turn the headphones on.
- 4. Try pairing again.

Headphone buttons do not work:

1. Turn the headphones off, and then back on again.

If any of these problems persist, the headphones may need to be charged. Charging instructions can be found on page 6.

If charging and re-pairing does not solve the issue, you may have a defective device, please see the warranty information on page 9.

Charging

1.Connect the USB Type-C charging cable to the charging port on the bottom of the

2. Plug the cable into a standard USB 5V/1A or higher power output.

When the indicator LED light Off, this means the headphones are fully charged abd ready to use.

3. When fully charged, unplug the charging cable from the power source.

Warnings

6 7

- Do not use this unit for anything other than its intended use
- . Do not puncture, throw, drop, bend, or modify this product.
- Do not throw this product into fire or water.
- Do not short-curcuit the battery with any metal or metallic objects.
- Do not expose this product to corrosive liquids such as salt water
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
- Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle
- . Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a closed vehicle on a hot day.
- . Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- . Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in
- . To avoid damage to the headphones, please only use a USB 5V/1A or higher charger.
- . In order to ensure the battery life, charge normally at least once a month.

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. uses and can radiate radio frequency energy and, if

- not installed and used in accordance with the instructions, may cause harmful interference to
- radio communications. However, there is no guarantee that interference will not occur in a
- particular installation. If this equipment does cause
- harmful interference to radio or television reception, which can be determined by turning the
- equipment off and on, the user is encouraged to try to correct the interference by one or more of
- the following measures: Recrient or relocate the receiving antenna.
- Increase the separation between the equipment. and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment

Warranty

8 9

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship. return the defective product (with freight prepaid) with proof of purchase.

Bytech NY Inc 2585 West 13street Brooklyn NY 11223 (718) 449-3700 www.bytechintl.com



E2024 BYTECH NY INC. Brooklyn, NY 11223.

All other brands are registered trademerks of their respective companies. Actual products may differ slightly, images are for illustrative purposes only.

pages 10 & 11

RF exposure statement

This equipment complies with the ECC : radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or : operating in conjunction with any otherantenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:

his device may not cause harmtu. Interference, and (2) this device must accept any interference race yed, including interterence that may cause undesired. operation.

Note: This equipment has been tested and i Tourid to comply with the limits for a Class B. digital device, pursuant to part 15 of the FCC : Rules. These limits are designed to provide reasonable protection against harmful. interference in a residential installation. This equipment generates, uses and can radiate. redio frequency energy and, it not installed and used in accordance with the instructions, May cause harmful interference to radio.

quarantee that interference will not occur. n a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off. and on, the user is encouraged to Try Tocorrect the interference by one or more of the following measures.

- Regrient or relocate the receiving.
- Increase the separation between the
- Connect the equipment into an out of on. a direuit different from that to which the receiver is connected.
- Consult the dealer or an experienced. radio/TV technician for help.

NOTE 2: Any changes or modifications to

communications, -awever, there is no

antenns.

equipment and recover.

In such not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.