

Cooler Pro Wireless Speaker System with Cooler

User's Guide for Model IAFSB503 v3040



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves,
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- **CAUTION:** Use of controls or adjustments or performance of procedures osure.
- **WARNING:** by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Do not ingest battery, chemical burn hazard.
- Battery shall not be exposed to excessive heat such as sunshine like.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.



 
WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

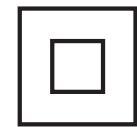

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov This product meets and complies with required Federal product guidelines.

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- This appliance is not intended for use by persons (including children) with reduced physical , sensory or mental capabilities , or lack of experience and knowledge , unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the SUPPLY CORD is damaged , it must be replaced by the manufacturer , its service agent or similarly qualified persons in order to avoid a hazard.
- Suitable for camping use ;
- The appliance shall not be exposed to rain.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops , offices and other working environments;
 - Farm houses and by clients in hotels , motels and other residential type environments;
 - Bed and breakfast type environments;
 - Catering and similar non-retail applications.
- **WARNING :** Risk of child entrapment , Before you throw away your old refrigerator or freezer .Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- § 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cooler Pro Wireless Speaker System with Cooler

User's Guide for Model IAFSB503 v3040



Features

 
- Bluetooth wireless – range 60 ft.
- 4-liter capacity – holds up to 6 12oz cans
- Quiet thermoelectric cooling
- Cools to 28°–30°F below ambient temperature
- Stationary shelf
- Locking latch
- 3.5mm Aux in
- Carry handle

Includes


- User's Guide
- AC Power Cord
- 12V DC Car Power Adapter

Overview

Front Controls

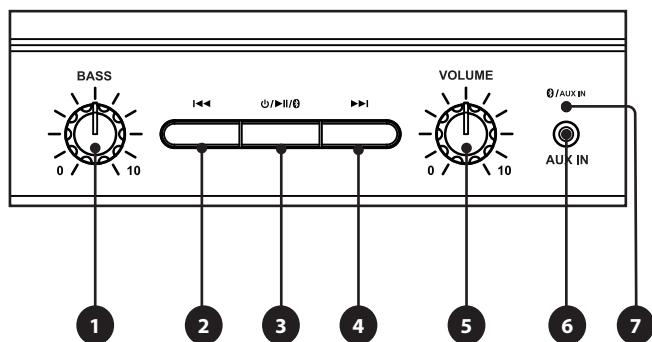

Cooler Power and Power Inputs

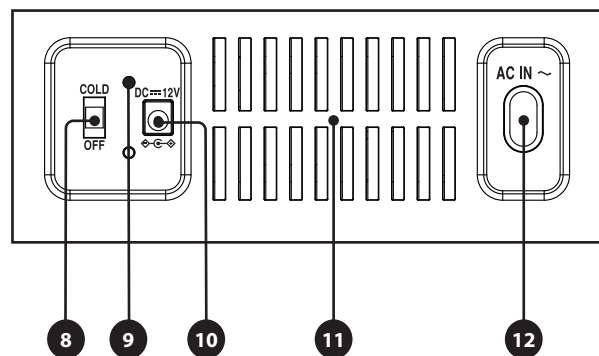 

Controls and Functions

1. **Bass Control Knob**
2. **Previous**
3. **Power On/Off/Play/Pause/Pair:** Press once to change play mode between Aux In and Bluetooth. Press and hold to turn the speaker On/Off. Press twice to disconnect Bluetooth and enter pairing mode.
4. **Next**
5. **Volume Control Knob**
6. **Aux In (3.5mm Input)**
7. **Bluetooth/Aux In Indicator LED**
8. **Cooler Power OFF/COLD**
9. **Power LED Indicator:** Turns green when the speaker is powered on.
10. **DC Power Input:** Plug in the 12V DC Car Power Adapter to power the speaker/cooler.
11. **Cooler Ventilation**
12. **AC Power Input:** Plug in the AC Power Cord to power the speaker/cooler.

Voice Prompts

Voice prompts are on automatically when powering on the unit. To turn voice prompts on or off, press and hold the **Previous** and **Next** buttons at the same time for three seconds.

Powering on the Unit

To power the unit, connect the AC Power Cord to the AC Power Input on the speaker, then plug into a standard power outlet.

To power the unit using the car adapter, connect the 12V DC Car Power Adapter to the DC Input on the speaker, then plug into the car cigarette lighter.

Cooler Operation

 
This thermoelectric unit is designed to be a portable storage container for cold drinks and cold food while in "COLD" mode. The unit cools 28–30°F below ambient room temperature depending upon environmental factors.

For example, in a room with a temperature of 75°F, the unit will keep contents chilled between 46°–50°F. The maximum chill temperature of the unit is approximately 43°F.

Mode Selection (Located on the back of the unit)

COLD: Slide the COLD/OFF switch to "COLD." The cooling function will then turn on. You will hear a quiet fan running when the cooling function is on.

OFF: Move the sliding switch to "OFF", the unit will be off.

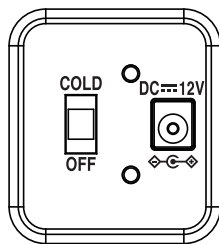

Important Notice

1. After turning off the unit, wait about five minutes before turning it on again.
2. When the cooling function is on, keep in a well-ventilated area. Do not block the ventilation of the unit.
3. Do not operate under direct sunlight.
4. Do not disturb the airflow of the unit.
5. Do not pour water into the unit.
6. Do not use near water. Keep unit out of wet weather conditions.
7. Use damp cloth to clean the unit; do not submerge unit in water.
8. When unattended for a long period of time, place in a well-ventilated area.
9. Avoid dropping unit.
10. Keep away from fire or other flammable substances.
11. To avoid foodborne illness, do not store meats, poultry, fish, or dairy products in the unit for more than one hour.
12. The use of extension cords is not recommended with this product.

Customer Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.iLiveElectronics.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2023 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Bluetooth Wireless

Pairing & Playing Audio

1. When powered on, the speaker will enter Bluetooth Mode automatically.
2. Using the Bluetooth setting on your device, search for new devices and select **IAFSB503**. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
3. When successfully paired, a voice prompt will announce the connection. The Bluetooth/Aux In Indicator LED will display a solid blue light.
4. Use the controls on the connected device to select and begin playing audio. Use the controls on the speaker or the connected device to play, pause, and adjust volume.

Note: The speaker will automatically connect to the last paired device when powering on. If your device becomes unpaired or it is unable to connect, press the **Power On/Off/Play/Pause/Pair** button twice to enter pairing mode. A voice prompt will announce "Bluetooth is connecting" start from step two to connect to your device.

Aux In

Requires a 3.5mm audio cable (not included).

1. Connect a 3.5mm audio cable to the **Aux In** on the speaker and the **audio output/headphone jack** on an audio device.
2. The speaker will automatically switch to **Aux in** mode. The Bluetooth/Aux In Indicator LED will display a solid green light.
3. Use the controls on the connected device to select and play audio.

Note: If the playback volume through the speaker is low, make sure the volume level on your connected device is turned up.

