Mount the Doorbell

Power the doorbell with battery






holes need to be drilled. Drill four holes above the four marked circles.

Method 1: Install with screws

There are two methods to install the bracket. If you don't want to drill holes, you can use method 2 to install it.

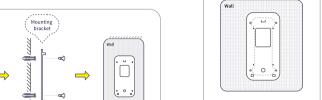



- Stick 3M double-sided tape on the ① If you can reuse the existing holes and anchors on the wall or door frame, skip ① otherwise, please align the mounting Bracket and mark the four circles where the
 - After completion of installation, ple

sided tape

2 Insert four anchors into the holes and use the screws to affix the bracket over

Method 2: Install with 3M double-

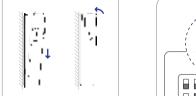

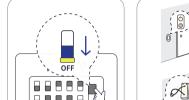

Power the Doorbell with existing Doorbell Wires

- jump to "Connect to the Doorbell Chim


supply in your house. Turn the lights in your home on / off to make sure the

electricity in your house is properly

holes need to be drilled. Drill four holes above the four marked circles. 2 Insert four anchors into the holes and use the screws to affix the bracket over

There are two methods to install the bracket. If you don't want to drill holes, you

Method 1: Install with screws

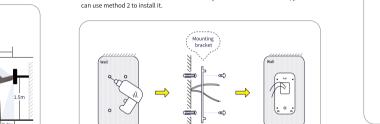


Stick 3M double-sided tape on the

② Tear off the 3M release paper. 3 Select a glossy surface and press it to

sided tape

Method 2: Install with 3M double- Step 6

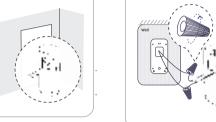


Connect the extension wires the two

terminals at the back of the doorbell, t



space for wire nuts.

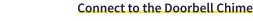

Please plug the chime into the outlet first.

The AC outlet must be 100~240V and 50~60Hz.

Press and hold the <button for more than 3 seconds.

You will see that the light turns a static white, indicating the chime is read to pair with the doorbell.

3. Please ring the doorbell and press the ◁)) button to confirm.

After you ring the doorbell and hear a beep, press the doorbell chime ◁)) button

Press the ▲ and ▼ buttons to switch ringtones; press the ◄) button briefly





Remove the Doorbell

Insert the detaching pin into the pin hole on the top of the doorbell, then lift the to

Rest the Doorbell Chime


button again until you hear 3 beeps, the reset is successful.



to confirm the doorbell connection.



Switch the main circuit breaker back to ON. You're all set!

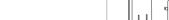



Notice



Risk of fire or explosion if the battery is replaced by an incorrect type

Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or

cutting off a battery, that can result in an explosion.

Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do no leave a battery subjected to the extremely low air pressure that may result in an

explosion or the leakage of flammable liquid or gas.

12-month Limited Warranty

connection if the wall doesn't have