 


STEERING WHEEL TRIM ADJUSTMENT

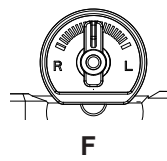

If the Truck can not go forward straightly you may need adjust the steering wheel trim on the bottom of the truck from time to time until the truck can go forward straight. (see diagram F)

WARNING

DO NOT USE CAR IN INCLIMATE WEATHER!

TROUBLESHOOTING

Before sending your car in for repair, please check for a solution below.

Problem	Possible Cause(s)	Solution
Car will not move.	Weak batteries; no batteries	Install new batteries in remote control and recharge the car battery.
Car does not respond properly to remote control.	Car and remote not synced properly Another RC car may be transmitting on the same radio frequency	Refer to sync section and resync your car and remote. Move to a new location where no other RC cars are present.
Car loses connection to remote control.	Using car in a small enclosed area Using car indoors Low batteries in transmitter or vehicle	Move outdoors to a large open area. Install new batteries in remote control or recharge your car.
Car battery has fully charged, but slower than normal.	Driving car for too long at high speeds, causing motor to overheat	Turn car off for 10-15 minutes.

SAFETY WARNINGS!

- Improper use of batteries may lead to overheating, breakage or leaking.
- Do not mix old and new batteries.
- Do not mix different battery brands.
- Install batteries with correct polarity. The flat side (negative terminal) of the battery should rest against the spring.
- Remove dead batteries immediately.
- Avoid liquids, which can short circuit the batteries.
- The truck or remote will become unresponsive when batteries are low, at which point you should replace all batteries with new ones.
- Remove the batteries if you will not use the truck for a long time.
- Avoid using near furniture or glass to prevent damage to these objects.
- Do not play on roads.
- Do not play in crowded areas to avoid injury or damage. Choose a safe location away from traffic.
- Do not use truck during a storm or when lightning or thunder are present.
- Do not use in a wet , sandy or muddy environment as truck may become damaged.
- Do not modify or attempt to replace the built-in original antenna on the remote or truck. Doing so will damage the set and affect operation.
- Do not pull on any wires that are part of the truck. Such action may cause the wires to break and the truck to malfunction.
- Keep fingers, hair and clothes away from the truck's spinning tires. Failure to do so may result in physical injury.
- Never aim the truck at other people.
- Do not throw the truck or purposely hit it with any object.
- Store truck in a cool environment, away from high-temperature sources such as fires, stoves, radiators, etc.
- This truck has no user-serviceable parts. Do not attempt to modify components or circuit board.

FCC Part 15 C Notice

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

CHOKING HAZARD - Small Parts.
Not for Children under 3 years.

Conforms to safety requirements of FCC.

PROPEL RC™ and Savage™ are trademarks of Rooftop Brands.
8619 Wall street, Suite 400, Austin, TX 78754
© 2019 Rooftop Brands™. All Rights Reserved. www.propelrc.com.

Made in China



INSTRUCTION MANUAL

Thank you for choosing SAVAGE™. With proper care, your new SAVAGE™ will provide you with many hours of enjoyment. Please read this instruction manual completely before using the product for the first time, and then keep this manual in a handy place for future reference.

FOR AGES

8+

Colors and styles may slightly vary.



 
PACKAGE CONTENTS

- SAVAGE™ AWD Off-Road Racer
- Remote control
- USB charger
- 7.4V Li-poly battery pack
- Screwdriver


CHARGING THE BATTERY

1. Insert the white, 3-wire battery charging plug into the USB charger's socket. The charging plug and the USB charger's socket fit only one way. Do not force them (see illustration A).
2. Connect the USB end of the cable to your computer's USB port or a USB wall charger (see diagram B). The Red CHARGE indicator light turns on to show that charging is in progress.
3. Average charging time is approximately 2.5 hours (via 5.0V  2A USB wall charger). The truck operates for approximately 30-35 minutes on full charge.
4. The red charging indicator turns off when the battery is fully charged.

Note: Periodically examine the charger should be for damage that may result in the risk of fire, electric shock, or injury to persons. Do not use a damaged adapter.

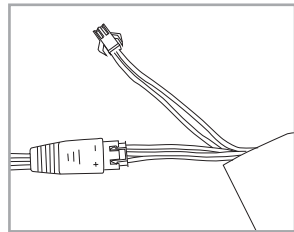


A

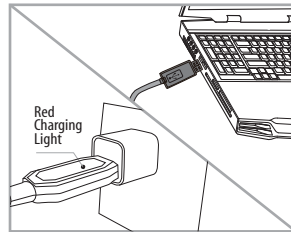 


B

SET-UP

 1. Install the battery into the truck.
Pull off the battery cover lock on the bottom of the truck (see diagram C). Connect the battery power plug (the black, 2-wire plug) into the truck socket. The battery plug and the truck's socket fit only one way. Do not force them (see illustration D). Secure lock on battery cover.

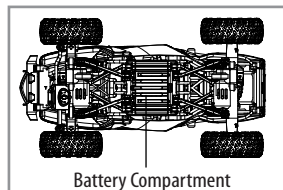


C

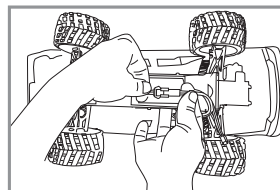 

D

 
2. Install batteries into the remote control.
Open the battery cover on the bottom of the remote control (see diagram E). Insert 4 AA batteries (not included) into the battery compartment, matching polarity (+ and -) marked inside. Replace the battery cover.

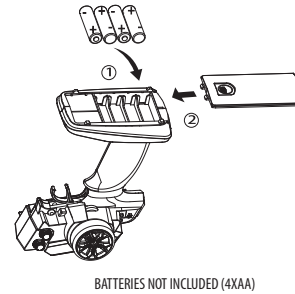


BATTERIES NOT INCLUDED (4XAA)

E

 TRUCK DIAGRAM (Bottom View)

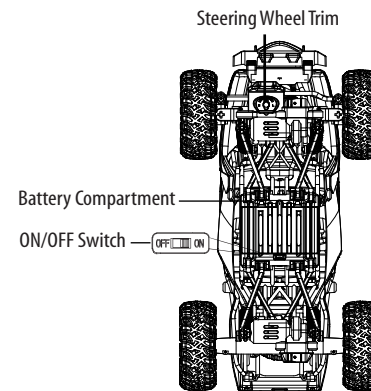

REMOTE DIAGRAM

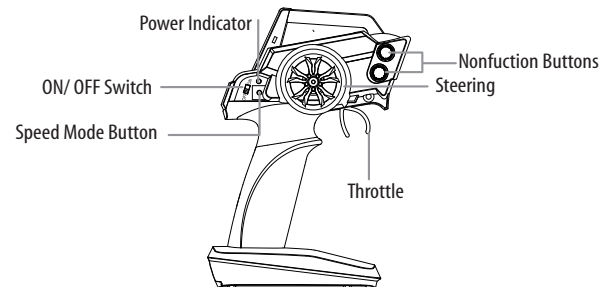 

SYNCING YOUR ROCK RUNNER

Your Savage™ features an automatic 2.4G channel selection system that allows up to 8 people to race side by side in the same wireless range.

For One Player:

1. Before starting, make sure that the power on both your remote control and truck are in the OFF position. Make sure that there are no other 2.4G devices in the area.
2. Turn ON the truck and set it down on a flat surface, the head lights and tail lights will turn on.
3. Turn ON the remote control. When the remote control's power indicator flashes, pull the throttle all the way down and the power indicator lights continuously and you will hear the engine start sound. This indicates that your truck and remote control have successfully synced. If pairing fails, repeat steps 1-3.

For Multiple Players:

1. Before starting, make sure that the power on all trucks and controllers are in the OFF position. Make sure that there are no other 2.4G devices in the area.
2. Each person will have to sync a truck individually at a different time to avoid interference. Follow steps 1 to 3 above, making sure to keep away from other people while also making sure that no one else is syncing at the same time.
3. After syncing, leave the truck ON until all players have synced their trucks.
4. If there is interference, all players must turn off their controllers and trucks and restart the syncing process.

OPERATION

THIS IS A HIGH-SPEED OUTDOOR RC TRUCK. DO NOT PLAY INSIDE YOUR HOME OR OTHER SMALL ENCLOSED AREAS.

1. Turn your truck on:

- Pick up your truck and turn it over to make sure the battery is properly installed and the battery compartment door is properly closed and locked.
- Sync your truck and remote control and set the truck on the ground.

2. Driving your truck:

- Pull the throttle halfway to drive forward at low speed. Pull the throttle fully to drive at high speed.
- Push the throttle forward to make truck move in reverse.
- Turn the steering control to the counterclockwise to turn the truck left. Turn steering to the clockwise to turn the truck right.
- To break or quickly stop simply pull or push the throttle in the opposite direction.

SPEED MODE

Simply press the Speed Mode Button to change the Savage™ speed from 12/KM to 18/KM.