

## EE4456BT - Industrial Wireless Speaker

Instruction manual

Please read all of the instructions carefully and retain for future reference.

### [3 MM CAP HEIGHT] Safety Instructions

When using electrical products, basic safety precautions should always be followed. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product should not be used by children from 0 years to 8 years. This product can be used by children aged from 8 years and above if they are continuously supervised. This product can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or it has been dropped or damaged, recycle the product.

Keep the product and USB cable out of the reach of children.

Keep the product and USB cable away from heat or sharp edges that could cause damage.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not set the product in an inclined position.

Do not leave any objects susceptible to magnetism (cash cards, floppy disks with magnetic coding, etc.) near the product.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not leave the product unattended whilst connected to another device.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not put objects into any of the openings.

Do not play music at excessive volume levels as damage to hearing and/or the product may occur.

It is imperative to unplug the USB cable after the product has been used, before it is cleaned and whilst being repaired.

This product must be placed on a stable, heat-resistant surface.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

**Warning:** Keep the product away from flammable materials.

### [3 MM CAP HEIGHT] Battery Safety

In the event of a battery or cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Do not dispose of batteries in a fire.

Do not dismantle, open or shred secondary cells or batteries.

Do not store above 60 °C.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station.

Contact the local government offices for further details.

This product is fitted with a 400 mAh rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK or online at [www.intempo.co.uk](http://www.intempo.co.uk).

### **[3 MM CAPS] Care and Maintenance**

Wipe the speaker with a soft, damp, lint-free cloth and allow to dry thoroughly.

#### **Do not:**

Use any abrasive cleaning solvents to clean the speaker, as this can cause damage.  
Expose the speaker to extremely high or low temperatures  
Drop the speaker  
Attempt to disassemble the speaker

### **Getting Started**

Remove the product from the box.  
Remove any packaging from the product.  
Place the packaging inside the box and either store or dispose of safely.

### **In the Box**

Industrial Wireless Speaker  
USB Charging Cable  
Instruction Manual

### **Features**

### **[TO MATCH AW]**

### **Description of Parts**

1. Industrial Wireless Speaker
2. Speaker
3. LED Indicator Light
4. On/ Off Switch
5. Play/ Pause Button (PLAY/PAUSE)
6. Mode Button (MODE)
7. Skip/Volume Button (+)
8. Skip/Volume Button (-)
9. TF/ Micro SD Card Slot
10. USB Port
11. 5 V 1 A DC Charging Port
12. USB Charging Cable
13. USB Connector
14. Micro USB Connector

### **Instructions for Use**

#### **Charging the Battery**

The speaker is fitted with a 3.7 V 400 mAh battery (non-removable). It is recommended that the battery is fully charged before first use; this will take approx. 2–3 hours. Connect the micro USB end of the USB charging cable into the 5 V DC charging port on the speaker and the USB end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will switch off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.

## Using the Industrial Wireless Speaker

### Basic Functionality

Turn on the speaker by sliding the on/off switch to the 'On' position.

Pause a track by pressing 'PLAY/PAUSE'; press it again to resume the track.

Adjust the volume of the speaker using '+' and '-'. Press and hold '+' to increase the volume; decrease the volume by pressing and holding '-'.

To switch to the next track, press '+'; play the previous track by pressing '-'.

Cycle between functions by pressing 'MODE' until the desired operation is selected.

Slide the on/off switch to the 'Off' position to turn off the speaker.

### Modes

The speaker must be turned on before using any of the following modes.

#### Bluetooth Mode

##### Pairing with a Bluetooth Compatible Device

**STEP 1:** Once the speaker has been turned on, the indicator light will flash blue to signal that it is ready to pair.

**STEP 2:** Search for the speaker using a Bluetooth compatible device. Select 'EE4456BT' to connect and pair. Once a connection has been made a tone will sound.

**STEP 3:** To unpair or remove a Bluetooth compatible device from the speaker, turn off the Bluetooth function on the compatible device. The speaker can now be paired with a new compatible device

**Note:** Once connected, sound can be controlled using either the speaker or the relevant controls on the Bluetooth compatible device.

##### Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth device has been paired with the speaker, phone calls can be made.

**STEP 1:** Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

**STEP 2:** To connect or disconnect a call using the speaker, press 'PLAY/PAUSE'.

**STEP 3:** The volume of the phone call can be controlled using either the speaker or the Bluetooth compatible device.

**STEP 4:** To reject an incoming phone call, press and hold 'PLAY/PAUSE'.

#### TF/Micro SD Card/USB Mode

**STEP 1:** To use TF/Micro SD card mode, insert a TF/Micro SD card (not included) into the TF/Micro SD card slot. The speaker will automatically change to TF/Micro SD card mode.

**STEP 2:** To use USB mode, insert a compatible USB drive into the USB port. The speaker will automatically change to USB mode.

**STEP 3:** If the speaker does not automatically change to TF/Micro SD card or USB mode, press 'MODE' until the desired operation is selected.

**[3 MM CAP HEIGHT, KEY LINE BOX]**

**Note:** Once connected, sound can be controlled using the speaker.

No USB drive should be inserted whilst using TF/Micro SD card mode or vice versa, as this could interfere with playback.

The speaker will only recognise MP3 audio files; if other files are present on the TF/Micro SD card or USB drive, this may prevent the speaker from playing.

## Troubleshooting

### **The speaker has no power.**

The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the Battery'.

### **The speaker has no sound.**

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

### **Unable to pair a device with the speaker.**

The Bluetooth device is not compatible with the speaker. Check that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

### **The charge of the speaker depletes quickly.**

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and the speaker will need to be disposed of. See the section entitled 'Battery Safety'.

## Specifications

Product Code: EE4456BT

Bluetooth Version: 5.0

Wireless Range: Up to 25 m\*

Speaker Output: 3 W

Power Supply: 5 V 1 A DC

Working Voltage: 3.7 V

Rechargeable Battery: 400 mAh

Operating frequency: 2.4 GHz

\* effective range may be reduced due to the presence of obstacles between connected devices

### **\*\*FCC STATEMENT – FAO TYPESETTER: ONLY REQUIRED IN ENGLISH\*\***

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."