 


ITEM NO.99101



REQUIRES 2x9V
BATTERIES
(NOT INCLUDED)

7 86990 99101 5

HOW TO OPERATE YOUR TRANSCIEVER:

1. Open battery cover and snap in a 9-volt battery.
2. Turn the "ON-OFF" switch to "ON" position. Your transceiver is now ready to operate.
3. Press the "PUSH-TO-TALK" switch for transmitting.
4. Release the "PUSH-TO-TALK" switch for receiving.
5. When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
6. Best transmission and reception are obtained when the antenna is held in a vertical position.

HOW TO USE MORSE CODE FUNCTION:

1. For transmitting a signal, turn the "ON-OFF" switch to "ON" position.
2. While pushing the "PUSH-TO-TALK" button, press in the morse code button momentarily and release for desired signals.
3. For receiving a signal, adjust volume control for normal listening level.
4. When back to voice communications again, use normal "PUSH TO-TALK" operation.

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.
- THE PACKAGING HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.
- DO NOT USE RECHARGEABLE BATTERIES.

FOR PRODUCT QUESTIONS, PLEASE CALL 1-800-567-1774
ASK FOR CUSTOMER SERVICES. ONLY IN THE U.S. AND CANADA

DISTRIBUTED BY SUPREME TOYS (H.K.) LTD.
U.S.A. OFFICE 8348C OLIVE ST. RD. ST. LOUIS, MO 63132 U.S.A.



WARNING:
THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Specifications are subject to change without notice.

