# Overview 0 4 6 6 Front Camera Speaker 2 Volume Keys 3 Power Key Back 6 Home Menu Rear Camera 8 Flash

# SIM Card Installation

A SIM card contains your phone number and other necessary data. Your device has dual SIM slots that both supports 3G(WCDMA) SIM

### To Install the SIM Card

 Make sure the device is turned off and the front facing down. Hold. the limity and use the hold at the bottom corner to loosen the cover. Jse material with a hard, thin edge such as your fingernail or a credit card to carefully run along the seam to loosen, then lift the cover until t detaches completely.





Remove the battery if it is in Locate the SIM card slot and insert the 2. Remove the battery in its in. Locate the sinx card sid and insert the proper SIM card into the proper slot. For more information on SIM card installation, check out the included SIM Card & Micro SD Card nstallation Guide. B. To turn on/off a SIM card go to Settings > SIM management, then

side the SIM card sliders. To turn on/off a SIM card's data connection, go to Settings > SIM management, click on the "Data connection" option, and select a SIM card that has 3G capability.

### Keys/Touch Points

Power Key: To power on/off it, press and hold power key for a few seconds on top of your phone. When it is ON, press the power key

Home key ( a ): Touch the key to return to the home screen in

Options key(  $\square$  ): In standby mode, touch the key to set wallpaper, manage apps, access to system settings. Touch it to view menu options.

Back key ( d ): Touch to go back to the previous menu.

# Charging battery

New batteries are shipped partially charged. Before using your device, install and charge the battery. Batteries perform best after several full charge / discharge cycles.

Please charge the battery using the following methods Charge the phone by connecting it to a computer via the USB

able.

Connect the USB cable to the phone and the AC adapter. Plug the Cadapter into an electrical outlet to start charging.

home screen. When the battery is fully charged, a full battery icon appears on screen



# Warning:

Do not remove the battery while the device is charging.
 Use only the AC adapter & USB cable provided with your device.

 $\textcolor{red}{\textbf{Note:}} \ \textbf{For safely, the battery will stop charging if in danger of overheating.}$ 

### Intelligent keyboard

From the home screen, touch "APP Menu" & select "Settings". Go to "Audio profiles" and change the audio settings by clicking on the "Settings "icon located next to the "General" option. For your Convenience, you may also select Silent.

Audio Profile/Sleep Mode



### Sleep Mode

Turn on sleep mode to save your battery power.

1. On the home screen, touch "App Menu" & select "Settings"

2. Select "Display".

3. Select "Sleep" and choose a time interval from the list.

# Schedule Power On/Off

- 1. On the home screen, touch the "APP Menu" & select "Settings".
  2. Select "Settings->System->Date&time".
  3. Click on the time to change the time and day for the phone to turn

### Screen Lock

On the home screen, touch the "APP Menu" & select "Settings" Select "Security&location" then select "Screen lock" 3. Select the desired type of lock & follow the prompts to set up.

Connecting to E-mails

# Description Icons

Phone Features

### Shows the phone's network signal strengt peaker has beer u have unread SMS. Call on hold USB storage Turned on ringing type is se Н network in use. 2G network in use u have missed calls Clock alarm is active.

Juetooth ON

### Main Menu & Its Functions

Select to enter the main menu··· Allow you to view a list of features available in your phone.

Allow you to set the Alarm from Clock.

٠

Chrome
 Browse the internet. Search engine-default set as Google.

3. Calculator
Allow you to make tedious calculations quickly.

# View the calendar & add events

5. Camera
Allow you to click pictures anytime you want. Your mitarussa has a 2 MP
High Definition camera with LED Flash supporting many special
features like Auto Focus & Face Detection which ensures you always
click good quality of pictures and stores them under the Gallery folder. In Camera, easily choose Camcorder to record Video Files.

To see your list of Contacts. Access phonebook through this function. Allows you set up your POP/IMAP Email accounts.

Allow you to save & view photos & videos.

Phone Features

Y. Proy store Log in to your Gmail account to view all the applications & download from thousands of applications available under the Google™ Market called Play Store.

To use this app please connect to an internet connection.

Allow you to view messages sent & received as a thread.

View the list of songs available in your phone. View the artists, albums,



Allow you to make quick outgoing calls

You could install the files in APK format & also view your files.

This service is provided by the operator. It provides many types of personalized message services

# Phone calls/Texting

# To Make Phone Calls

- . Touch the phone icor
- 2. Select SIM1 card or SIM2 card
- Click on a contact from your contact list to make a call.



Maxwest automatically corrects and suggests words as you



web pages, email, or text messages.

# Turn on WLAN

**WLAN** 

Maxwest supports WLAN Direct which allows Android M.1 or later devices with the appropriate hardware to connect directly to each other via WLAN without an intermediate access point. Using the APIs, you can discover and connect to other devices when each device supports WLAN Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.






a. Enter "Settings" interface & Click "More" in WIRELESS & NETWORKS. Then click "WLAN direct" to access Wi-Fi direct feature. Then turn on the feature. After turning on the feature click "Search" at the bottom and

it will display the available devices: c. Click "Android 7e33" (in this case specifically) and it will give you option to connect:
d. Click "Connect" to connect and it will pop up an interface to

confirm like below: e. Click "OK" and the devices will be connected

Capture images or record videos and share with family and

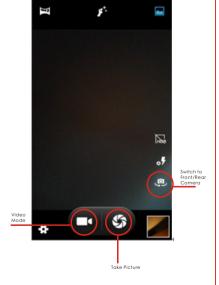

# Log into your e-mail accounts.

You may log-in to your e-mail accounts from the phone to access your e-mails.

From the Home screen select "Email".

Enter your email address, password and tap "Next".

Select which type of email account you are setting up and complete settings.(POP3 / IMAP / Microsoft Exchange Account)

You will need to enter your user name, password, and server information depending on the type of email account or you can change the settings by tapping "Manual setup" at the top right corner screen. Tap "Next" and select "OK" to accept the activation notification

# Compose new:

1.Press MENU & select "Compose".

2. Add recipients by typing a name or email address in the "To" field. Matching contacts will appear. Select a recipient or Test Feedback address to send to multiple contacts.

3. Once finished typing the mail. select "Send", "Save as draft", or "Discard".

4. The reply tab contains "Reply". "Reply all"and"Forward" options.

# Delete message:

Go to Inbox to display messages.
 Touch & hold the message you want to delete.

3. Select "Delete"

# File Transfer

Connecting Smartphone to PC Connect the enclosed Micro USB to USB cable to your smartphone

Once connected successfully, on your phone, slide the top menu down and click on "USB connected", then, press "Turn on USB storage" button

storage" button.

A new storage named "##ZTS560" will appear on your "My Computer". Click in it to review files in the smartphone and /or to transfer documents between devices. When finished, press" Turn off USB storage" button on phone to disconnect.

Note: Photos taken with the camera will be saved under the "DCIM" folder. Screenshots captured will be saved under "Pictures" folder. Put Music files in the "Music" folder for the files to be played properly.



### Screen Capture

Press Volume(-) and power button at the same time to capture" Screenshot". All captured screenshot will be saved under gallery.



# Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(2)t his device must accept any interference, including interference that may cause undesired operation of the device.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver. -Connect the equipment into an outlet an a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each device are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

# maxwest

maxwest

nitru5G0

**User Manual** 

@2019 Maxwest and the Maxwest logo are registered trademarks tered owners. Iroid, Google Play and other marks are trademarks

Touch and hold text content to bring up the magnifying alass and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It is very easy to copy text from