

How to install batteries in robot


1. Locate the battery case cover on the base of the unit. (See Diagram 2)
2. Make sure the ON/OFF switch is at the "OFF" position. (See Diagram 3)
3. Use a screwdriver to unscrew the battery compartment lid. (See Diagram 4)
4. Put the battery pack in the robot properly. (See Diagram 5)
5. Close the battery compartment door with a screwdriver.

How to install batteries in transmitter


1. Unscrew to open the battery cover at the back of the transmitter and put a 9V battery following the engraved signs.
2. Close the battery compartment door with a screwdriver.

Attaching the rear wheel

Push and slide the rear wheel into the back of the robot. (See Diagram 5)

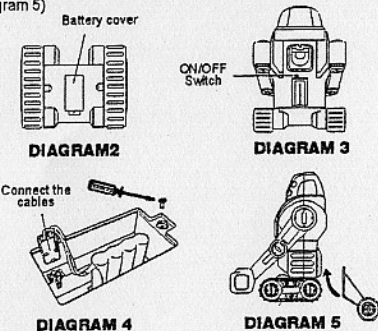

TRACK MOVEMENT

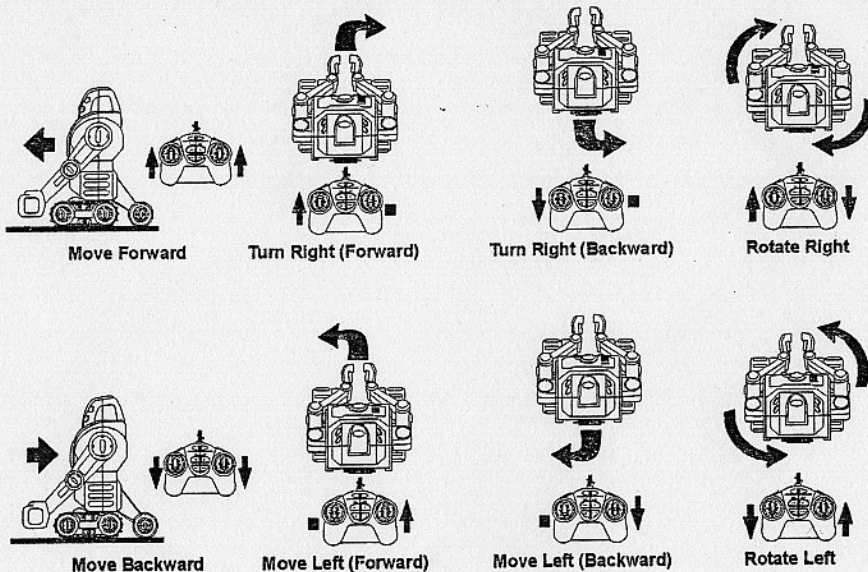

ARMS MOVEMENT

