


Speaker Manual

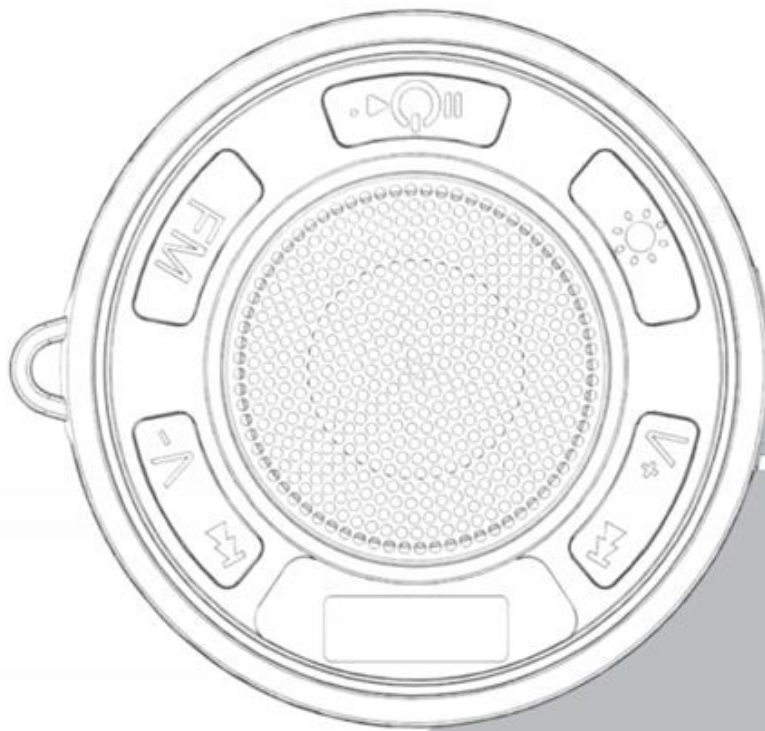

Kindly Reminder

- Before use, please make sure that the plug cover is tightly covered to prevent falling into the water and damaging the loudspeaker.
- Put the product out of reach of children.
- Please use a soft cloth to clean the product instead of chemicals with strong irritation. Be sure to disconnect the power supply before cleaning.
- Do not puncture or disassemble the outer surface of the product in any way.
- Do not insert any metal objects into the equipment to prevent electric shock to the equipment

Operation of Key Functuins

On/Off Key 

1. Press and hold the power button for 3 seconds to turn on or off the speaker;
2. Short press the power button to pause/play music;
3. When a call comes in, short press the power button to answer/hang up the call; Press and hold the power button to reject the call.
4. Reset: Press and hold the power button for 8 seconds, and the pairing information will be cleared at the same time;

Next Key

1. Long press to play the next song
2. Short press to turn up the volume
3. In FM mode, long press to switch to the next channel.

Previous Key

1. Long press to play the previous song.
2. Short press to turn down the volume.
3. In FM mode, long press to switch to the previous channel.

Light Key

1. Short press the light button to switch to different light modes.

M key

1. Short press the M key to switch between bluetooth mode, FM broadcasting mode.
2. Long press M key to clear pairing and the speaker restores factory settings.
3. If you have two speakers, you can connect the two speakers to each other. Please long press M key to pair or cut off the connection between the two speakers.

FM mode

- Short press the M key to switch to FM radio, and then press the power key to search for channels.
- Long press the plus key to jump to the next channel, long press the minus key to jump to the previous channel, and short press the M key again to switch to Bluetooth mode.

Display Screen

- Display Clock. When the speaker is connected to an Android phone, to ensure the accurate updating of the time on the speaker, the speaker needs to access your SMS permission (iphone do not have this issue). If you don't mind whether the time on the speaker is accurate, you can also directly refuse this option. It will not affect other functions of the speaker.
- Display FM frequency band.
- Display the power , the normal staste of the power mark is always on,when the power is low the power mark begins to flash,prompting the speaker needs to be charged.
- Display charging status , the lightning mark is always on when charging,and goes off when full.

Wireless pairing

- Please charge for 2 hours before first use.
- Press and hold the power button for 3 seconds to turn on the speaker. After turning on the phone, enter the Bluetooth pairing mode, select the Bluetooth pairing name "XM-G69" on the device, complete the connection and hear the prompt tone. The speaker will complete the connection within 5 seconds. If the connection is not completed within 5 minutes, the Bluetooth speaker will automatically shut down.
- When the connection range is exceeded, Bluetooth automatically disconnects, accompanied by a "disconnected" prompt sound; after entering the connection range again within 5 minutes, Bluetooth automatically connects, accompanied by a "connected" prompt sound.

- If the connection fails, please refer to the user manual of the media player for wireless settings, remove all unnecessary models from the device wireless pairing list, and repeat step 1.

TWS interconnect

- When the two speakers are powered on and there is no connection, press and hold the M button of one speaker for 3 seconds.
- When the "TWS Connected" prompt sounds, the two speakers are successfully interconnected. Then open Bluetooth and search for the pairing name XM-G69 and click to connect. Both speakers emit sound at the same time.
- If you want to cancel the interconnection mode, directly press and hold the M button of any speaker for 3 seconds. After "TWS Disconnected" is issued, the interconnection mode has been canceled.
- At this time, the mobile phone's Bluetooth will still be connected to one of the speakers, and the other speaker can be reconnected. Search for a Bluetooth model to connect.

Reset

- Press and hold the power button for 8 seconds until the red light flashes and the speaker turns off.
- After restarting, the pairing information between the speaker and the mobile phone is cleared.

Charging equipment

- Wireless speakers are powered by built-in rechargeable lithium batteries.
- Open the Type-C charging port cover.
- Connect the charging cable from the USB socket on XM-G69 to the standard USB charging port, such as computer or USB charger.

Activation & Warranty

Parmanent replacement of damaged , defective,upgraded or missing items (no need to return original).Please activate via email below within 15 days.

"prscfumservice@hotmail.com"

Technical indicators

Model:	AC6966B
Working distance:	10M
Micophone:	built in
Rated power:	5W
SNR:	60DB
Charging voltage:	DC 5W
Battery capacity:	1100mAh
Charging time:	about 2 hours
Playback time:	about 10 hours(about 50%sound level)
Shell material:	ABS +silica gel
Speaker size:	92*92*52mm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.