
ATK USER GUIDE 用户指南 QUICK START 烈皇F1 SERIES

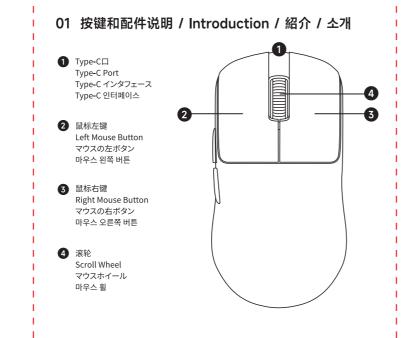

5 指示灯 Indicato インジケータ 표시등 6 前进侧键 Forward Button 前進側キー 전진 측면 키 7 后退侧键 Back Button 後退側キー 뒤로 측면 키

8 脚贴区 Feet フィート 9 光学传感器 Optical Sensor 9 光センサ 광학 센서 10 DPI切换键 DPI Button DPIボタン DPI 버튼 1 无线开关 Power Switch 電源スイッチ 전원 스위치

 
02 快速开始 / Quick Start / クイックスタート

1. 充电/有线使用 Charge / Wired Mode 充電/有線モード 충전 / 유선 모드



2. 无线使用 / Wireless Mode / ワイヤレスモード / 무선 모드

빠른 시작





03 DPI调节 / DPI Set / DPI設定 / DPI 튜닝

按击底部DPI切换键可以快速切换DPI, 免驱提供以下DPI档位和状态指示 / Press the DPI button to quickly switch the DPI. The free drive provides the following DPI set and status indications / DPIボタンを押すと、DPIをすばやく切り替えることができます。無償ド ライブには、以下のDPI設定とステータスインジケータが用意されています / DPI 버튼을 눌러 DPI를 빠르게 전환합니다.무료 드라이브는 다음과 같은 DPI 설정 및 상태 지침을 제공합니다



更多DPI设置需要使用驱动修改,支持50~26000DPI之间的设置 / The DPI can be set between 50 to 26000 DPI by software. / DPIは、ソフトウェアを介して50~26000 DPIの 間に設定することができる / DPI는 소프트웨어를 통해 50에서 26000 DPI 사이를 설정할 수 있습니다

04 回报率设置 / Polling Rate Set / ポーリングレート 設定 / 수익률 설정

可通过驱动直接修改回报率 / Set the rate by software / ソフトウェアを使用して速度 を設定します / 소프트웨어를 통해 속도를 설정합니다

05 电量状态指示 / Battery Indication / 電力量状態指示 / 전력 상태 표시

 
1) 指示灯红灯闪烁: 电量小于10%, 请充电 / Blinking In Red: 10% Battery, please charge / 赤色点滅: 10%バッテリ、充電してください / 빨간색 깜박임: 10% 배터리 충전 2) 指示灯黄灯闪烁: 充电中 / Blinking In Yellow: Charging / 黄色点滅: 充電 /

노란색 깜박임: 충전 3) 指示灯常亮: 充电完成,恢复至绿色 / Staying in Green: Charging completed /

緑のまま:充電完了 /녹색 유지: 충전 완료



Battery Recycling



the user's authority to operate the equipment. Inis equipment has been tested and round to compiy with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
 --Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

驱动下载 Software Download ソフトウェアのダウンロード 소프트웨어 다운로드 WWW. ATK. PRO





由于产品不断升级,可扫码查看最新说明书 / As the product is constantly upgraded vou can scan the code to see the latest manual / 製品が絶えずアップグレードしてい るので、コードを読み取って最新の説明書を見ることができます/ 제품이 끊임없이 업그레이 드되기 때문에 코드를 스캔해서 최신 설명서를 볼 수 있다

찍号: ATK F1 PRO MAX

制造商:深圳意义之塔科技有限公司

地址:深圳市南山区粤海街道高新区社区高新南七道138号惠恒大楼一期4楼4219