



XBH9-1028

855-999-8041 | www.XtremeCables.com

**PACKAGE CONTENTS**

Bluetooth Headphones  
Micro USB Charging Cable  
Manual

**SPECIFICATIONS**

Bluetooth Version: V5.0  
Bluetooth Range: 33ft  
Charging Input: DC 5V  
Play Time: 3-4 hours  
Charge Time: 2 hours\*

\* The charge time will be affected by the USB charging source

**CHARGING THE BLUETOOTH HEADPHONES**

Please be sure to charge before use. Connect the included micro USB charging cable to the micro USB port and connect the other end to a USB power outlet. The LED charging indicator illuminates red, indicating that the headphones are charging. When the LED indicator light turns off, the headphones are fully charged.

**BLUETOOTH PAIRING**

**Step 1:** Press and hold the multifunction button for three seconds to turn the headphones on. The LED indicator light will flash blue and green indicating the headphones are in pairing mode.

**Step 2:** In pairing mode, enable Bluetooth search mode on your audio device and search for pairing name "XBH9-1028" and select it on your audio device. Once the headphones have been successfully connected, the LED will illuminate solid blue. The next time that the headphones are powered on, they will automatically reconnect to the previously connected phone/device, if within range.

**AUTO POWER OFF**

To conserve battery life, the headphones will auto power off if disconnected from the device's Bluetooth® signal for about 10 minutes.

2

**USING YOUR HEADPHONES**

- 1. Power on/Multifunction button:** Press and hold the button for three seconds to turn the headphone on/off. Press the button to change the mode.
- 2. Play/Pause & Answer/End Call:** Press the button once for pause/play or to answer/end a call. Press the button twice to activate Siri or Google Assistant.
- 3. Volume up/Next track:** Press the button once to select next track. Press and hold the button to raise volume.

**Note:** The maximum audio is limited by the phone/device's volume setting. Adjust the phone/device's volume setting is the volume is too low.

- 4. Volume down/Previous track:** Press the button once to select previous track. Press and hold the button to decrease volume.
- 5. TF card slot:** Insert a memory card into slot to listen to music. Press multifunction button to switch to TF mode.
- 6. AUX jack:** Insert an auxiliary cable into the AUX jack to listen to music from a 3.5mm device. The headphone's power will power off and switch to Aux mode. Press the multifunction button to switch between modes.

**Note:** The functional operation may vary depending on the connected device. In some cases, the touch functions may operate differently from how they are described above.



3

**TROUBLESHOOTING TIPS****No Sound**

- Power on the headphones
- Charge the battery
- Increase the volume on your phone/device
- Make sure headphones are not paired with a different device
- Make sure the phone/device is not in mute mode
- Restart phone/device
- Check with a different music source

**Poor Sound Quality**

- Move your mobile device closer to the headphones and away from any interference or obstructions
- Charge the battery
- Check with a different music source

**Battery Won't Charge**

- Ensure that charging cable is connected securely
- Make sure the charging cable or charging connector is not damaged
- Make sure that the charging connection is not dirty resulting in poor contact between earbuds and charging case contacts.
- Try a different charging source

**Functions not working as described in the manual**

- Depending on the phone/device some of the functions, such as the music/track control functions, may not operate as described. But, all the main features should operate correctly

4

**SAFETY AND CARE INSTRUCTIONS**

Failure to follow these safety instructions can lead to fire, electrical shock, personal injury, property damage or damage to this unit.

- Read all the instructions before using the product, and use the product as intended
- Do not listen at high volume level for long period to protect hearing
- Do not use in high-traffic area or environments where accidents could occur as a result of inattention or slowed reaction.
- Do not expose to rain or moisture, and do use near water such as swimming pools, bathtubs, or sinks.
- Do not expose to heat sources, the sun, or leave in a hot vehicle. Do not dispose of in a fire.
- Do not disassemble, modify, or try to use for a non-intended purpose, and do not use if damaged or modified. Never insert objects other than those specified into the product.
- Place case on flat sturdy surface, and make sure that it is not covered during charging.
- Disconnect the USB cable once the product is fully charged.
- This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines.
- This product is not a toy. Keep out of reach of children or those that require supervision.
- Do not use abrasive cleaning solvents to clean the unit.

5

**ONE YEAR WARRANTY**

Xtreme warrants its products for **ONE YEAR** against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt.

Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

**Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.**

For instructions about how to obtain warranty service for your product, please contact Customer Service via email at [customerservice@xtremecables.com](mailto:customerservice@xtremecables.com).

6

**FCC CAUTION**

Any changes or modifications not expressly approved by the part responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

7