


4.65 inches

Kids Wireless Headphones

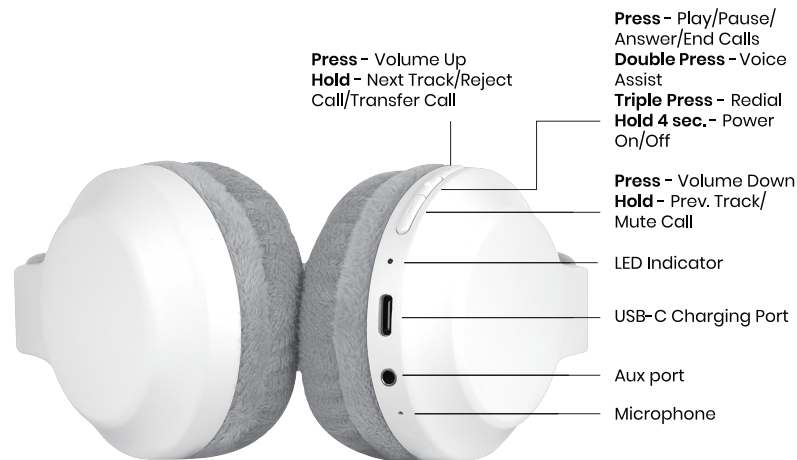

*product design may vary

Whats Included:

- Kids Wireless Headphones
- USB-C to USB-A Charging Cable
- 3.5mm Aux Cable

Indicator:

- Solid Red - Charging/ Low Battery
- No Red Light - Charging Complete
- ⊗ Flashing White - Pairing Mode
- ⊗ Slow Flashing White - Paired / Playing

- Bing Bong Tone - Power On
- Descending Chime - Power Off
- Double Beeps - Ready to Pair
- Double Dial Beeps - Low Battery
- Double High Beeps - Max Volume
- Double Chirps - Min. Volume

Pairing:

- When the headphones are off, hold the power button for 7 seconds until the indicator on the right side flashes white.
- Use the Bluetooth settings on your device to pair with **Headphones 01**
- When the light flashes white slowly, the headphones have paired successfully.

Charging:

- Plug the USB-C end of the charging cable into the USB-C charging port.
- Plug the USB-A end of the charging cable into a power supply of at least DC 5V 1A.
- **Warning:** please use UL compliant power supply.
- The indicator light will turn red when charging, a full charge requires approximately 2 hours.
- The indicator light will turn off when charging is complete.
- **Note:** Headphones cannot playback when charging.

Aux/Line in:

- Insert the Aux cable into Aux port of the headphones.
- Insert the opposite end of the Aux cable into the media source (phone, laptop, etc.).
- **Note:** When using the Aux/Line in function, the headphones will only work as wired headphones and the button functions are temporarily disabled.

Troubleshooting:

- If the headphones are not working correctly, power the headphones off, then hold power on/off button 15 seconds to restart.
- If the headphones won't turn on, recharge the battery and try again.
- If the headphones won't charge, make sure the power supply works, is 5V 1A, and not damaged.
- If the headphones make no sound or do not show as an available device, make sure they are not paired to a different device already.

Safety:

- Do not use near any water source.
- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

FCC ID: 2AQ23-WOE23 Model: WOE23 Input: 5V=1A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

gemsfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

FRONT

BACK

7 inches