

OHP-610说明书:  
100g铜版纸, 无膜, 4C+1专印刷, 折页  
成品尺寸: 85\*120mm

Internal Use ( 内部公开 )

PACKAGE CONTENTS



Wireless Headset x 1  
Type-C Charging Cable x 1  
Wireless Guide x 1

PRODUCT OVERVIEW



1. Button + (Volume Up / Next Track)  
2. Button O (Play/Pause/Call)  
3. Button - (Volume Down / Last Track)  
4. Power Switch  
5. LED Indicator  
6. 3.5mm AUX Input  
7. Microphone  
8. Type-C Charging Port

USING YOUR HEADSET

1. Turn on / off  
Toggle the power switch to power on/off.




| LED Indicator                                                 | Status    |
|---------------------------------------------------------------|-----------|
| Steady blue for 1 second with voice prompt saying "Power on"  | Power on  |
| Steady red for 2 seconds with voice prompt saying "Power off" | Power off |

2. The Headset will automatically turn off after 5 minutes if no device is connected.

2. Pair with your device

When power on, the Headset will enter pairing mode automatically. Open the Bluetooth function and connect the Bluetooth named as BoomPop 2 on your device to finish the pair.

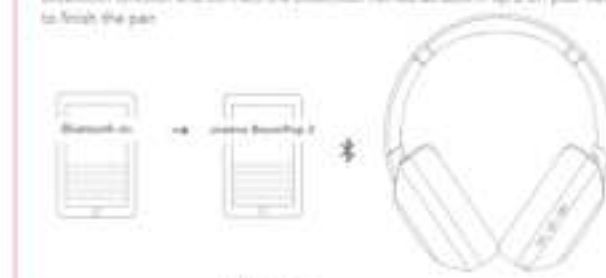

| LED Indicator                                         | Status                |
|-------------------------------------------------------|-----------------------|
| Fast flashing blue with voice prompt saying "pairing" | Enter pairing mode    |
| Steady blue with voice prompt saying "connected"      | Connected to a device |

3. How to connect to another device

1) Disconnect the Bluetooth connection with the last device.  
A. Disconnect directly from your device.  
B. Or press the button + and button - simultaneously for 3 seconds.  
2) Enter the pairing mode to achieve the connection again.  
3) Make sure the distance of the headphone and your device is less than 1 meter / 3.3 feet at the first time of connection.  
4) The headphone will automatically connect to the last connected device if available. If not, the headphone will enter pairing mode.

4. Connected via AUX



5 The speaker will enter AUX mode once the cable is plugged in.  
(AUX will be turned on when using AUX mode)  
6 Microphone will be enabled in AUX mode.

5. Controls

Play/Pause music: Short press the button O once.  
Volume up/down: Short press the button + / button - once.  
Next track/Last track: Long press the button + / button - for 1 second.  
Answer/End a call: Short press the button O once.  
Reject a call: Long press the button O for 1 second.

6. Three-party calling

Answer/End a call: Short press the button O once.  
Reject a call: Long press the button O for 1 second.  
After connecting to a third-party call, switch between two calls: Long press the button O for 1 second.

7. Charge your Headset



| LED Indicator                         | Status          |
|---------------------------------------|-----------------|
| Steady flashing red with voice prompt | Low battery     |
| Steady flashing red                   | Being recharged |
| Steady blue                           | Fully recharged |

8. Reset

Long Press the Button O while the Headset is being charged.

BASIC PRODUCT SPECIFICATIONS

|                    |                                    |
|--------------------|------------------------------------|
| Bluetooth Version: | V5.2                               |
| Bluetooth Range:   | ~10m                               |
| Speaker Diameter:  | 40mm                               |
| Charging Time:     | 1.5 hours                          |
| Playtime:          | Up to 40 hours                     |
| Supported Format:  | Mic support / Aux in Mode / Type-C |

ATTENTION

- To preserve battery (Recharge, fully) charge at least once a month.
- Use original or certified cables.
- Do not expose to liquids.
- Do not disassemble.
- Avoid dropping.
- Avoid extreme temperatures.
- Do not use the product outdoors during a thunderstorm.
- Do not use any corrosive cleaner(s) to clean.

TROUBLE SHOOTING

| Problem/Description                                | Cause                                                                                                      | Solution                                                                                                                                              |
|----------------------------------------------------|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power on function fails.                           | The battery is exhausted.<br>The power switch is not fully toggled.                                        | Use the charger kit to fully recharge the battery.<br>Toggle the power switch again.                                                                  |
| Recharging function fails.                         | The charging port is not properly connected.                                                               | Reconnect the charging port.                                                                                                                          |
| The headphone cannot be switched to pairing fails. | The headphone does not enter into the pairing mode.<br>The Bluetooth function of the device is turned off. | Turn on the headphone again to enable it enter into the pairing mode.<br>Restart the device and the Bluetooth and then pair with the headphone again. |

CONSIDERATE HINTS

- Do not turn up the volume to a too high level constantly as this could shorten the service life of this product or impair your hearing.
- When encounter any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the product or other components.
- The wireless transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

Customer Service

365 DAYS WARRANTY  
Email: service@oraimo.com  
India: care@oraimo.com

365 DAYS WARRANTY

1. We quality control defects on items sold directly by or under an authorized reseller are covered by an indefinite warranty, starting from the date of purchase.  
2. Items covered by warranty are restricted to the condition of purchase. The limited warranty is void on items taken outside the country they were originally bought in or any part is directly from an authorized online provider.  
3. This warranty is not applicable to damaged goods, items that are not in original condition, or items that are not in original condition.  
4. This warranty is for the original product only and does not cover accessories, shipping, handling, or any other costs.  
5. If the product fails regardless of usage or compliance with the instruction manual, and after certain provisions, replacement of the product will be provided.  
6. For those registered, during the warranty period, and the product has been found to be defective, the user can return the product for a refund.

WARRANTY CERTIFICATE

|                                   |  |
|-----------------------------------|--|
| Name:                             |  |
| Address:                          |  |
| Full Name:                        |  |
| Date of purchase (in YYYY-MM-DD): |  |
| Store name:                       |  |
| Warranty period:                  |  |

oraimo  
smart accessories

WELCOME GUIDE  
BoomPop 2 | OHP-A10-1

\*For safety reason, this product remains the property of the company. Please fully charge the product before using it.