



## User's Guide

## Sound Round

CA-47

## Hello.

I remember lying in bed, 8 or 9 years old staring at a dull black alarm clock and wondering who created it? That curiosity stuck with me and years later as a designer with new ideas for clocks I created Capello to share them with you.

Thank you for choosing Capello. We hope your new clock will be a delightful bedside companion as you fall asleep each night and wake up each morning to a new day.

Thank You,  
MATTHEW

## Getting Started

### Powering On

- Plug the AC/DC adapter tip into the “DC In” jack located on the back and the other end to a wall outlet (110V AC). Sound Round will turn on and is ready to use.

### Setting the Time

- Press and hold down ☺ button till the time flashes then RELEASE the ☺ button. Press the +/- buttons to adjust the hour.
- Tap the ☺ button and the minutes will flash. Press the +/- buttons to adjust the minutes.

### Battery Backup

Sound Round has an internal backup battery that you never need to replace it. When power is out

- The alarm will still sound
- The display will be off to save battery power
- When power is back on the clock and alarm settings will be restored

## Using the Alarm

### Setting the Alarm

- Press and hold down 📌 button till the time flashes then RELEASE the 📌 button. Press the +/- buttons to adjust the hour.
- Tap the 📌 button and the minutes will flash. Press the +/- buttons to adjust the minutes.
- Tap the 📌 button to set snooze time using +/- buttons to select 5, 10 or 15 minutes.
- Tap the 📌 button and use +/- buttons to set the alarm chime sound C1 - C6.

C1 Wake Tone 1	C4 Classic Alarm Bell
C2 Wake Tone 2	C5 Wind Chimes
C3 Wake Tone 3	C6 Morning Birds
- Tap 📌 button and use +/- buttons to set the chime volume L1 lower to L5 louder.

### Enable / Disable the Alarm

- The icon will light to the left of the time display when the alarm is enabled. If the icon is not shown, the alarm is disabled and won't sound.
- Tap 📌 to enable and disable the alarm.

### When the Alarm Sounds

- Press the 🕒 button to snooze
- Press **ANY OTHER BUTTON** to stop the alarm. The 📌 icon will stay lit and the alarm will be ready to sound again tomorrow.

## Sound Machine

### Listening to Sounds

- Press the 🌲 or ≈ button to turn the Sound Machine on and select the sound
- Adjust the volume using the +/- buttons
- Press the 🌲 or ≈ button to turn the speaker off (after 7 seconds when time is shown on display)

## Bluetooth Speaker

### Bluetooth Setup

- Press 🔌 to turn on Bluetooth speaker and to enter pairing mode.
- The Bluetooth 🎵 icon on the display will flash while Sound Round is discoverable.
- Open the Bluetooth settings on your phone or other device and select Sound Round to pair.
- The next time you turn the Bluetooth speaker on it will automatically connect to your paired device when it is within range.
- To connect to a different device, press and hold the Bluetooth 🔌 button till the 🎵 icon on the display starts to flash. Repeat the pairing process.

### Using Bluetooth

- Press 🔌 to play or pause audio playback
- Adjust the volume using the +/- buttons
- Press 🔌 Bluetooth button to turn the speaker off

“Sound Round” will stay in pairing mode for 30 seconds to allow a phone or device to be paired and then will automatically turn off. The range for Bluetooth is approx 30ft. To disconnect a device that is connected, press and hold the Bluetooth buttons for 2 seconds.

## Sleep Timer

- The Sleep Timer will turn off the Sound Machine or Bluetooth speaker at the end of the time set. This can be helpful to fall asleep with sound.
- Press 🌙 button to select the Sleep Timer duration: 1 Hour, 2 Hour, 4 Hour, 8 Hour or OFF
- When Sleep Timer is active 🌙 icon will be lit to the left of the time display
- After timer is set, you can press 🌙 to cancel and turn the sound off



 
 
### Environment Sounds

- E1 Forest Night
- E2 Ocean Waves
- E3 Morning Birds
- E4 Cozy Fireplace
- E5 Crickets
- E6 Rustling Breeze
- E7 Rain Shower
- E8 Rain Storm
- E9 Wind Chimes
- E10 Lullaby A
- E11 Lullaby B




### White Noise

- L1 Noise Drone
- L2 Low Noise Drone
- L3 White Noise
- L4 Pink Noise
- L5 Brown Noise
- L6 Fan A
- L7 Fan B

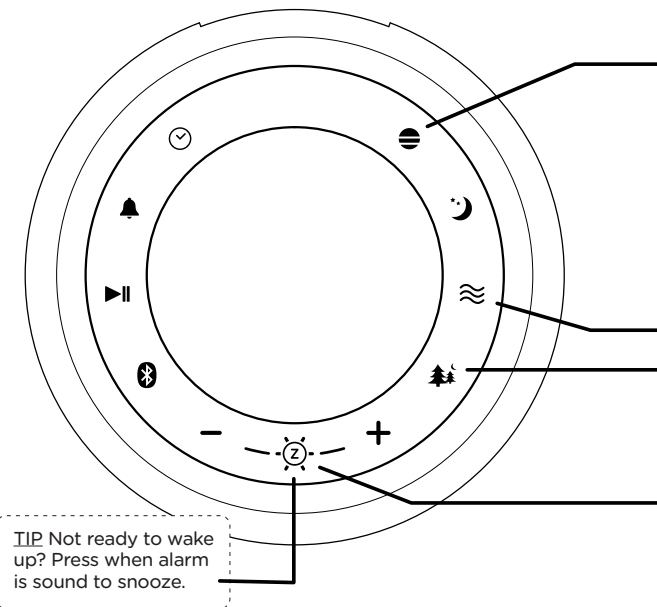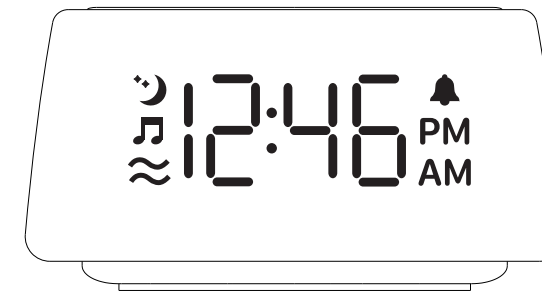

 TIP Not ready to wake up? Press when alarm is sound to snooze.

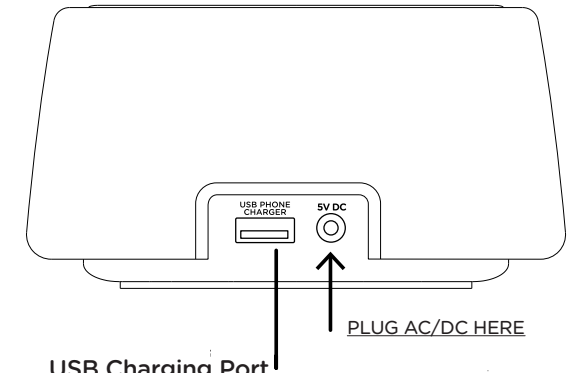

### USB Charging Port

- Charge phones, wireless earbuds, smart watches and other USB powered devices
- Plug a compatible charging cable into your device (not included) and the other end of the cable into the USB charging port on the back

TIP If the alarm is not sounding, please check:

- Make sure the alarm icon 📌 on the display is lit. If it's not tap the Alarm button till it lights up.
- Check to make sure both the clock time and alarm time are set to correct AM/PM

### Adjusting the Display Brightness

Press dimmer button to cycle through the brightness for the display

 
 
TIP The buttons light up to make them easier to use in the dark. When any button is pressed all the buttons will light for 5 seconds

### Sound Machine

- Press ≈ to choose white noise options
- Press 🌲 to choose nature sounds and lullabies
- Press and hold button to turn the sounds off

### Ring Light

- Press to turn on the ring light that shines around the base of Sound Round
- Hold down to adjust the brightness

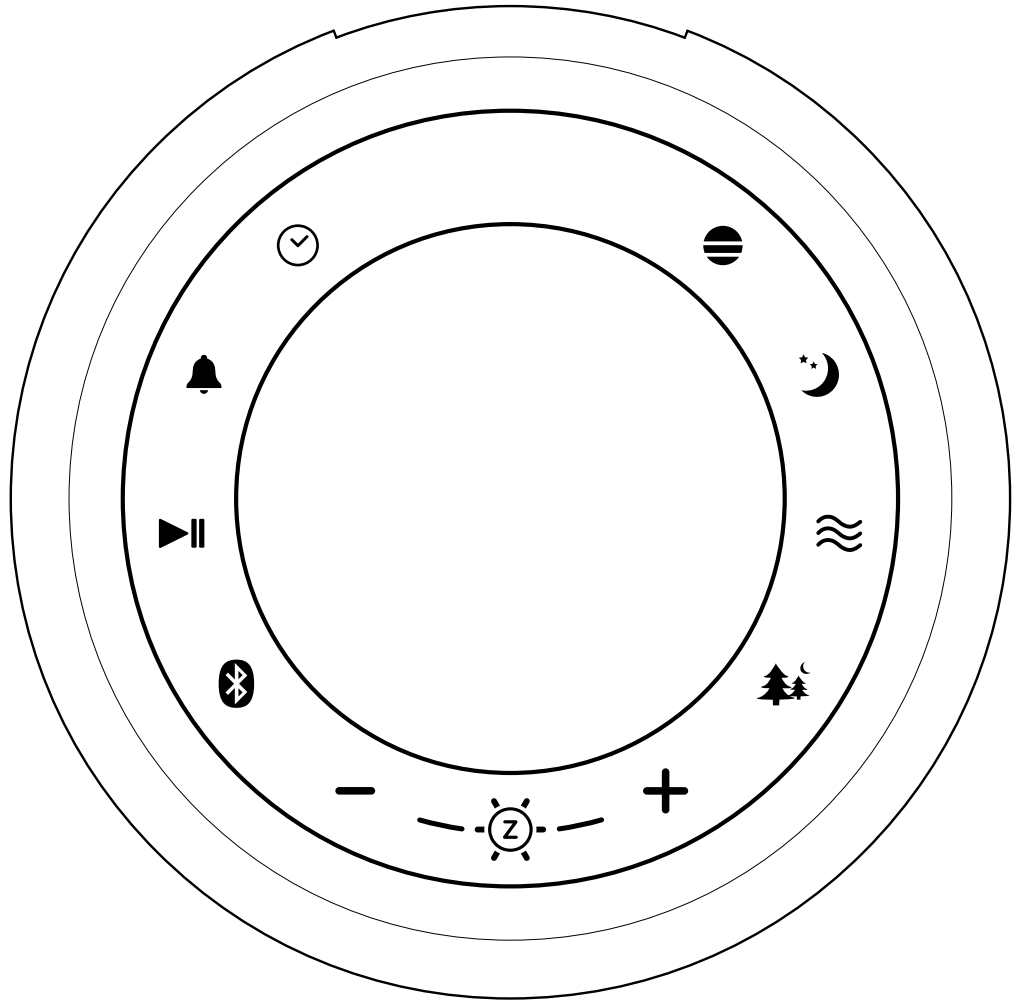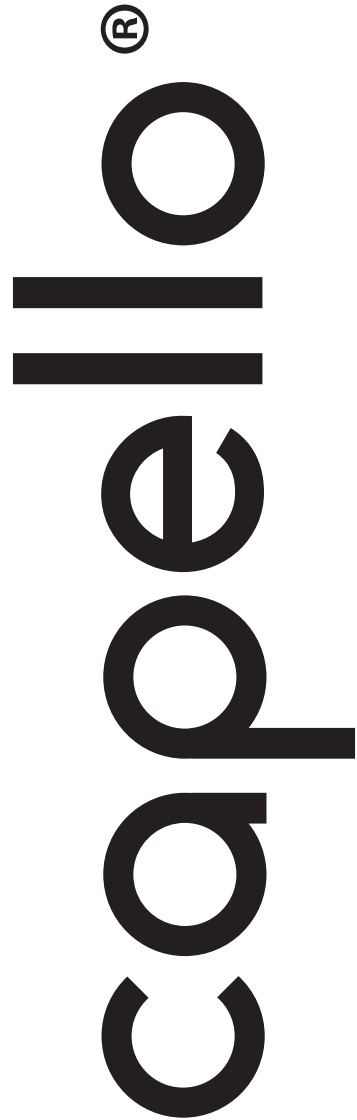

## Questions? I'm Here to Help

If you have any questions or issues,  
please reach out at [hellocapello.com](mailto:hellocapello.com)  
so we can help you out.



[support@hellocapello.com](mailto:support@hellocapello.com)

### Features

Alarm with custom wake up sounds, adjustable volume and snooze

Sound Machine with Sleep Timer

Bluetooth Speaker Dimmable time display

Light ring

USB-A Charging Port

Built-in Backup Battery to sound alarm and save clock and alarm settings

### Specifications

Alarm duration: 60 minutes (chime) / 5 minutes when Sound Round is running on backup battery

Snooze duration: 5 - 10 - 15 minutes (chime)

Defaults: Time - 12:00AM ; Alarm - 6:00AM; Snooze 5 minutes

Power: The output of the provided AC/DC adapter is 5V/2.4A

USB-A Charging Port: DC 5V/1A



Limited 90 Day Warranty Information

Koda Electronics (HK) Co., Ltd warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owners manual from our website for reference or email us at [clocks@hellocapello.com](mailto:clocks@hellocapello.com) for additional troubleshooting assistance. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, Koda will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase.

#### Before returning this product for service:

1. Contact customer service to receive a Return Authorization number (RA#).
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of original date of purchase, if within the warranty period.
4. Write issued RA# on the top of shipping box.
5. Ship the package from shipping company of your choice, prepaid and insured, to the Koda Service Center address supplied by the Customer Service Representative. Be sure to save your tracking number

#### Disclaimer of Warranty

This warranty is valid only if the product is used for the purpose for which it was designed. It does NOT cover:

- (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons;
- (ii) cracked or broken cabinets, or units damaged by excessive heat;
- (iii) damage to digital media players;
- (iv) the cost of shipping this product to the Consumer Repair Department.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will Koda or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your Capello product.

For customer support, please e-mail us at: [clocks@hellocapello.com](mailto:clocks@hellocapello.com)  
Questions? Visit [www.hellocapello.com](http://www.hellocapello.com)

### Troubleshooting

If your Sound Round is not functioning properly, it may be caused by electro-static discharge or other interference. Unplug the DC jack and remove backup batteries, plug the DC jack to the clock. Reinstall the backup batteries after 10 seconds. Sound Round will reset to default settings and you will need to set the time and alarm again.

### Product Care

1. Place Sound Round away from areas with direct sunlight, excessive heat or moisture.
2. Protect your furniture when placing Sound Round on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean Sound Round with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit.

### FCC Disclaimer

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Supplier's Declaration of Conformity

MODEL: Sound Round  
Number: CA-47

#### Responsible party

BIA Electronics, LLC.  
107E Beacon Street, Ste. A  
Alhambra, CA 91801

email: [support@hellocapello.com](mailto:support@hellocapello.com)

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.