

capello®

Users Guide

Power Tray

Alarm Clock
Wireless Phone Charger
USB-C Charging Port
Ambient Nightlight

CA-55W



Hello.

I remember lying in bed, 8 or 9 years old, staring at a dull black alarm clock and wondering who created it? That curiosity stuck with me and years later, as a designer, I was still questioning why alarm clocks were mostly boring black boxes? I came up with ideas with different shapes and finishes and shared them with others who were able to help bring them to life and make them available for everyone to enjoy. That's why we started Capello over 10 years ago.

Thank you for choosing one of my designs. I hope it will be a delightful bedside companion as you fall asleep each night and wake up each morning to a to a new day.

Sweet dreams with Power Tray, *Matthew*

Questions?

If you have any questions or issues, please reach out at hellocapello.com so we can help you out.

support@hellocapello.com

 


Enjoying Power Tray?

If you're enjoying your Power Tray consider supporting us and sharing a review to let other customers know that it may be a good option for them too.

<https://www.target.com/b/capello/-/N-562z2>



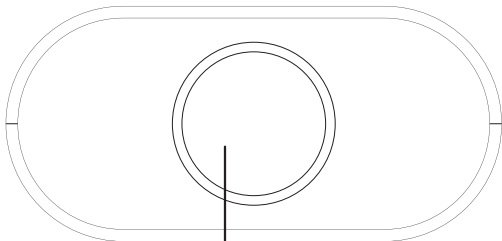

WIRELESS
CHARGING PAD

*SET POWER TRAY DOWN ON
DRESSER, NIGHTSTAND OR
OTHER HARD SURFACE
WHEN PRESSING THE TOP*

 
PRESS DOWN ON TOP TO
TURN NIGHTLIGHT ON/OFF
AND SNOOZE ALARM



BATTERY RED ●
ALARM 1 GREEN ●
ALARM 2 GREEN ●


12:46

WIRELESS CHARGING
● GREEN/RED
● PM BLUE
● AM AMBER

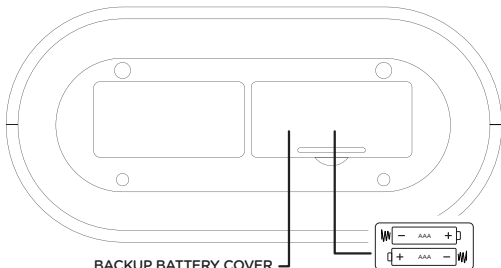

BACKUP BATTERY COVER
(2X AAA BATTERIES NOT INCLUDED)

 BATTERY ORIENTATION

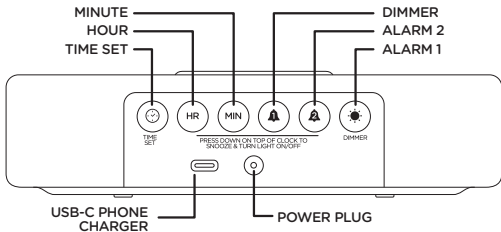

MINUTE
HOUR
TIME SET

DIMMER
ALARM 2
ALARM 1




**USB-C PHONE
CHARGER**

POWER PLUG

 
Installation

Plug in the AC/DC power cord to an AC wall outlet and then plug the other side into the back of Power Tray. Your Power Tray will turn on and is now ready to use.

Setting Time

1. On the back of the Power Tray, press the time set button , and the time will flash. Release the time set button .
2. Press **HR** and **MIN** to set the time (you can tap or hold down to change the time faster.) As you cycle through 1-12, the hours will change from AM to PM. To the right of the timer display an amber light indicates AM and a blue light indicates PM.
3. Press  again to exit the setup (or if no key pressed for about 10 seconds it will automatically exit the setup and save the time setting).

Adjusting the Display & Ambient Nightlight Brightness

Tap Brightness button  on the back of Power Tray to adjust the brightness of time display and nightlight.

Backup Battery Operation

With the backup batteries installed if there's a power failure or the clock is unplugged:

- the display will turn off
- press down on the top of Power Tray to turn the display on for a few seconds to see the time
- the alarms will still sound
- the time and alarm settings will be saved
- the nightlight will not work when running from the backup batteries





Backup Battery Installation

1. Remove the battery cover on the bottom of Power Tray.
2. Insert 2X AAA batteries (not included) with "+" and "-" ends of battery aligned as indicated (the "-" side of the battery touches the contact springs).
3. Replace the battery cover.

Note: When the backup batteries are installed if they are running low on power the low battery icon on the display will flash. If the batteries are completely dead the battery icon will stay lit. If not batteries are installed, the battery icon will not be displayed.



Note: Do not mix old and new batteries. Do not mix alkaline, standard and rechargeable batteries. Alkaline batteries are recommended.

Setting the Alarm

1. Press and hold the alarm button  until the display flashes then release the  button.
2. Press **HR** and **MIN** to set the time (you can tap or hold down to change the time faster.) As you cycle through 1-12, the hours will change from AM to PM. To the right of the timer display an amber light indicates AM and a blue light indicates PM.
3. Press  again “05” will flash. To set the snooze press **MIN** set the snooze duration to 5, 15 or 30 minutes.
5. Press  to exit the setup (or if no key pressed for about 10 seconds it will automatically exit the setup).



Repeat the same procedure using  button to set Alarm 2.

Using the Alarm

1. Press  once to activate Alarm and on the display to the left of the time a green LED will light.
2. Press  again to turn Alarm off and the green LED will turn off.

Repeat the same procedure using  button to use Alarm 2.

Note: The Snooze duration is set during the alarm setup.

Note: The Alarm 1  green LED is in to the left of the time display and the Alarm 2  green LED is below it.

When the Alarm Sounds

To snooze, press down on the top of the Power Tray. Please make sure Power Tray is sitting flat on a nightstand, dresser, desk or other hard surface.

The Snooze duration is set during the alarm setup.

To stop the alarm and reset it to sound again tomorrow, press any button on Power Tray (besides the Snooze button). The alarm chime will stop and the alarm will be set to sound again tomorrow.

Using the Ambient Nightlight

1. Press down on the top of Power Tray to turn on the nightlight. Please make sure Power Tray is sitting flat on a nightstand, dresser, desk or other hard surface.
2. To activate the nightlight sleep timer, press down again on the top of Power Tray to select between 20 minutes, 1 hour and 2 hours.
3. Press down on top of Power Tray to turn light off (5 seconds after the top has not been pressed).

Note: Tap Brightness button  on the back of Power Tray to adjust the brightness of time and nightlight.

Qi Wireless Charging

1. Place your wireless device on top of Power Tray. Charging will start automatically.
2. When your device is charging, the LED indicator to the left of the time display will light green.

Note: Power Tray has a protective circuit that detects when a device that is not Qi compatible or any metal object is set on charging pad and will disable power to the charger as a safety precaution. When the safety is triggered the LED indicator will flash red.

Note: Wireless charging works with Qi devices including iPhone 8 and newer devices and many Android phones.

Note: If your phone is in a case and is not charging, please try removing from the case to charge wirelessly.

USB Type-C Charging

Power Tray features as a USB Type-C (1A power) charging port on the back to charge many USB rechargeable devices including iPhone, iPad, AirPods, E-readers, digital cameras and more.

1. Connect a USB Type-C charging cable (not included) to port on the back of Power Tray
2. Connect the other end of the cable to your rechargeable device.

Troubleshooting

If Power Tray is not functioning properly, it may be caused by electro-static discharge or other interference. Unplug the DC jack and remove backup batteries, plug the DC jack to the clock. Reinstall the backup batteries after 10 seconds. Power Tray will reset to default settings and you will need to set the time and alarm again.

Contact customer support

support@hellocapello.com

Functions

Dual alarms with snooze

Dimmable time display

Ambient nightlight with sleep timer

Qi Wireless phone charger

USB Type-C charging port

Backup battery for alarm, temporary time display and settings save

Specifications

Alarm duration: 60 minutes (chime)

Snooze duration: 5-15-30 minutes (chime)

Defaults: Time - 12:00AM ; Alarm - 6:00AM;

Snooze - 5, 15, 30 minutes

Power: The output of the provided AC/DC adapter is 5V/2.4A

Product Care

1. Place Power Tray away from areas with direct sunlight, excessive heat or moisture.
2. Protect your furniture when placing Power Tray on a natural wood and lacquered finish by using a cloth or protective material between it and the furniture.
3. Clean Power Tray with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzine, thinner or similar materials can damage the surface of the unit.
4. Do not use old or used battery in Power Tray.
5. If Power Tray is not to be used for over a month or longer, remove the battery to prevent possible corrosion. If the battery compartment become corroded or dirty, clean the compartment and replace with new battery.



Limited 90 Day Warranty Information

Koda Electronics (HK) Co., Ltd warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

If you are experiencing any problems with the operation or function of your product, please make sure you have downloaded our full owners manual from our website for reference or email us at clocks@hellocapello.com for additional troubleshooting assistance. Should this fail to resolve the matter and service is still required by reason of any defect or malfunction during the warranty period, Koda will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to a designated factory service center. The product must include proof of purchase, including date of purchase.

Before returning this product for service:

1. Contact customer service to receive a Return Authorization number (RA#).
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of original date of purchase, if within the warranty period.
4. Write issued RA# on the top of shipping box.
5. Ship the package from shipping company of your choice, prepaid and insured, to the Koda Service Center address supplied by the Customer Service Representative. Be sure to save your tracking number

Disclaimer of Warranty

This warranty is valid only if the product is used for the purpose for which it was designed. It does NOT cover:

- (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons;
- (ii) cracked or broken cabinets, or units damaged by excessive heat;
- (iii) damage to digital media players;
- (iv) the cost of shipping this product to the Consumer Repair Department.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will Koda or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your Capello product.

For customer support, please e-mail us at: clocks@hellocapello.com

Questions? Visit www.hellocapello.com

FCC Disclaimer

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

MODEL: Power Tray

Number: CA-55W

Responsible party

BIA Electronics, LLC.

107E Beacon Street, Ste. A

Alhambra, CA 91801

email: support@hellocapello.com

Compliance information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.