

Strike Plate
2 Keys

CR2 Battery
Long Cap
2 Strike Plate screws
2 Bolt screws

Key Bezel

Bolt

Latch Bezel

What you need:

✔

 Phillips Screwdriver

✔

 Compatible iOS or Android Phone

level Lock

To enable HomeKit, scan this code during the installation steps in the Level app:



Support 7 days a week. Visit www.level.co/support for additional help.
2-year limited warranty. Visit www.level.co/warranty for more information.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more information on FCC compliance, please go to www.level.co/FCC.

Although the Level Lock Bolt Edition is built to ANSI specifications, it is not an ANSI or BHMA certified door lock. You are responsible for proper installation of the Level Lock and its use with a compatible American standard deadbolt that is operating in good condition. You assume all risk and responsibility in relation to the installation and performance of the lock and any third party components and services used in relation to the lock.

Please follow these suggestions and safeguards to decrease the chances of damage to your Level Lock and to lessen the risk of harm or injury:

- Use the lock for its intended purposes only.
- Keep body parts away from the lock during operation to avoid injury.
- Do not crush, perforate, drop, throw, or try to deform the lock or battery.
- Do not short external contacts or circuits, expose your lock or battery to water, liquids, or open flames or flammable substances, or dispose of them in fire, solvents, or water.
- Do not use the lock or battery if they aren't working properly or have been damaged or cracked.
- Dispose of the lock and battery in accordance with local requirements.
- Do not charge CR2 lithium batteries.

Battery life varies with usage.

Caution: This product comes with small parts and parts with sharp edges that may cause injury or create a choking hazard. To avoid injury or damage, keep away from children.

Revision 1.0



01 Test your deadbolt.

Make sure your current deadbolt throws smoothly without pushing or pulling the door.

02 Disassemble your lock and keep pieces.

Unscrew the lock housing, the deadbolt, and the strike plate. Store the deadbolt and strike plate in the Level box.

03 Install your Level Lock and strike plate.

A. Insert the bolt into your door with the word TOP facing up. Look through the borehole—if you can see the end of the bolt sticking out, you're good to go.

B. If you can't, simply take it out of your door and use a screwdriver to extend the bolt. Ensure the bolt snaps into place and put it back in your door, the word TOP facing up.

C. Fasten the bolt with the provided bolt screws.

D. Slide on the motor and make absolutely sure to **tighten the connecting screw**.

E. Fasten the strike plate to your door jamb with the provided strike plate screws.

A

B

C

04 Reassemble your lock using the Level bezels.

Using the Level bezels, thread the tailpiece through the middle hole and screw the two sides loosely together with the provided bezel screws.

05 Activate your Level Lock.

Unscrew the cap on the end of the bolt and insert the battery with the flat (negative) end towards the cap. When you screw it back in, you'll hear a welcome chirp.

Download the Level Home app for iOS or Android, create an account, and connect to your lock.

Scan the QR code on the back to enable HomeKit.