 
 


Handset (Front)

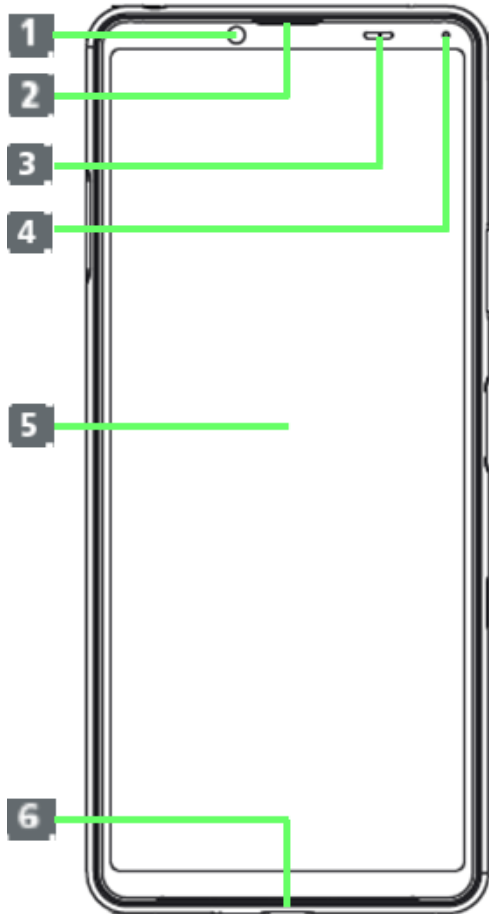


Part	Description
1 Front Camera	Use to shoot still images, videos of yourself, etc.
2 Earpiece/Speaker	Hear the other party's voice here.
3 Proximity/Light Sensor	Detects surrounding brightness to automatically adjust Display or backlight and prevent Touchscreen misoperation during a call.
4 Notification Lamp	Flashes for notifications while Display is off. Lights while charging.
5 Display	Touchscreen-type display, operate with your fingers on Display.
6 Speaker	Listen to music as well as video, etc. audio.

Handset (Back/Side)

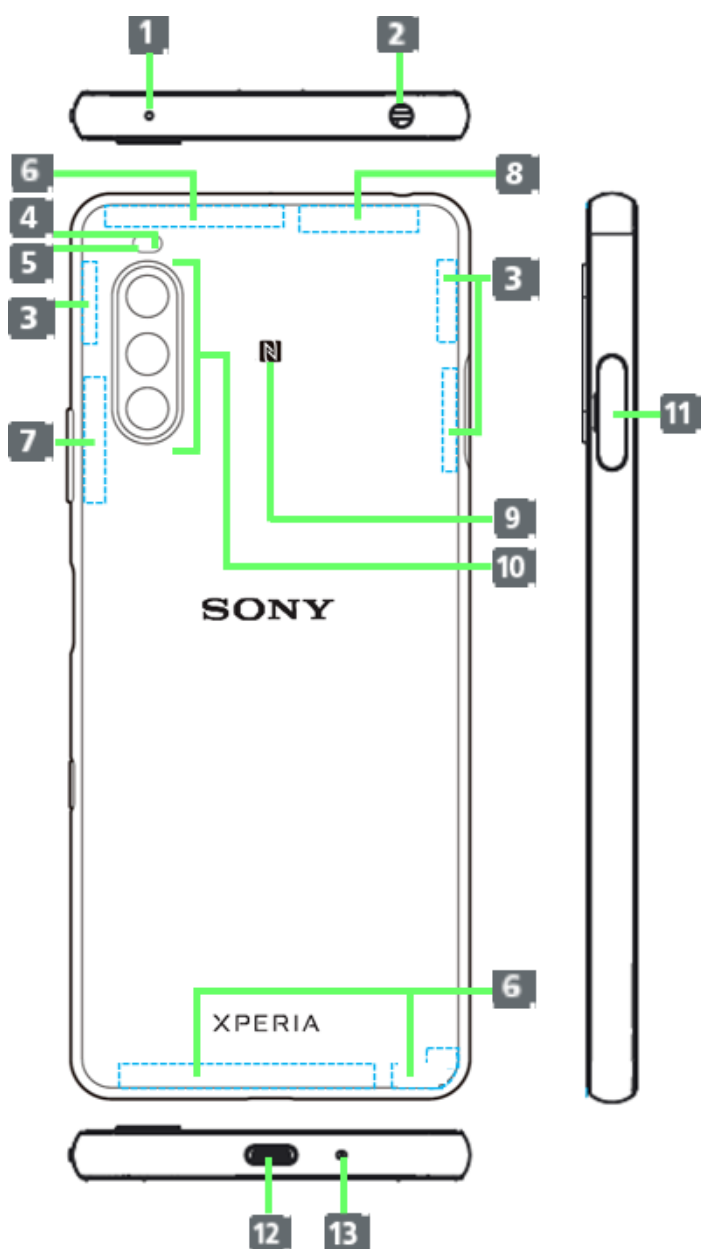

Part	Description
1 Second Mic	Reduces noise for calling.
2 Headphone Port	Connect commercially available headphones.
3 5G Antenna	Internal Antenna for data communication.
4 Flash/Photo Light	Use as camera flash when taking photos, etc.
5 RGB-IR Sensor	Automatically adjusts white balance based for shooting based on the light source.
6 5G/4G antenna	Internal Antenna for calls and data communication.
7 5G antenna/ Wi-Fi® antenna	Internal Antennas for calls, data communication, and Wi-Fi.
8 5G antenna/GPS/ Wi-Fi®/Bluetooth® antenna	Internal Antennas for data communication, and Wi-Fi, GPS, and Bluetooth features.
9 NFC / Osaifu-Keitai® Detection Area	Hold up to a reader/writer to use NFC / Osaifu-Keitai®.
10 Main Camera	Capture still images and videos.
11 SIM Card/SD Card Slot	Insert SIM Card/SD Card.
12 USB Type-C™ Port	Connect USB Type-C cable (commercially available), etc.
13 Mic	Speak here.

 Handset Keys

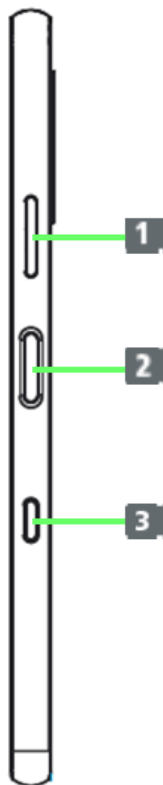

Part	Description
1 Volume/Zoom Up/Down Key	Adjust Volume. Adjust Zoom while using Camera.
2 Power Key/ Fingerprint Sensor	Long Press for power on/off. Turn Display on/off. Or, use Fingerprint authentication.
3 Google Assistant Key	Launch the Google Assistant.

Inserting SIM Card

SIM Card is an IC card containing phone number and other customer information.
Always unmount SD Card beforehand.

1

Pull Tray out from handset

- Pull SIM Card/SD Card Slot Cover out straight using fingernail in groove.

Set SIM Card into Tray with IC chip facing down

- Check SIM Card orientation by notch.
- Make sure SIM Card is in Tray securely.

Holding handset held level, press Tray in straight



SIM Card is inserted.

- Check Tray orientation.
- Press firmly where circled ○, and make sure there is no gap between handset and SIM Card/SD Card Slot Cover.



Handling SIM Card

For SIM Card handling, see following items.

① IC chip

For SIM Card handling, see SoftBank Website.

<https://www.softbank.jp/mobile/support/protect/usim/> (Japanese)

- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage SIM Card.



SIM Card Cautions

Observe the following when using SIM Card.

- Customer is responsible for any damage caused by inserting SIM Card in an other-brand IC card reader, etc. SoftBank Corp. is not responsible in such case.
- SIM Card is the property of SoftBank Corp.
- SIM is replaceable (at cost) in case of loss/damage.
- Return SIM Card to SoftBank Corp. when cancelling subscription.
- Returned SIM Cards are recycled for environmental purposes.
- Note that SIM Card specifications and performance may change without notice.

- It is recommended that you keep a separate copy of information that is stored on SIM Card. SoftBank Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM Card or handset (SIM Card inserted) is lost/stolen. For details, contact [Customer Service](#).

Powering On

1

Long Press Power Key until handset vibrates once



Lock Screen appears.

- Startup wizard appears for the first time handset is powered on. Follow onscreen instructions.
- Battery level is not sufficient if low battery indicator appears when Power Key is Pressed with handset powered off. Charge Internal Battery.

FCC ID

To view the regulatory compliance mark

- Find and tap **Settings** ➔ **About phone** ➔ **Certificates**

Regulatory compliance mark such as FCC ID is displayed on the screen.