

<div>Everly Bluetooth® Speaker</div> <div>IC: 21530-101131 FCC ID: 2AGR4-101131</div> <div><div>BC</div>Instruction Manual</div>	<div>OVERVIEW</div> <div><div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div><div><div><div>6</div><div>7</div></div></div></div></div><div><div>1.Power On/Off button</div><div>2.Previous Track/Volume down</div><div>3.Play/Pause, Hands-free call button</div><div>4.Next Track/Volume Up</div><div>5.Multi-function button</div><div>6.Micro SD slot</div><div>7.Micro USB Charging Port</div></div></div> <div><div>Bluetooth Operation</div><div>1. Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device.</div><div>2. Turn the speaker on, the indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode. The indicator light will go off if no Bluetooth devices are detected within 5 minutes.</div><div>3."GEMLINE SPKR" will appear on the Bluetooth device list, select "GEMLINE SPKR" to establish pairing. If instructed to enter a PIN code, please enter '0000'.</div><div>4. When you want to play audio from another Bluetooth device, disconnect the speaker from the original device and follow steps 1-3 to re-pair the speaker with a new Bluetooth enabled device.</div><div>BUTTON CONTROL</div><div><div>• Power On/Off: Press and hold the Power On/Off button for 2 seconds.</div><div>• Play/Pause: Quickly press the Play/Pause button once.</div><div>• Volume Up/ Next Track: Quickly press the + button once to change music to next track. Press and hold to increase volume.</div><div>• Volume Down/ Previous Track: Quickly press the - button once to change music to previous track. Press and hold to decrease volume.</div></div><div>HANDS-FREE PHONE USE</div><div><div>• Answer incoming call: Quickly press the Play/Pause button once.</div></div></div>	<div><div>• End call: Quickly press the Play/Pause button once.</div><div>• Reject incoming call: Press and hold the Play/Pause button twice.</div></div> <div><div>SD CARD PLAYING</div><div>Insert a SD card, the speaker will play the music on the card automatically.</div><div>Quickly press the multi-function button once to change the playback mode to Bluetooth mode.</div></div> <div><div>TRUE WIRELESS STEREO(TWS)</div><div>You can connect two Everly Bluetooth® Speakers as a pair for stronger surround sound stereo effect.</div><div><div>1. Make sure the Bluetooth function is OFF on your mobile device.</div><div>2. Turn on both speakers.</div><div>3. Quickly press the multi-function button once on one of the speakers (this will become the main speaker), both of speakers will enter TWS pairing mode. The TWS connection is successful once the LED of the main speaker flashes blue and the LED of the auxiliary speaker turns blue.</div><div>4. Follow the steps outlined in the Bluetooth operation section to connect your speakers to your mobile device.</div></div></div> <div><div>CHARGING THE SPEAKER</div><div><div>1.When the battery is low, please charge via the included USB cable.</div><div>The charging time is approximately 4.5 hours and provides up to 8</div></div></div>	<div>hours of continuous operation. Standby time is approximately 10 hours.</div> <div>2.The LED indicator light will be red during charging and will turn off once it is fully charged.</div> <div><div>WARNING</div><div><div>1. Do not disassemble, repair, or modify the speaker.</div><div>2. Do not place product in or near fire to avoid danger, as it uses a lithium battery.</div><div>3. Avoid storage at extreme temperatures, this can shorten the battery life and may affect the speaker.</div><div>4. Keep the speaker dry and do not store the speaker in damp areas to avoid damage to the speaker.</div><div>5. Avoid dropping the speaker as it may damage the speaker.</div></div></div> <div><div>KIND REMINDER</div><div><div>1. To prolong the speaker's life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time.</div><div>2. When an error occurs with the speaker, please turn off the speaker and restart it to troubleshoot.</div><div>3. When the speaker's power is low, the Bluetooth range may be affected. Please charge the speaker to avoid disruptions during use.</div></div></div>	
Front Cover	page 02	page 03	page 04	page 05

<div><div>SPECIFICATION</div><div>Model: Everly Bluetooth® Speaker</div><div>Bluetooth Specifications: Bluetooth® V5.0</div><div>Profiles Supported: A2DP/AVRCP/HSP/HFP</div><div>Wireless working range: 10M (without obstacles)</div><div>Built-in battery: Lithium Battery 1200mAh</div><div>USB Recharge voltage: DC 5V</div><div>Output power: 5W</div><div>Frequency Response: 20Hz-20KHz</div><div>Sensitivity: ≥90dB</div><div>Product dimensions: ø76mm * H101mm</div><div>Playback time: 8 hours</div><div>Charging time: 4.5 hours</div></div> <div><div>PACKING LIST</div><div>Bluetooth® Speaker</div><div>USB Charging Cable</div><div>User Manual</div><div>Gift Box</div></div>	<table><tr><th>Problem</th><th>Troubleshooting Method</th></tr><tr><td>Unable to pair the speaker with a mobile device</td><td><div>1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker.</div><div>2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices.</div><div>3. The power of the battery is insufficient, please recharge the speaker.</div></td></tr><tr><td>The music stops from time to time</td><td><div>1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range.</div><div>2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device.</div><div>3. The power of the battery is insufficient, please recharge the speaker.</div></td></tr><tr><td>The sound is low or distorted</td><td><div>1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed.</div><div>2. The power of the battery is insufficient, please recharge the speaker.</div></td></tr></table>	Problem	Troubleshooting Method	Unable to pair the speaker with a mobile device	<div>1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker.</div> <div>2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices.</div> <div>3. The power of the battery is insufficient, please recharge the speaker.</div>	The music stops from time to time	<div>1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range.</div> <div>2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device.</div> <div>3. The power of the battery is insufficient, please recharge the speaker.</div>	The sound is low or distorted	<div>1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed.</div> <div>2. The power of the battery is insufficient, please recharge the speaker.</div>	<div><div>The Bluetooth indicator light remains OFF</div><div><div>1. The power of the battery is insufficient, please recharge the speaker.</div><div>2. Restart the speaker.</div></div></div> <div><div>The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective owners.</div></div> <div><div>English:This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:</div><div>(1) This device may not cause interference.</div><div>(2) This device must accept any interference, including interference that may cause undesired operation of the device.</div><div>The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).</div></div>	<div>French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.</div> <div>L'exploitation est soumise aux deux conditions suivantes : (1) Cet appareil ne doit pas provoquer d'interférence. (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.</div> <div>L'appareil numérique du Canada conforme canadien peut - 3 (b) / NMB - 3 (b).</div> <div>This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.</div> <div>cet appareil est conforme à l'exemption des limites d'exposition courante dans la section 2.5 du cnr - 102 et conforme avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.</div> <div>This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.</div> <div>Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.</div> <div>Portable</div> <div>RF Exposure Statement</div> <div>The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 0mm between the radiator and your body.</div> <div>L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé avec une distance minimale de 0 mm entre le radiateur et votre corps.</div> <div>PMN: Everly Bluetooth Speaker</div>	<div>FCC Statement</div> <div>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div> <div><div>• Reorient or relocate the receiving antenna.</div><div>• Increase the separation between the equipment and receiver.</div><div>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</div><div>• Consult the dealer or an experienced radio/TV technician for help.</div></div> <div>Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.</div> <div>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</div> <div>RF Exposure Information</div> <div>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0mm between the radiator and your body.</div>
Problem	Troubleshooting Method											
Unable to pair the speaker with a mobile device	<div>1. Inspect whether the speaker is searching for a Bluetooth enabled device to connect to. If not, restart the speaker.</div> <div>2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices.</div> <div>3. The power of the battery is insufficient, please recharge the speaker.</div>											
The music stops from time to time	<div>1. Inspect the distance between the speaker and the Bluetooth enabled device, it may exceed the Bluetooth transmission range.</div> <div>2. Inspect if there is an obstacle between the speaker and the Bluetooth enabled device.</div> <div>3. The power of the battery is insufficient, please recharge the speaker.</div>											
The sound is low or distorted	<div>1. Inspect the volume of the connected speaker or Bluetooth enabled device and adjust the volume as needed.</div> <div>2. The power of the battery is insufficient, please recharge the speaker.</div>											
Back Cover	page 06	page 07	page 08	page 09								