

<div>Connecting to BT</div> <div><ul style="list-style-type: none"><li>• The product is on with AUX mode. Click the "MODE" button, once you hear ding-dong sound. BT mode is on.</li><li>• Turn on your smartphone's BT and search for the device. Then you will read Model on smartphone.</li><li>• Connect with Model. Click the "ok" on smartphone.</li><li>• "Connected" message will appear. Connection is successful. (play and select music with smartphone when connected through BT).</li></ul></div>
<div>Micro SD Function</div> <div><ul style="list-style-type: none"><li>• Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automaacally.</li><li>• Press "PLAY/PAUSE"button to connnue play/pause music.</li><li>• Press "NEXT" button to go to next song.</li><li>• Press "PREVIOUS" to go back to previous song.</li></ul></div>
<div>USB Function</div> <div><ul style="list-style-type: none"><li>• Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automacally.</li><li>• Press "PLAY/PAUSE" to continue play/pause music.</li><li>• Press "NEXT" button to go to next song.</li><li>• Press "PREVIOUS" to go back to the previous song.</li></ul></div>
<div>FM Radio Function</div> <div><ul style="list-style-type: none"><li>• Press "MODE" on the product to switch to FM mode. Radio will start automatically.</li><li>• Press "PLAY/PAUSE" button for a second to enter into automaac FM channel searching.</li><li>• Press "NEXT" button to go to next frequency.</li><li>• Press "PREVIOUS" to go back to previous frequency.</li></ul></div>
<div>TWS Function</div> <div><p>*Turn on two products of the same model, switch both products to BT mode. Next, press "MODE" button of the two product at the same time. Be patient. Firstly use this function, it will take about 20 seconds at most. And for your next time use, it will be more convenient that the products can be connected automatically.</p><p>*Disconnect TWS: So long as you press the "MODE" button of the two products at the same time for some seconds. Once you hear ding-dong sound, the TWS function is disconnected successfully.</p></div>

Bluetooth Speaker



Carefully read User Guide to operate this unit properly.  
Keep for future reference.

Instruccion Manual


You are welcome to purchase and use the company's digital active speakers, to ensure the safe use of this product and to achieve the best results, please read this manual carefully.

This product can be connected to PC, TV, CD, VCD, DVD, TUNER, TAPE, USB, TF, BT and other audio equipment, it is easy to carry, multi-functional with perfect design, excellent sound quality performance, we believe it will bring you New feeling.

Warm prompt

When charging the unit, please turn off the power switch, so as not to damage the battery, do not constantly use the machine for a long time. In order to keep the battery in good condition, please charge and discharge the battery for every 30 days or so.

PANEL FUNCTION DECLARATION

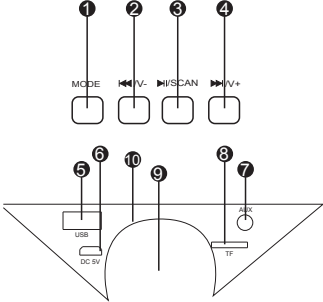

1.Mode (LINE IN, MP3, FM, BT)

2. Previous song Press the button for a second to lower the volume.(FM: Previous channel)

3.Play/ Pause (FM: Automatic Search)

4. Next song Press the button for a second to lower the volume.(FM: The next channel)

5.USB socket

6.Charging socket (DC 5V)

7.Audio input socket

8.Micro SD card socket

9.Knob (Power Switch and Volume Control)

10.Power indicator

FCC Statement BT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Statement for IC

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L' appareil ne doit pas produire de brouillage;  
(2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

And The Responsible Party Information as follow:  
Company Name :Bytech N Inc.  
Address:2585 est 13 street, Broolyn, N 11223, USA  
Telephone:(718) 419-3700  
ebsite:www.bytechintl.com