
Size: 222.75(W) x 100(H)mm



## FRONT SIDE

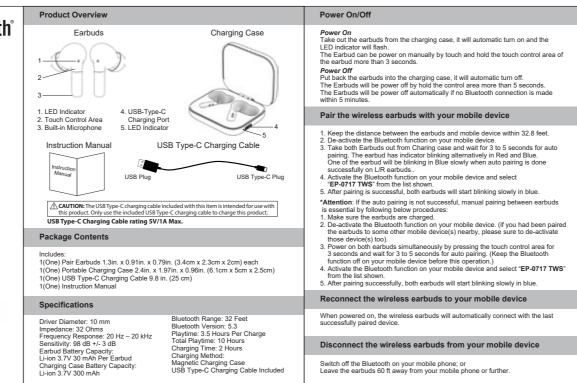



Answer / Reject a call	FAQ	FCC STATEMENT	
When receive a call, click touch control area once (on either earbud) to accept the call, or answer the call normally via your mobile phone.  Touch and hold touch control area for 2 seconds to reject it.	If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated.	This device complies with the part 15 of the following two conditions:(1) this device may not device must accept any interference receive undesired operation.	ot cause harmful interference, and (2)
End a call	If the wireless earbuds will not turn on:	Caution: changes or modifications not expres compliance could void the user's authority to	
To end the call, just click touch control area once at any side of earbud with Beep sound to end it.	Make sure the earbuds are fully charged.	NOTE: This equipment has been tested and f	ound to comply with the limits for a Cl
Functions	Can I change the battery for the earbuds and the charging case?  The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed.	B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed provide reasonable protection against harmful interference in a residential installati. This equipment generates, uses and can radiate radio frequency energy and, if installed and used in accordance with instructions may cause harmful interference radio communications. However, there is no guarantee that interference will not oc in a particular installation. If this equipment does cause harmful interference to radic television reception, which can be determined by turning the equipment off and on. I user is encouraged to try to correct the interference by one or more of the follow	
Pause / Play Music: Click touch control area once.  Skip to next track of music: Double click the right side earbud touch control area.  Back to previous track of music: Double click the left side earbud touch control area.  Voice Assistant: Press and hold the touch control area for 2 seconds.	If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.		
Charging your Earbuds		measures:  • Reorient or relocate the receiving antenna.	
Open the charging case cover.     Insert the earbuds into the charging case.     The earbuds will start to charge automatically.     LED indicator of the earbud will be turned to Red when charging your earbuds. The Blue LED on Charging case will be on.	<ul> <li>⚠ Safety instructions for the lithium battery and charging the product</li> <li>The input voltage to the product is 5V 1A.</li> <li>In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.</li> </ul>	voltage to the product is 5V 1A.  charge the product is safe manner and reliable conditions, please to ertified appropriate charger/ adapter for charging the product. ge the product at ambient temperatures between 10°C/50°F and "F.  at above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. the product after use. the that we won't take any responsibility for any wrong operation ge higher than 5V) as this may result in severe injury or loss of and we cannot control the operating process during the time the user	
5. Once fully charged, all LED will be off.  Recharge Charging Case	Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F.      Do not best shows 70°C/158°F and Do not expose to suplicible or throw into fire.		
⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product.  DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.  1. Use the USB Type-C charging cable provided with the packaging.  2. Connect the USB Type-C plug to USB Type-C charging port on the charging case,	- Switch off the product after use Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.		
then connect the USB plug to a wall adapter to begin charging.  3. The Red LED on the charging case will be flashing during charge.  4. Once fully charged, the Red LED will be stop flashing.	In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FC .	
NOTE:  • You must select a qualified charger from a regular manufacturer.		FCC ID: 2ADM5-EP-0717	ITEM# EP-0717
You must charge the charging case and earbuds if it has been not used for more than 6 months.			Distributed by 1616 Holdings, In 701 Market Street, Suite 200 Philadelphia, PA 19106
USB Plug USB Type-C Plug		Keep All Relevant Information For Future Reference	Made in China