 


U020

RC Bait Boat

 
GPS VERSION

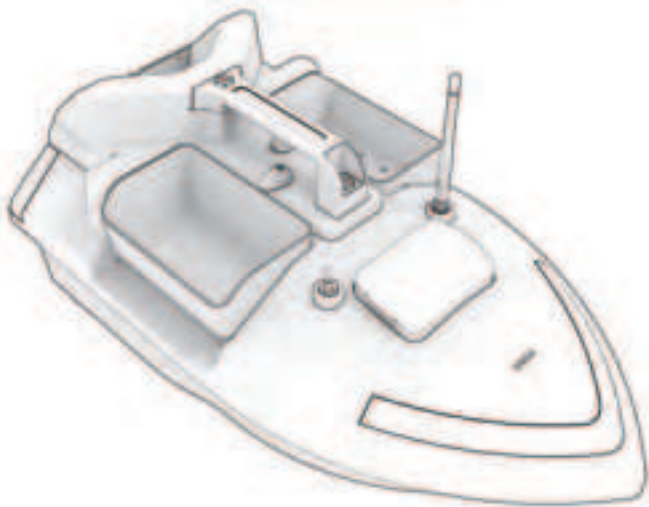

USER MANUAL

UD20 GPS BAIT BOAT

Product Details

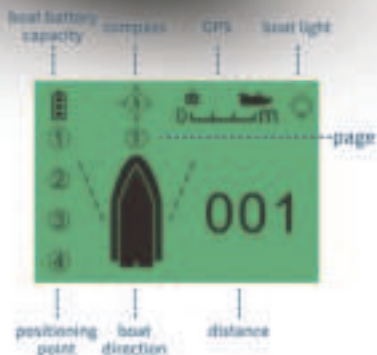

UD20 GPS BAIT BOAT



START UP

1. Place the foot on a flat road and turn on the power of the foot.
2. Turn on the power of the remote control. The green light of the remote control indicator is always on.
Note: Do not put the foot on the slope before the foot is parked, check the left and right sensors to see if they work before driving.

Calibration

1. When the GPS unit is displayed, put the boat into the motor and drive the boat 7 meters away from the buoy to ensure that there are no obstructions around.

Positioning point storage

2. When the LPL icon is displayed, the positioning agent changes to the operator.
3. It is recommended to set an origin point when the beam starts to move, and to wait to set the "T" point on page 4 in the menu.
1. While the laser is falling, press and hold the On button and release the green positioning agent 1, 2, 3, 4 buttons to move the location. One page can move up to 4 positioning points. After the agent is successful, the corresponding number will be displayed on the screen. When a screen page is full of positioning points, you can press the page back to set the positioning points on the next page.
6. Press and hold the delete button to automatically clear all saved information.

UD20 GPS BAIT BOAT

Cruise operations

1. Press any button of the preselected point 1-2-3-4 on the remote control to start automatic cruise after setting all the points.
 2. When reaching about 1m around the target point, the cruise ends. (There will be a distance display on the remote control screen, and the display distance is the distance between the setting point and the boat.) When the boat stops at the point set of the trial is wrong, please re-select.
- Remarks: If you want to cancel the preselected point cruise, just need to put in the control button on the corresponding preselected point button, and the boat will stop working.

Fixed-speed cruise

1. Push the back speed control lever up at the same time to drive the boat go forward.
 2. Long press the fixed speed cruise button to enter the fixed speed cruise control mode.
 3. The remote control lever can then used the direction of the boat.
- Remarks: After entering the fixed speed cruise control mode, press the fixed speed cruise button to exit.

Boat power display

1. The LCD screen displays the battery power of the boat. There are 3 levels in total. When the battery level is only 1 grid left, it should be charged or replaced in time.
2. The boat is in a low power state, and the beep will automatically return to the origin point.

Poor signal reminder

1. When the signal of the boat is poor, the red light of the remote control indicator will flash, and make a "B1" "B1" green sound.
2. When the boat is in a poor signal state for a long time, the boat will automatically return to the origin point.

Frequency Matching

If the boat does not connect with the remote control, it needs to be re-paired. Turn off the power of the remote control and the boat boat, and re-pairing the boat and the remote control. Put the boat on the ground, long press and hold the pairing button on the remote control, then turn on the boat switch, and then turn on the remote control switch, when the remote control shows a "BEEP" sound, the green indicator light on the remote control always on, indicating that the remote control and the boat have been connected.

UD20 GPS BAIT BOAT



STREAMLINED HULL
2.4G GPS REMOTE CONTROL
7.4V LARGE CAPACITY BATTERY

Battery usage and charging instructions:

● Boat battery (standard configuration)

● Connect to the power supply

This boat has a built-in battery, just connect the battery connector when using



UD20 GPS BAIT BOAT

Maintenance

• **remote control**

Please remove the battery when not in use for a long time.

• **motor**

Check the motor for debris after each use


• **Boat Hull**

1. After use, please wipe off the water to keep the hull dry and clean.
2. When the battery is not in use for a long time, please take it out and charge it for storage.
3. Do not store corrosive liquids and items together
4. Keep away from high temperature objects.
5. When not in use, please store the boat to prevent dust.



UD20 GPS BAIT BOAT

产品功能图

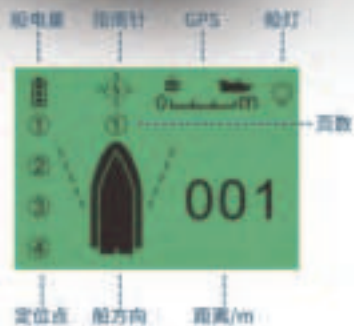

UD20 GPS BAIT BOAT



开帆

- 注意：尾对焊机不要放在斜坡，在下水前操作一下左右马达看能否正常工作

校址

1. GPS图标有显示时，将放入水中，并打开光源7米远，确保周边无障碍物
2. 按下OK键+灯光键（进入自动巡航模式），灯光会停一圈，然后右转一圈，然后停止转动，收放完成。

定位点存储

1. GPS图标  有显示时，才能操作定位点存储
2. 建议靠近待测位置一个高点，务必将第4页的“1”点设为原点
3. 鼠标左键中，按着OK键连续按定位点1、2、3、4，一页最多存储4个定位点，操作成功后，屏上显示按点编号，如为第5页按点已满，则可按下翻页键，进入下一个页面进行定位点设置
4. 长按一键清除按钮，自动清除所有存储数据

UD20 GPS BAIT BOAT

巡航操作

- 1.按下遥控器的定点编号1、2、3、4任意一码，开始自动巡航
- 2.到达待定点1米左右，巡航结束；(遥控器屏幕上会有距离显示，显示距离为定位点和船的垂直距离)当船出现偏移或跑的位置不对时，请重新校准
- 备注：如需取消定点巡航，则需按下取消键或对应定位点键，船就会停止工作

定速巡航

- 1.遥控器同时向上推杆
- 2.完成定速巡航键，进入巡航模式
- 3.推杆杆可以微调船航行的方向
- 备注：进入定速巡航模式后，设定巡航速度以定速巡航

船电量显示

1. LCD 将显示船电量，一共有7个等级，电池满格仅剩1格时，应当及时进行充电或者更换电池
- 2.船处于低电状态，遥控信号会断断续续

低信号

- 1.船信号差时，遥控器红色灯闪烁并发出“滴”“滴”的提示声
- 2.当长时间处于信号较差状态时，船会自动返回原点

对频

如果船与遥控器失去连接，需要重新配对，关闭遥控器和灯架给电源，需要重新对频船和遥控器运行时间，把船放置于地面，先按遥控器上的对频键，再按下船的开关，接着推动遥控器上的开关，当遥控器发出“滴”一声时，遥控器上的绿色指示灯常亮，表示遥控器与船体已经连接。

UD20 GPS BAIT BOAT



流线型船体
2.4G GPS遥控器
7.4V 大容量电池

电池使用与充电说明:

●主机电池 (标配)

本机内置一组电池。使用时将电池接口对接即可

●外接电源



保养维护

• 遥控器

在长时间不使用时请取出电池。

• 马达

每次使用完后要检查马达是否有缠绕杂物

• 船体

- 1、使用完毕后请擦拭水分保持船体的干燥和清洁。
- 2、电池在长时间不使用时，请取出并充电存放。
- 3、不要把腐蚀性液体和物品一起存放。
- 4、请勿靠近高温物体。
- 5、不使用时，请将打窝船存放起来，以防沾尘土。



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.