


80mm

80mm

Party sync mode compatible model list

AAABLU100006839	AAABLU100006889
AAAGRY100006839	AAAGRY100006889
AAAAQU100006839	100008734
AAAGRY100006897	100008736
AAAAQU100006897	AAAGRY100006896
AAAGRY100006902	AAAGRY100006838

onn.™



USER MANUAL INSERTS FOR FCC ID

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

USER MANUAL INSERTS FOR FCC ID

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

3.The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

4. Rating Lable is located at the bottom of the product.

PDF
Adobe



Rugged Speaker Quick Start Guide

 
What's in the Box?

Check to make sure you have everything below.



1. Rugged Speaker
2. Strap
3. Quick Start Guide
4. Charging Cable

Get to Know Your Rugged Speaker

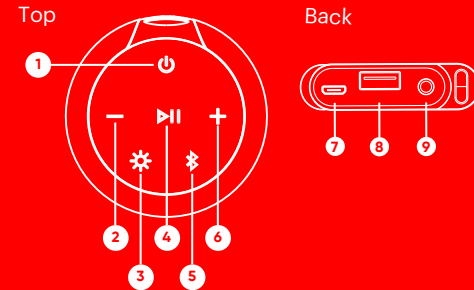

1. Power
2. Volume-/
Previous track
3. Light
4. Play/Pause/
Speakerphone
5. Bluetooth
6. Volume+/
next track
7. Input charging port
8. Output charging port
9. Aux in

 
Power & Bluetooth® Connection

01

Long press to power on / off the speaker




In Bluetooth mode, activate the Bluetooth function on your device and search Bluetooth devices, then select "onn. Rugged LG GRY" to start connecting.

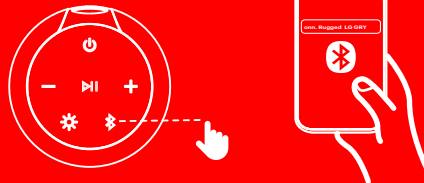

Play Music

02

Short press "▷||" to execute play and pause
Short press "-" to reduce volume.
Long press "-" to previous song.
Short press "+" to increase volume.
Long press "+" to next song.

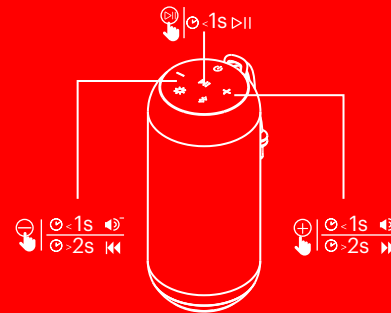 

©2019 Walmart
onn. is a trademark of Walmart
All Rights Reserved.

AAAGRY100006896

 


We'd love to hear from you. Scan
with your Walmart app and let us
know what you think.

Aux Input

03

Use a 3.5mm cable (not included) to connect the speaker to another audio source. Press Play on the device and adjust the volume on the speaker to obtain the desired volume.

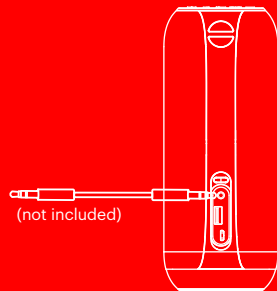

Answer Calls

04

Short press to answer an incoming call, press again to hang up the call.
Long press to reject an incoming call.

 


Party Sync Mode

05

Power on one speaker and hold Bluetooth button 3 seconds to enter into pairing mode, this device will be the master. The second device will connect automatically to the master when turned on.


After the two speakers are paired together, use your mobile device to pair with the master speaker utilizing the Bluetooth pairing method.

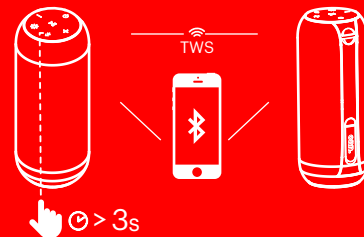

Waterproof

06

 IPX7 waterproof, can work well in up to 3 feet of water for 30 minutes without any connection.

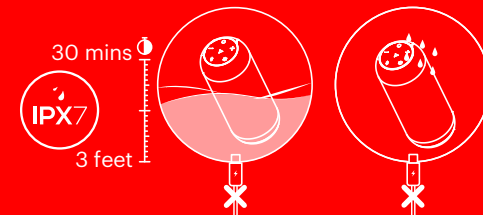

Need help?
We're here for you every day
7 a.m. - 9 p.m. CST.
1-888-516-2630
Give us a call!