

 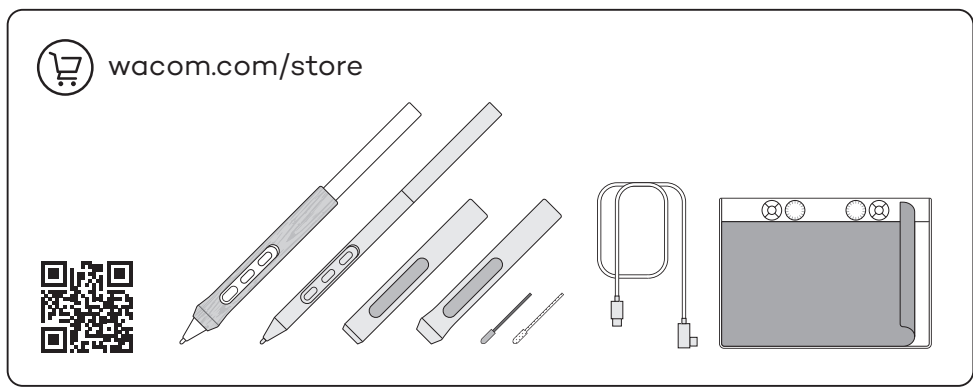
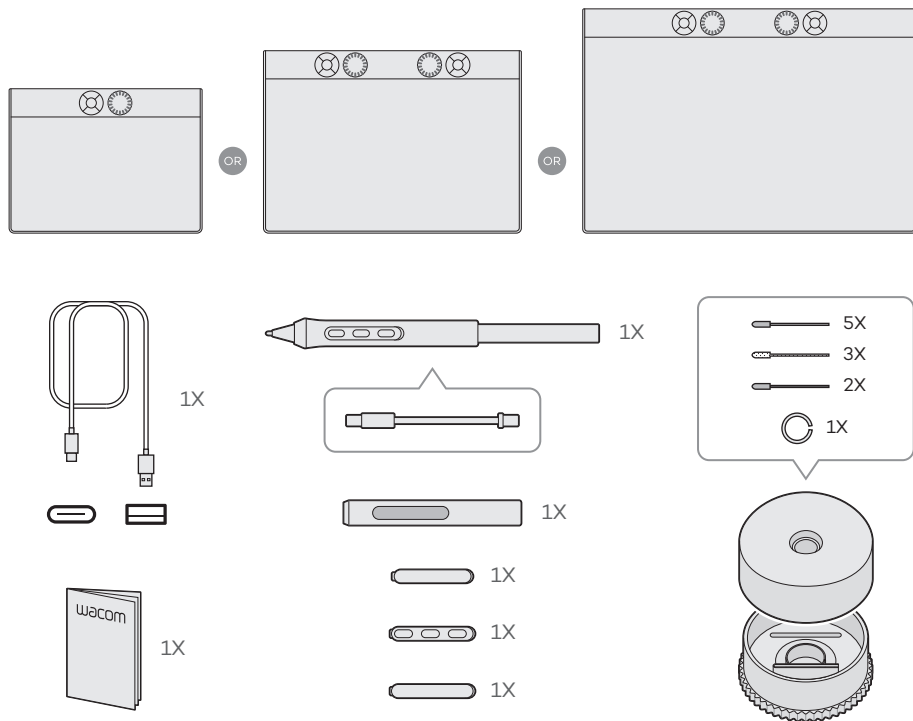



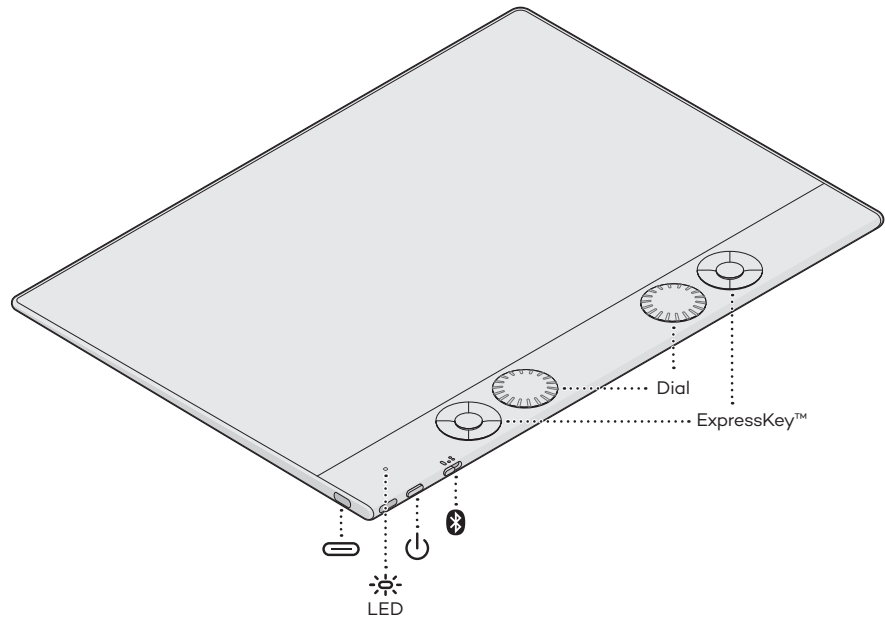

account.wacom.com

Wacom® Intuos Pro

Quick Start Guide

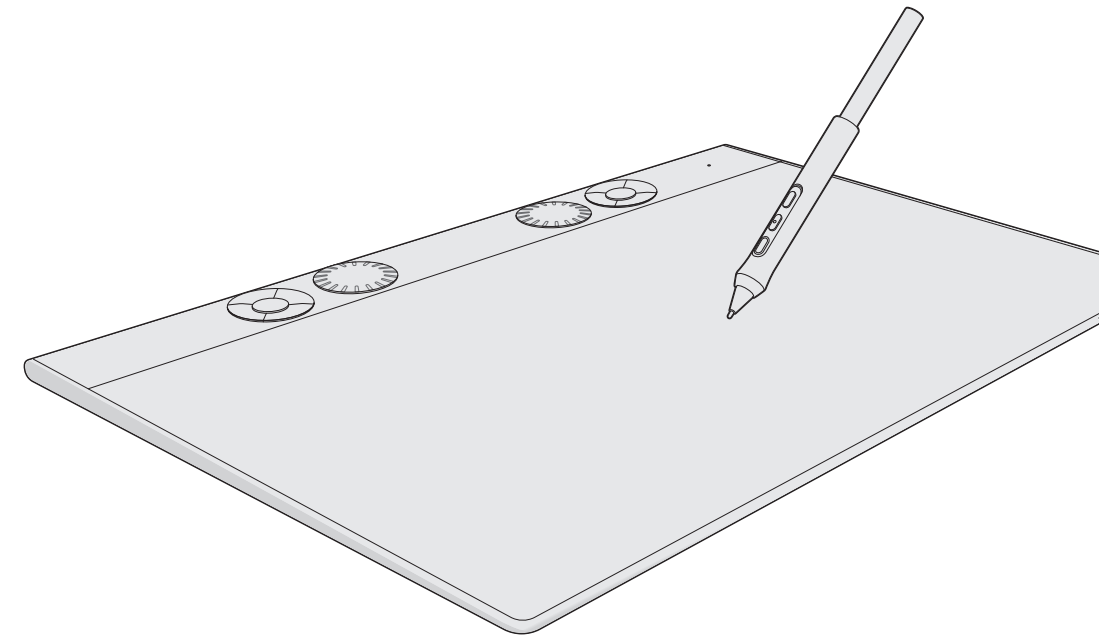

5

©2025 Wacom Co., Ltd. All rights reserved.
Wacom, the Wacom logo, ExpressKey and Intuos are trademarks and/or registered trademarks of Wacom Co., Ltd.
Windows is a trademark of Microsoft group of companies.
macOS is a trademark of Apple Inc.
USB-C is a trademark or registered trademark of USB Implementers Forum.
The Bluetooth word mark and its logo are registered trademarks owned by Bluetooth SIG, Inc.

©2025 Wacom Co., Ltd. Tous droits réservés.
Wacom, le logo Wacom, ExpressKey et Intuos sont des marques commerciales et/ou déposées de Wacom Co., Ltd.
Windows est une marque commerciale du groupe de sociétés Microsoft.
macOS est une marque commerciale d'Apple Inc.
USB-C est une marque commerciale et/ou déposée d'USB Implementers Forum.
La marque verbale et le logo Bluetooth sont des marques commerciales déposées appartenant à Bluetooth SIG, Inc.

 
6

PRN-B357




Getting Started

<https://Start.IntuosPro.Wacom.com>







1 USB-C to A

 

OR

Bluetooth

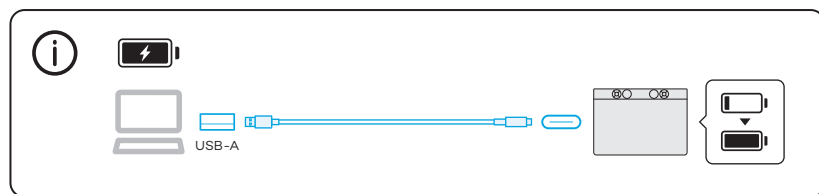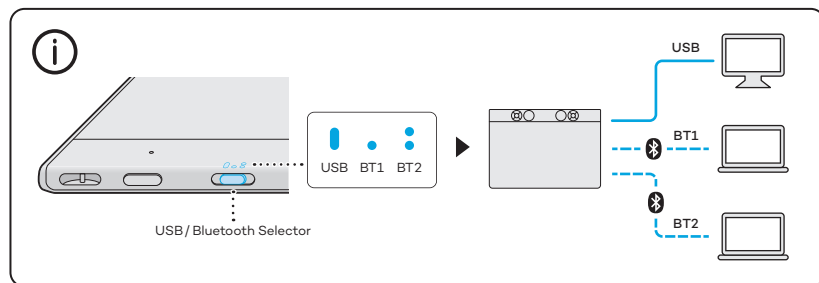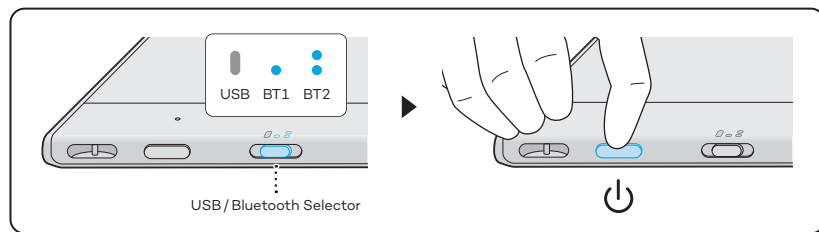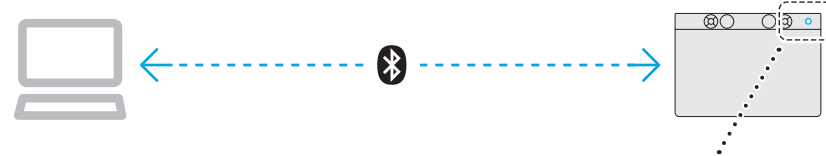

2

Windows OS



OR



 
macOS



wacom.com/download




1



2




 
3



4



5

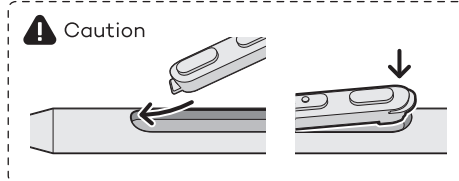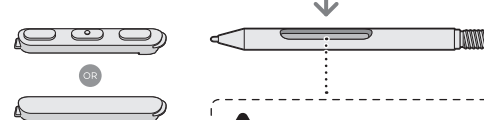

6



7

