 


# Nokia 6030 User Guide

---

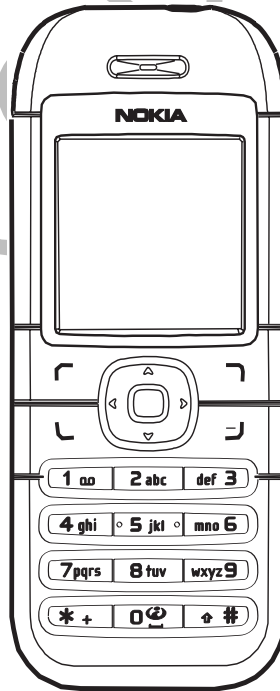

9241289  
Issue 1

#### DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product Nokia 6030 is in conformity with the provisions of the following Council Directive: 1999/5/EC.

A copy of the Declaration of Conformity can be found at  
[http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

PART NO. 9241289, Issue NO. 1

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia 6030, Nokia Connecting People, and Xpress-on are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2005, Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice. Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

#### Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC DRAFT

FCC INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

## Contents

---

<b>FOR YOUR SAFETY.....</b>	<b>5</b>	Write compound words .....	22
		Traditional text input.....	22
<b>General information.....</b>	<b>8</b>	Tips for writing text .....	22
Access codes.....	8	<b>5. Menu functions.....</b>	<b>25</b>
Security code.....	8	Access a menu function.....	25
PIN codes .....	8	Messages.....	25
PUK codes .....	8	Text messages (SMS) .....	25
Restriction password.....	8	Multimedia messages (MMS) .....	28
Download content and applications .....	9	Voice messages .....	30
Nokia support on the Web .....	9	Info messages.....	31
Shared memory.....	9	Service commands .....	31
<b>1. Get started .....</b>	<b>11</b>	Delete all messages in a folder....	31
Install the SIM card and battery ....	11	Message settings.....	31
Charge the battery.....	12	Call log .....	33
Switch the phone on and off.....	13	Recent calls lists.....	33
Normal operating position.....	13	Counters and timers.....	33
<b>2. Your phone.....</b>	<b>15</b>	Contacts .....	34
Keys and connectors .....	15	Search for a contact.....	34
Standby mode .....	15	Save names and phone numbers .....	34
Wallpaper.....	16	Add more details to names.....	34
Screen saver .....	16	Copy contacts.....	35
Power saving.....	16	Edit contact details.....	35
Essential indicators.....	16	Delete contacts or details.....	35
Keypad lock (keyguard) .....	17	Business cards .....	35
Change the covers .....	17	Settings.....	35
<b>3. Call functions.....</b>	<b>19</b>	Groups .....	36
Make a call .....	19	1-touch dialing .....	36
Last number redial .....	19	Other Contact functions.....	36
Call your voice mailbox .....	19	Settings .....	36
1-touch dialing .....	19	Profiles.....	36
Answer or reject a call.....	19	Themes.....	37
Call waiting .....	20	Tone settings.....	37
Options during a call.....	20	Personal shortcuts.....	37
<b>4. Enter text .....</b>	<b>21</b>	Display settings.....	38
Settings.....	21	Time and date settings.....	38
Predictive text input .....	21	Call settings.....	38
		Phone settings.....	39
		Connectivity.....	40

Enhancement settings.....	40	Browse the Mobile Web.....	49
Configuration settings.....	41	Disconnect from the Mobile Web	50
Security settings.....	42	Browser appearance settings .....	50
Restore factory settings.....	42	Cookies.....	51
Operator menu.....	43	Bookmarks.....	51
Gallery.....	43	Download .....	52
Radio .....	44	Service inbox .....	52
Listen to the radio .....	44	Cache memory .....	53
Tune a radio channel.....	44	Browser security.....	53
Basic radio functions .....	44	SIM services .....	55
Organizer.....	45	<b>6. Battery information .....</b>	<b>56</b>
Alarm clock.....	45	Charging and discharging.....	56
Calendar.....	46	Nokia battery authentication	
Calculator.....	46	guidelines.....	57
Applications .....	47	<b>7. Enhancements.....</b>	<b>60</b>
Games and applications.....	47	<b>Care and maintenance .....</b>	<b>62</b>
Web .....	48	<b>Additional safety information</b>	<b>64</b>
Access services.....	48		
Setting up Web service .....	49		
Service connection .....	49		

FOR YOUR SAFETY

## FOR YOUR SAFETY

---

Read these simple guidelines. Not following them may be dangerous or illegal.  
Read the complete user guide for further information.



### SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



### ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



### INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



### SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



### SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



### SWITCH OFF WHEN REFUELLING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



### SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



### USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



### QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



### ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.

## FOR YOUR SAFETY



### WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



### BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



### CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



### EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the standby mode. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

## ■ About your device

The wireless device described in this guide is approved for use on the EGSM 900 and 1800 network, and on the GSM 850 and 1900 network. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



**Warning:** To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

## ■ Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks

#### FOR YOUR SAFETY

may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as text messages, multimedia messages and content and application download require network support for these technologies.



## General information

---

### ■ Access codes

#### Security code

The security code helps to protect your phone against unauthorized use. It has 5 to 10 digits. The preset code is 12345. Change the code, and keep the new code secret and in a safe place separate from your phone. To change the code, and to set the phone to request the code, see "Security settings," p. 43.

If you enter an incorrect security code five times in succession, the phone ignores further entries of the code. Wait for 5 minutes and enter the code again.

#### PIN codes

- The PIN (personal identification number) code, supplied with your SIM card, helps to protect your SIM card against unauthorized use. They have 4 to 8 digits. See "Security settings," p. 43.
- The PIN2 code may be supplied with the SIM card and is required to access some functions, such as call counters.
- The module PIN is required to access the information in the security module of your SIM card. See "Security module," p. 54.
- The signing PIN is required when using the digital signature. See "Digital signature," p. 56.

#### PUK codes

The PUK (personal unblocking key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code. They have 8 digits.

#### Restriction password

The restriction password is required when using the *Call restriction service*. See "Security settings," p. 43. It has 4 digits.

If the codes or passwords are not supplied with the SIM card, contact your local service provider.

## General information

### ■ Download content and applications

You may be able to download new content (for example, images) and applications into the phone. For availability, contact your network operator or service provider.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

### ■ Nokia support on the Web

Check [www.nokiausa.com/support](http://www.nokiausa.com/support) or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

### ■ Shared memory

The phone has three different memories. The following features in this device may share the first memory: contacts, text messages, instant messages and SMS e-mails, voice tags, calendar and notes. The second shared memory is used by multimedia messages, files stored in **Gallery** and configuration settings. The third shared memory is used by e-mail application, Java™ games and applications. Use of one or more of these features may reduce the memory available for the remaining features sharing the same memory. For example, saving many **Gallery** items may use all of the available memory in the second memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the corresponding shared memory before continuing.

General information

FCC DRAFT

## 1. Get started

---

### ■ Install the SIM card and battery

 
Keep all SIM cards out of the reach of small children.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.




**Note:** Always switch off the power and disconnect the charger and any other device before removing the covers. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.


1. To remove the back cover of the phone, press and push the back cover to slide the back cover toward the bottom of the phone, then take the cover off from the phone

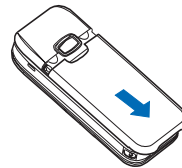

 2. To remove the battery, lift it as shown.



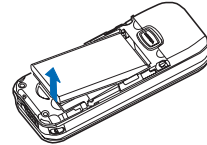


 3. Carefully lift the SIM card holder from the finger grip of the phone, and open the flip cover.

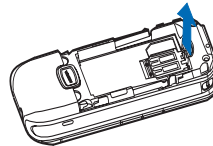

## Get started

   4. Insert the SIM card, so that the bevelled corner is on the upper right side and the gold-colored contact is facing downward. Close the SIM card holder and press it to lock it into place.
5. Insert the battery into the battery slot. See "Nokia battery authentication guidelines," p. 58. Position the battery so the gold-colored contacts match up with those on the phone. Insert the battery into the battery slot. Snap the other end of the battery into place.
6. Align the back cover with the back of the phone and slide it upwards. Push the back cover up to the top of the phone to lock it.

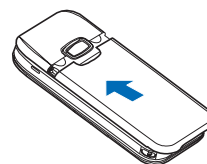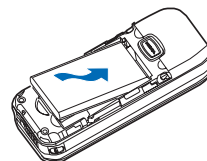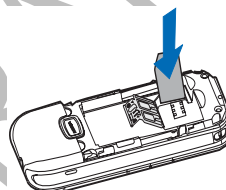


## ■ Charge the battery



**Warning:** Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the ACP-12 charger. This device is intended to use battery of BL-5C.

 1. Connect the charger to an ac wall socket.
2. Connect the lead from the charger to the socket on the bottom of your phone.

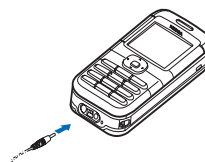

## Get started

 


**Note:** Do not touch this connector as it is sensitive for electrostatic discharge.

Charging time depends on the charger and the battery used. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

For availability of approved enhancements, please check with your dealer.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

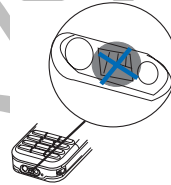

## ■ Switch the phone on and off



**Warning:** Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key as shown.

If the phone asks for a PIN or security code, enter the code supplied with your SIM card (displayed as \*\*\*\*), and select **OK**.

See also "Access codes," p. 9.

 


## ■ Normal operating position

Your device has an internal antenna.



**Note:** As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.



FCC DRAFT

Get started

Your phone


## 2. Your phone
 
### ■ Keys and connectors




**Warning:** The 4-way navigation keys in this device may contain nickel. It is not intended to come into prolonged contact with the skin. Continuous exposure to nickel on the skin may lead to nickel allergy.

- Power key (1)
- Earpiece (2)
- Loudspeaker (3)
- Left, right and middle selection keys (4)
- 4-way navigation keys (5)
- Call key (6)
- End key (7)
- Key pad (8)

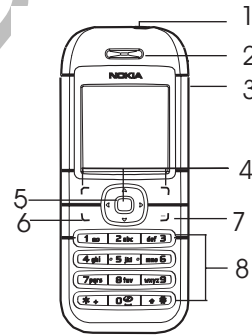

 
- Charger connector (9)
- Bottom connector (10)
- Headset connector (11)
- Eyelet for the wrist strap (12)

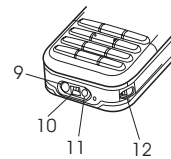

### ■ Standby mode

When the phone is ready for use, before you enter any characters, the phone is in the standby mode. The following information is displayed on the screen:

 - Name of the network or the operator logo (1)
- Signal strength of the cellular network at your current location (2)
- Battery charge level (3)
- Left selection key (4) is Go to in the standby mode.

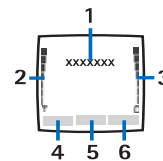



Select **Go to** to view the functions in your personal shortcut list. Select **Options** > *Select options* to view the list of available functions that you can add in the options list. Scroll to the desired function, and select **Mark** to add the function to the shortcut list. To remove a function from the list, select **Unmark**. To rearrange the functions on your shortcut list *Organize*, the function, and **Move** ; then choose the location.

- Menu (5)
- Names (6)

### Wallpaper

 
You can display wallpaper, a background picture, when the phone is in the standby mode. See "Display settings," p. 39.

### Screen saver

You can set your phone to display a screen saver when the phone is in the standby mode. See "Display settings," p. 39.

### Power saving

To save power, a digital clock view overwrites the display when no phone function is used for a certain period of time. If you have not set the time, 00:00 is displayed. See "Display settings," p. 39.



### Essential indicators



You received one or more text, picture, or multimedia messages. See "Read and reply to messages," p. 28 or "Read and reply to an MMS," p. 30.



The phone logged a missed call. See "Call log," p. 34.



The phone keypad is locked. See "Keypad lock (keyguard)," p. 18.







The phone does not ring for an incoming call or message when *Incoming call alert* and *Message alert tone* are set to *Off*. See "Tone settings," p. 38.



The alarm clock is set to *On*. See "Alarm clock," p. 46.

## Your phone

-  When the GPRS connection mode *Always online* is selected and the GPRS service is available, the indicator is shown on the top left of the display. See "GPRS connection," p. 41.
-  When the GPRS connection is established, the indicator is shown on the top left of the display. See "GPRS connection," p. 41 and "Browse the Mobile Web," p. 51.
-  The GPRS connection is suspended (on hold).
-  The loudspeaker is activated. See "Options during a call," p. 21.

## ■ Keypad lock (keyguard)

You can lock the keypad to prevent the keys from being accidentally pressed.

Select **Menu > \*** within 1.5 seconds to lock or unlock the keypad. To answer a call when the keyguard is on, press the call key. During a call, the phone operates normally. When you end or reject the call, the keypad remains locked. For *Automatic keyguard*, see "Phone settings," p. 40.

 
When the keypad lock is on, calls still may be possible to the official emergency number programmed into your device.

## ■ Change the covers



**Note:** Always switch off the power and disconnect the charger and any other device before removing the covers. Avoid touching electronic components while changing the covers. Always store and use the device with the covers attached.

1. Remove the back cover. See "Install the SIM card and battery," p. 12.
2. Lift the top cover by the finger grips.

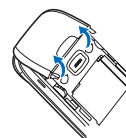


Your phone

3. Take off the front cover carefully.



 4. Remove the keymat from the front cover, and insert it into the new front cover.

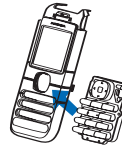

5. Align the top of the front cover to the top of the phone, press the front cover to lock it into place.
6. Replace the back cover.

### 3. Call functions

---

#### ■ Make a call

1. Enter the phone number, including the area code. If you enter an incorrect character, press **Clear** to delete it.

For international calls, press \* twice for the international prefix, and then enter the country code, the area code, and the phone number.

2. Press the call key to call the number.
3. Press the end key to end the call or to cancel the call attempt.

To search for a name or phone number that you have saved in *Contacts*, see "Search for a contact," p. 35. Press the call key to call the number.

#### Last number redial

In the standby mode, press the call key once to access the list of numbers you last called. Scroll to the number or name that you want, and press the call key to call the number.

#### Call your voice mailbox

For availability, contact your network operator or service provider

In the standby mode, press and hold 1, or press 1 and the call key.

If the phone asks for the voice mailbox number, enter it and select **OK**. See also "Voice messages," p. 31.

#### 1-touch dialing

Assign a phone number to one of the 1-touch dialing keys, from 2 to 9.

See "1-touch dialing," p. 37. Call the number in either of the following ways:

- Select the 1-touch dialing key that you want, and press the call key.
- If *1-touch dialing* is set to on, press and hold a 1-touch dialing key until the call is started. See "Call settings," p. 40.

#### ■ Answer or reject a call

Press the call key to answer an incoming call. Press the end key to end the call.

## Call functions

Press the end key to reject an incoming call. If you select **Silence**, only the ringing tone is muted. Then either answer or reject the call.

### Call waiting

For availability, contact your network operator or service provider.

During a call, press the call key to answer the waiting call. The first call is put on hold. Press the end key to end the active call. To activate the *Call waiting* function, see "Call settings," p. 40.

### ■ Options during a call

Many of the options that you can use during a call are network services. For availability, contact your network operator or service provider.







 

**Warning:** Do not hold the device near your ear when the loudspeaker is in use because the volume may be extremely loud.

Enter text

## 4. Enter text

---

You can enter text using traditional or predictive text input.

When you enter text, predictive text input is indicated by  and traditional text input by  at the top left of the display. The character case is indicated by , , or . To change the character case, press #. The number mode is indicated by . To change between the letter and number mode, press and hold #.

### ■ Settings

When writing text, select **Options** > *Dictionary on*.

To set predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages on the list.

When writing text, select **Options** > *Dictionary off*.

### ■ Predictive text input

You can enter any letter with a single key press. Predictive text input is based on a built-in dictionary to which you can add new words.

1. With predictive text input on (see "Settings," p. 37), press a key once for each letter. The word changes after each keystroke.

**Example:** To write Nokia when the English dictionary is selected, press 6, 6, 5, 4, 2.

For more instructions on writing text, see "Tips for writing text," p. 23.

2. When you finish the word and it is correct, press 0 to confirm the word and add a space. The navigation keys also moves the cursor.

If the word is not correct, press \* repeatedly, and when the word that you want appears, confirm it; or select **Options** > *Matches*, scroll to the desired word, and press **Use**.

If the ? character is displayed after the word, your word is not in the dictionary. To add the word to the dictionary, select **Spell**, enter the word (in traditional input), and select **Save**. When the dictionary is full, the new word replaces the oldest one that was added.

Enter text

3. Write the next word.

### **Write compound words**

Enter the first part of the word, press the right navigation key, then write the last part of the word.

### **■ Traditional text input**

With predictive text input off (see "Settings," p. 37 ), press a number key repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the language you selected.

If the next letter you want is located on the same key, wait until the cursor appears, then enter the letter.

The most common punctuation marks and special characters are available with \*.

### **■ Tips for writing text**

The following functions may also be available for writing text:

- To insert a space, press 0.
- Press the navigation keys to move the cursor.
- To insert a number while in letter mode, press and hold the desired number key.
- To delete a character to the left of the cursor, select **Clear**. Select and hold **Clear** to delete the characters more quickly. To delete all the characters at once, select **Options > Clear text**.
- To quickly set predictive text input on or off when writing text, press and hold **Options**.
- To insert a word when using predictive text input, select **Options > Insert word**. Write the word using traditional text input, and select **Save**. The word is also added to the dictionary.
- To insert a special character when using traditional text input, press \*. When using predictive text input, press and hold \*, or select **Options > Insert symbol**. Select the character and **Insert**.

#### Enter text

- To insert a smile icon when using traditional text input, press \* twice. When using predictive text input, press and hold \* and press \* again, or select **Options > Insert smiley**. Select a smiley and **Insert**.

The following options are available when writing text messages:

- To insert a number while in letter mode, select **Options > Insert number**. Enter the phone number and press **OK**; or press **Find**, search for it in *Contacts*; and press **Select** and **OK**.
- To insert a name, select **Options > Insert contact**, and a contact. To insert a phone number or a text item attached to the name, select **Options > Insert contact**, scroll to a contact, select **Options > View details**, and the item.



FCC DRAFT

Enter text

## 5. Menu functions

---

The phone offers you an extensive range of functions, which are grouped into menus.

### ■ Access a menu function

1. To access the menu, select **Menu**.
2. Use the navigation keys to scroll through the menu. To change the menu view, see *Menu view* in "Display settings," p. 39.
3. If the menu contains submenus, select the one that you want.
4. Select **Back** to return to the previous menu level and **Exit** to close the menu.

### ■ Messages

The message services can only be used if they are supported by your network or your service provider.



To select the font size for reading and writing messages, select **Menu > Messages > Message settings > Other settings > Font size**.



**Note:** When sending messages, your device may display *Message Sent*. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

### Text messages (SMS)

Using the short message service (SMS) your phone can send and receive multipart messages, which consist of several ordinary text messages (network service). Invoicing may be based on the number of ordinary messages that are required for a multipart message.

Before you can send a message, you need to save some message settings. See "Settings for text messages," p. 32.

You can also send and receive text messages that contain pictures. A picture message can be a multipart message.



**Note:** The picture message function can be used only if it is supported by your network operator or service provider. Only compatible devices that offer picture message features can receive and display picture messages. The appearance of a message may vary depending on the receiving device.

### Write and send messages

Your device supports the sending of text messages beyond the normal 160-character limit. If your message exceeds 160 characters, it will be sent as a series of two or more messages. The number of available characters and the current part number of a multipart message are shown on the top right of the display (for example, 120/2). Note that using special (Unicode) characters take up more space. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.

1. Select **Menu** > *Messages* > *Create message* > *Text message*.
2. Enter a message. See "Enter text," p. 22. To insert text templates or a picture into the message, see "Templates," p. 28.
3. To send the message, select **Send**.  
The messages that you send are saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "Settings for text messages," p. 32.
4. Enter the recipient's phone number or search for the phone number in *Contacts*. Select **OK** to send the message.


### Options for sending a message


After you have written a message, press **Send** to display the sending options. With *To many* you can send the message to several recipients. With *Via sending profile* you can use a predefined message profile to send the message. To define a message profile, see "Settings for text messages," p. 32.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages will be sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number of characters that can be sent in a single message.

## Menu functions


### Read and reply to messages

When you receive a message,  and the number of new messages, followed by *messages received*, are shown.

The blinking  indicates that the message memory is full. Before you can receive new messages, delete some of your old messages.

1. Select **Show** to view the new message or **Exit** to view it later.

If you receive more than one message, select the one that you want to read.

An unread text message is indicated by .

2. While you are reading a message, select **Options** and an option, such as delete, forward, or edit the message; rename the message you are reading; or move it to another folder.

*Copy to calendar* — to copy text at the beginning of the message to your phone's calendar as a reminder note for the current day.

*Message details* — to view, if available, the sender's name and phone number, the message center used, and the date and time of receipt.

*Use detail* — to extract numbers, e-mail addresses and Web site addresses from the current message.

When reading a picture message, select *Save picture* to save the picture in the *Templates* folder.

3. To **Reply**, select the message type, then reply to a message.

When you reply to an SMS e-mail, confirm or edit the e-mail address and subject first. Then write your reply message.



4. To send the message, select **Send** > **OK**.

### Inbox and sent items

The phone saves incoming text and multimedia messages in the *Inbox* folder.

Sent text messages are saved in the *Sent items* folder if the *Save sent messages* is set to *Yes*. See "Settings for text messages," p. 32.

### Templates

Your phone includes text templates, indicated by , and picture templates, indicated by .

To access the template list, select **Menu** > *Messages* > *Saved items* > *Text messages* > *Templates*.

## Menu functions

- To insert a text template into the message, select the text template that you want to insert.
- To insert a picture into the text message, select **Options** > *Insert picture*, a picture, *View*, and *Insert*. The number of characters that you can enter in a message depends on the size of the picture.  
To view the text and the picture together before sending the message, select **Options** > *Preview*.

## Saved items and My folders

To organize your messages, you can move some of them to the *Saved items* folder, or add new folders for your messages. While reading a message, select **Options**.

To add or delete a folder, select **Menu** > *Messages* > *Saved items* > *Text messages*, and *My folders*. To delete a folder, scroll to the folder, select **Options** > *Delete folder*.

## Multimedia messages (MMS)

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

Multimedia messaging is a network service.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

An MMS can contain text, sound, and a picture. The phone supports messages that are up to 100 KB in size. If the message contains a picture, the phone scales it down to fit the display area.

You can not receive an MMS if you have a call in progress, or a game or another Java application running. Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.


## Write and send an MMS


To define the settings for an MMS, see "Settings for MMS," p. 32. To check availability and to subscribe to an MMS service, contact your network operator or service provider.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

#### Menu functions

1. Select **Menu** > *Messages* > *Create message* > *Multimedia msg.*
2. Enter a message. See "Enter text," p. 22.
  - To insert a file in the message, select **Options** > *Insert* and select the desired option.
  - Your phone supports the sending and receiving of MMS messages that contain several pages (slides). To insert a slide in the message, select **Options** > *Insert* > *Slide*. Each slide can contain text and one image.  
If the message contains several slides, to open the desired one, select **Options** > *Previous slide*, *Next slide*, or *Slide list*. To set the interval between the slides, select *Slide timing*.
3. To send the message, select **Send** > *To phone number*, *To e-mail address*, or *To many*.
4. Enter the recipient's phone number or e-mail address or search for it in *Contacts*.

While the message is being sent,  is displayed and you can use other functions on the phone. If there is an interruption while the message is being sent, the phone tries to resend it a few times. If this fails, the message will remain in the *Outbox* folder and you can try to resend it later.

The messages that you send are saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "Settings for MMS," p. 32. Multimedia messages are indicated with .


#### Read and reply to an MMS



**Important:** Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

When your phone is receiving an MMS,  is displayed. When the message has been received,  and *Multimedia message received* are shown.

The appearance of an MMS may vary depending on the receiving device.

1. Select **Show** to view the message or **Exit** to view it later.  
If you have more than one message, select the one that you want to read. An unread MMS is indicated by .
2. The function of the middle key changes according to the currently displayed attachment in the message.

## Menu functions

To view the whole message if the received message contains a presentation, select **Play**.

To zoom in on an image, select **Zoom**. To view a business card or calendar note, or to open a theme object, select **Open**.


3. To reply to the message, select **Options > Reply > Text message**, or **Multimedia msg**. Enter the reply message, and select **Send**. You can send the reply message only to the person who sent you the original message.

Select **Options** to access available options.

## Folders

The phone saves the received MMS in the *Inbox* folder. Messages that have not yet been sent are moved to the *Outbox* folder. The messages that you wish to send later can be saved in the *Saved items* folder. The messages that you send are saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "Settings for MMS," p. 32.


## MMS memory full

When you have a new multimedia message waiting and the memory for the messages is full,  blinks and *Multimedia memory full. View waiting msg.* is shown. To view the waiting message, select **Show**. To save the message, select **Options > Save message**. To delete old messages, select the old message to be deleted. To discard the waiting message, select **Exit > Yes**. If you select **No**, you can view the message.

## Voice messages

The voice mailbox is a network service. For more information and for the voice mailbox number, contact your service provider.

Select **Menu > Messages > Voice messages**. To call your voice mailbox, select *Listen to voice messages*. To enter, search for, or edit your voice mailbox number, select *Voice mailbox number*.

If supported by the network,  will show new voice messages. Select **Listen** to call your voice mailbox number.



**Tip:** Press and hold 1 to call your voice mailbox if you have the number set.

## Menu functions

### Info messages

With the info message network service, you may be able to receive messages on various topics. For details, contact your service provider.

### Service commands

Select **Menu > Messages > Service commands**. Enter and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

### Delete all messages in a folder

To delete all messages from a folder, select **Menu > Messages > Delete messages**. Select the folder from which you want to delete the messages, and select **Yes** to confirm the query.

If the folder contains unread messages, the phone will ask whether you want to delete them also.

### Message settings

The message settings affect the sending, receiving, and viewing of messages.

#### Settings for text messages

Select **Menu > Messages > Message settings > Text messages**. Select *Sending profile*. Your SIM card supports more than one message profile set; select the set that you want to change. Each profile set has the following settings: *Message center number* (delivered by your service provider), *Primary recipient number*, *Delivery reports*, *Use packet data*, *Reply via same center* (network service) and *Rename sending profile* (not available for the default profile).

Select *Save sent messages* > **Yes** to set the phone to save sent messages in the *Sent items* folder. If you select **No**, the sent messages are not saved.

Select *Automatic resending* > **On** or **Off** to activate or deactivate resending messages when the messages were failure to be sent out.

#### Settings for MMS

Select **Menu > Messages > Message settings > Multimedia msgs**. Define the settings for the options:



## Menu functions

- *Save sent messages.* Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.
- *Delivery reports* sets the network to send delivery reports about your messages (network service).
- *Scale image down* defines the image size when you insert the image into the multimedia message.
- *Default slide timing* defines the default time for slides in multimedia messages.
- *Allow multimedia reception.* Select *No*, *Yes*, or *In home network* to use the multimedia service. If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive. The default setting to receive multimedia messages is generally on.
- *Incoming multimedia messages.* Select *Retrieve* to automatically allow the reception of multimedia messages, *Retrieve manually* to allow the reception of multimedia message only after being prompted, or *Reject* to prevent the reception of multimedia messages.
- *Configuration settings.* Select *Configuration* and select the default service provider for retrieving multimedia messages. Select *Account* to see the accounts provided by the service provider. If more than one account is displayed, select the one that you want to use. You may receive the settings as a configuration message from the service provider. To enter the settings manually, see "Configuration settings," p. 42.
- *Allow advertisements* to choose if you allow the reception of messages defined as advertisements. This setting is not shown if *Allow multimedia reception* is set to *No*.

### Common settings

Select **Menu** > **Messages** > **Message settings** > **Other settings** > **Font size** to select the font size for reading and writing messages.

## Menu functions

### ■ Call log

The phone logs the phone numbers of missed, received, and dialed calls, and the approximate length of your calls. (network service)



The phone logs these items only if the network supports these functions and the phone is switched on and within the network service area.

When you select **Options** in the *Missed calls*, *Received calls*, and *Dialed numbers* menus, you can view the date and the time of the call, edit or delete the phone number from the list, save the number in *Contacts*, or send a message to the number. Select *Clear recent call lists* to delete the recent calls lists.

### Recent calls lists

Select **Menu** > *Call log* and the appropriate list.

*Missed calls* displays the list of phone numbers from which somebody has tried to call you (network service). The number in front of the name or phone number indicates the amount of calls from that caller.

When a note about missed calls is displayed, select **List** to access the list of phone numbers. Scroll to the number that you would like to call back, and press the call key.

*Received calls* displays the list of recently accepted or rejected calls (network service).

*Dialed numbers* displays the list of recently called.

In the standby mode, press the call key once to access the list of dialed numbers. Scroll to the number or name that you want, and press the call key to call the number.

*Delete recent call lists* deletes the recent calls lists. Select whether you want to delete all the phone numbers or only the numbers in a specific list. You cannot undo this operation.


### Counters and timers



**Note:** The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding off for billing, taxes and so forth.

Select **Menu** > *Call log* > *Call timers*, *Packet data counter*, or *Packet data conn. timer* for approximate information on your recent communications.

## ■ Contacts

You can save names and phone numbers (**Contacts**) in the phone memory and in the SIM card memory. The phone memory may save contacts with numbers and text items. Names and numbers saved in the SIM card memory are indicated by .



### Search for a contact

Select **Menu** > *Contacts* > *Names* > *Options* > *Find*. Scroll through the list of contacts or enter the first letter of the name for which you are searching.

### Save names and phone numbers

Names and numbers are saved in the used memory. Select **Menu** > *Contacts* > *Names* > *Options* > *Add new contact*. Enter the name and the phone number.

### Add more details to names

In the phone memory for contacts you can save different types of phone numbers, and short text items per name.

The first number you save is automatically set as the primary number, and it has a frame around the number type indicator. When you select a name, the primary number is used unless you select another number.

1. Make sure that the memory in use is either *Phone* or *Phone and SIM*.
2. Scroll to the name to which you want to add a new number or text item, and select **Details** > *Options* > *Add detail*.
3. To add a number, select *Number* and one of the number types.  
 To change the number type, scroll to the desired number, and select **Options** > *Change type*. To set the selected number as the primary number, select *Set as primary*.  
 To add another detail, select *Add detail* and *E-mail address*, *Web address*, *Street address*, or *Note*.
4. Enter the number or text item; to save it, select **OK**.
5. To return to the standby mode, press the End key.

## Menu functions

### Copy contacts

Search for the contact you want to copy, and select **Options > Copy**. You can copy names and phone numbers to and from the phone contact memory to and from the SIM card memory. The SIM card memory can save names with one phone number attached to them.

### Edit contact details

Search for, or scroll to, the contact you want to edit and select **Details**. To edit the name, scroll to it and select **Options > Edit name**. To edit the number, scroll to it and select **Options > Edit number**. To edit a text item, scroll to it and select **Options > Edit detail**.

### Delete contacts or details

To delete all the contacts and the details attached to them from the phone or SIM card memory, select **Menu > Contacts > Delete all contacts > From phone mem., or From SIM card**. Confirm the change with the security code.

To delete a contact, search for the desired contact, and select **Options > Delete contact**.

To delete a number or text attached to the contact, search for the contact, and select **Details**. Scroll to the desired detail, and select **Options > Delete > Delete number or Delete detail**.

### Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card. To send a business card, search for the contact whose information you want to send, and select **Options > Send bus. card > Via multimedia or Via text message**.

When you receive a business card, select **Show > Save** to save the business card in the phone memory. To discard the business card, select **Exit > Yes**.

### Settings

Select **Menu > Contacts > Settings** and an option. To select SIM card or phone memory for your contacts, select **Memory in use**. To recall names and number from both memories, select **Phone and SIM**; the names and numbers will be saved in the phone memory. To select how the names and numbers in contacts are

displayed, select *Contacts view*. To view the free and used memory capacity, select *Memory status*.

### Groups

Select **Menu** > *Contacts* > *Groups* to arrange the names and phone numbers saved in the memory into caller groups with different ringing tones.

### 1-touch dialing

To assign a number to a 1-touch dialing key, select **Menu** > *Contacts* > *1-touch dialing*, and scroll to the 1-touch dialing number that you want.

Select *Assign*, or if a number has already been assigned to the key, select **Options** > *Change*. Select *Find*, then the number you want to assign. If the *1-touch dialing* function is off, the phone asks whether you want to activate it. See also *1-touch dialing* in "Call settings," p. 40.

To make a call using the 1-touch dialing keys, see "1-touch dialing," p. 20.

### Other Contact functions

Select **Menu** > *Contacts*, and the following functions may be available:

- *Info numbers* — to call the information numbers of your service provider if the numbers are included on your SIM card (network service).
- *Service numbers* — to call the service numbers of your service provider if the numbers are included on your SIM card (network service).
- *My numbers* — to view the phone numbers assigned to your SIM card, if the numbers are included on your SIM card (network service).

## ■ Settings



### Profiles

Your phone has various setting groups, profiles, for which you can customize the ringing tones for different events and environments. Personalize the profiles to your own liking and activate a profile to use it. Available profiles are *Normal*, *Silent*, *Meeting*, *Outdoor*, *My profile 1*, and *My profile 2*.

Select **Menu** > *Settings* > *Profiles*, and a profile.

#### Menu functions

- To activate the selected profile, select *Activate*.
- To customize the profile, select *Customize*. Select the setting you want to change, and make the changes.
- To set the profile to be active until a certain time up to 24 hours, select *Timed* and set the time for the profile setting to end. When the time expires, the previous profile that was not timed becomes active.

To change the profile quickly in the standby mode, press the power key, and select the profile that you want to activate and *Select*.

#### Themes

A theme is a package that may include a screen saver, a wallpaper graphic, a ringing tone, and a color scheme to customize your phone for different events and environments. Themes are stored in *Gallery*.

Select **Menu** > *Settings* > *Themes*. To activate a theme, select *Select theme* > *Themes* to the folder and select a theme. See "Gallery," p. 44. To download new themes, select *Theme downloads*. See "Download," p. 53.

#### Tone settings

You can change the settings of the selected active profile.

Select **Menu** > *Settings* > *Tones*, and change any of the options. You can find the same settings by selecting **Menu** > *Settings* > *Profiles*, a profile, and *Customize*. See "Profiles," p. 37.

Select *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group. Select the caller group you want or *All calls* > **Mark**.

#### Personal shortcuts

With personal shortcuts you get quick access to frequently used phone functions.

##### Right selection key

Select **Menu** > *Settings* > *My shortcuts* > *Rightselection key* to allocate one phone function from a predefined list to the right selection key. See also "Standby mode," p. 16. This menu is not shown in some operator variants.

### Navigation key

Select **Menu** > *Settings* > *Personal shortcuts* > *Navigation key* to select shortcut functions for the navigation key. Scroll to the desired navigation key, select **Change** and a function from the list. To remove a shortcut function from the key, select *(empty)*. To reassign a function for the key, select **Assign**.

### Display settings

Select **Menu** > *Settings* > *Display*. You can define the following settings:

- Select *Wallpaper* to set your phone to display a background image, known as wallpaper, when the phone is in the standby mode.
- Select *Screen saver* > *Screen saver* > *Image* to choose a graphic from *Gallery*. Select in *Time-out* the time after which the screen saver will be activated. Select *On* to activate the screen saver.
- Select *Power saver* > *On* to save some battery power. A digital clock is displayed when no function of the phone is used for a certain time. See "Power saving," p. 17.
- Select *Color schemes* to change the color in some display components, for example indicators and signal and battery bars.
- Select *Menu view* to set the way the phone displays the main menu.
- Select *Operator logo* to set your phone to display or hide the operator logo.
- Select *Display Contrast* to adjust the display contrast level. Scroll left or right to decrease or increase the contrast level.

### Time and date settings

Select **Menu** > *Settings* > *Time and date*.

Select *Clock* to show the clock in the standby mode, adjust the clock, and select the time zone and the time format.

Select *Date* to show the date in the standby mode, set the date, and select the date format and date separator.

Select *Auto-update of date & time* (network service) to set the phone to automatically update the time and date according to the current time zone.

## Menu functions

### Call settings

Select **Menu > Settings > Call** and one of the options:

- *Call forwarding* (network service) to forward your incoming calls. For details, contact your service provider
- *Anykey answer* > *On* to answer an incoming call, by briefly press any key, except the power key, the selection keys, and the end key
- *Automatic redial* > *On* to make ten attempts to connect the call after an unsuccessful attempt
- *1-touch dialing* > *On* to assign to the 1-touch dialing keys, 2–9. To dial press and hold the corresponding number key.
- *Call waiting* > *Activate* so that the network notifies you of an incoming call while you have a call in progress (network service). See "Call waiting," p. 21.
- *Summary after call* > *On* and the phone briefly displays the approximate duration and cost (network service) of the call after each call.
- *Send my caller ID* (network service) > *Yes* or *Set by network*
- *Line for outgoing calls* (network service) to select phone line 1 or 2 for making calls. This option is only shown if supported by your SIM card.

### Phone settings

Select **Menu > Settings > Phone** and one of the following options:

- *Phone language* to set the display language of your phone. If you select *Automatic* the phone selects the language according to the information on the SIM card.
- *Memory status* to view how much memory is available in the phone memory.
- *Automatic keyguard* to set the keypad to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used. Select *On*, and you can set the time from 5 seconds to 60 minutes.

When the keyguard is on, calls still may be possible to the official emergency number. Enter the emergency number and press the call key.

- *Security keyguard* to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select *On*.



## Menu functions

- *Cell info display* > *On* to receive information from the network about the network cell used (network service).
- *Welcome note* > enter the note you would like to be shown briefly when the phone is switched on. To save the note, select **Save**.
- *Operator selection* > *Automatic* to have the phone automatically select one of the cellular networks available in your area. Select *Manual*, to select a network that has a roaming agreement with your home network operator (network service).
- *Confirm SIM service actions*. See "SIM services," p. 56.
- *Help text activation* to set the phone to show or hide the help texts.
- *Start-up tone* to set the phone to play or not to play a start-up tone when the phone is switched on.

## Connectivity

### GPRS (network service)

General packet radio service (GPRS) is a network service that allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP)-based network. GPRS is a data bearer that enables wireless access to data networks such as the Internet.

The applications that may use GPRS are MMS, browsing, and Java application downloading.

Before you can use GPRS technology, contact your network operator or service provider for availability of and subscription to the GPRS service. Save the GPRS settings for each of the applications used over GPRS. For information on pricing, contact your network operator or service provider.

### GPRS connection

Select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data connection*.

- Select *Always online* to set the phone to automatically register to an GPRS network when you switch the phone on.
- Select *When needed*, and the GPRS registration and connection are established when an application using GPRS needs it and closed when you end the application.

## Menu functions

### Enhancement settings

The enhancement settings menu is shown only if the phone is or has been connected to a compatible mobile enhancement.

Select **Menu > Settings > Enhancements**. You can select an enhancement menu if the corresponding enhancement is or has been connected to the phone.

Depending on the enhancement, you can select some of the following options:

- *Default profile* to select the profile that you want to be automatically activated when you connect to the selected enhancement. You can select another profile while the enhancement is connected.
- *Automatic answer* to set the phone to answer an incoming call automatically after 5 seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer will not be in use.
- *Use TTY* > *Yes* to use the TTY settings instead of headset or loopset settings.
- *Ignition detector* > *On* to automatically switch off the phone approximately 20 seconds after you have switched off the car ignition, when the phone is connected to the full car kit.

### Configuration settings

Some of the network services need to have the correct configuration settings on your phone. Get the settings from your SIM card, a service provider as a configuration message, or enter your personal settings manually. Configuration settings from up to 10 different service providers can be stored in the phone and can be managed within this menu.

Select **Menu > Settings > Configuration** and from the following:

- *Default configuration settings* to view the list of service providers stored on the phone (the default service provider is highlighted) and to select another service provider as default. Scroll to a provider and select **Details** to view the list with supported applications. To delete a service provider from the list, select **Options > Delete**.
- *Activate default in all applications* to set the applications to use the settings from the default service provider.
- *Preferred access point* to select another access point. Normally the access point from your preferred network operator is to be used.

## Menu functions

- *Connect to service provider support* to download the configuration settings from your service provider.

To enter, view, and edit the settings manually, select **Menu > Settings > Configuration > Personal configuration settings**.

To add a new configuration, select **Add new** or **Options > Add new**. Select one of the application types from the list, and enter all the necessary settings. To activate the settings, select **Options > Activate**.

To view or to edit the user-defined settings, select the application that you want to view, and the setting to edit.

### Security settings

When security features that restrict calls are in use, such as call restriction, closed user group and fixed dialing calls still may be possible to the official emergency number programmed into your device.

Select **Menu > Settings > Security**.

- *PIN code request* to set the phone to request your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call restriction service* (network service) to restrict incoming calls to and outgoing calls from your phone. A restriction password is required.  
Call restriction and call forwarding cannot be active at the same time.
- *Fixed dialing* to restrict your outgoing calls to selected phone numbers if this function is supported by your SIM card.
- *Closed user group* (network service) to specify the group of people whom you can call and who can call you.
- *Security level*. Select *Phone*, and the phone will request the security code whenever a new SIM card is inserted into the phone.  
Select *Memory*, and the phone will request the security code when the SIM card memory is selected and you want to change the memory in use.
- *Access codes* to change the security code, PIN code, or PIN2 code.
- *Code in use* to specify whether the UPIN or PIN code should be active.

## Menu functions

### Restore factory settings

To reset some of the menu settings to their original values, select **Menu > Settings > Restore settings**.

### ■ Operator menu

This menu lets you access a portal to services provided by your network operator. This menu is operator specific. The name and the icon depend on the operator. For more information, contact your network operator.

The operator can update this menu with a service message. For more information, see "Service inbox," p. 53.

### ■ Gallery

In this menu, you can manage themes, graphics, and tones. These files are arranged in folders.



Your phone supports a digital rights management (DRM) system to protect acquired content. A piece of content (for example, a ringing tone) can be protected and associated with certain usage rules, such as number of usage times and a certain usage period. The rules are defined in the content activation key which can be delivered either together with the content or independently depending on the service provider. You may be able to update these activation keys. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

Copyright protections may prevent some graphics, music (including ringing tones), and other content from being copied, modified, transferred, or forwarded.

1. Select **Menu > Gallery**. A list of folders is shown. *Themes, Graphics, Tones* and *Receiv. files* are the original folders on the phone.
2. Scroll to the desired folder, and select **Open** to view a list of files in the folder or **Options** and one of the options.
3. If you have opened a folder, select the file that you want to view and select **Open**.

Select and open a file, or select **Options**. Use one of the functions that may be available for the selected file.

4. All received files from OTA service will be automatically saved into *Receive files* folder. You may view or launch the received files from here. The received files can be *Gallery files*, *Bookmarks*, or *Applications*.

## ■ Radio

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or enhancement must be attached to the device for the FM radio to function properly.



**Warning:** Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

### Listen to the radio

1. Select **Menu** > *Radio*.

The channel location number, the name of the radio channel (if you have saved the channel), and the frequency of the radio channel are displayed.

2. If you have already saved radio channels, scroll up or down to the channel you want to listen to.

You can also select a radio channel location by briefly pressing the corresponding number keys.

### Tune a radio channel

1. When the radio is on, select or to change the radio frequency in 0.05 MHz steps, or select and hold or to start the channel search. Searching stops when a channel is found.
2. To save the channel to a memory location 1–9, press and hold the corresponding number key.  
To save the channel in the memory location from 10–20, press briefly 1 or 2, then press and hold the desired number key 0–9.
3. Enter the name of the channel, and select **OK**.

## Menu functions

### Basic radio functions

When the radio is on, the following functions are available:

- To turn off the radio, select **Options** > *Turn off*.
- To adjust the volume of the radio, select *Volume*.
- To save the radio channel you have found, select **Options** > *Save channel*. See "Tune a radio channel," p. 45. You can save up to 20 radio channels.
- To select the list of saved channels, select **Options** > *Channels*. To delete or rename a channel, scroll to the desired channel, and select **Options** > *Delete channel* or *Rename*.
- To enter the frequency of the desired radio channel, select **Options** > *Set frequency*.
- To listen to the radio using the loudspeaker or headset, select **Options** > *Loudspeaker* or *Headset*. Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

You can normally make a call or answer an incoming call while listening to the radio. During the call, the volume of the radio is muted.

When an application using an GPRS connection is sending or receiving data, it may interfere with the radio.

## ■ Organizer



### Alarm clock

You can set the phone to sound an alarm at a desired time. Select **Menu** > *Organizer* > *Alarm clock*.

To set the alarm, select *Alarm time*, and enter the alarm time. To change the alarm time when the alarm time is set, select *On*. Select *Repeat alarm* to set the phone to alert you on selected days of the week.

Select *Alarm tone* and the default alarm tone. Customize the alarm tone by selecting one from the ringing tone list or from Gallery.

To set the time-out for the snooze alert, select *Snooze time-out* and the time.

### When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display, even if the phone was switched off. Select **Stop** to stop the alarm. If you

## Menu functions

let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for about 10 minutes, then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.

### Calendar

Select **Menu > Organizer > Calendar**. The current day is indicated by a frame. If there are any notes set for the day, the day is in bold type. To view the day notes, select **View**. To view a single note, select **View**.

Other options for the calendar view may be options for creating a note, for deleting, editing, moving and repeating a note, and for copying a note to another day, or for sending a note directly to another compatible phone calendar, as a text message or a multimedia message. In *Settings* you can set the date, time, time zone, date or time format, or the first day of the week. In *Auto-delete notes* you can set the phone to delete old notes automatically after a specified time.

To delete all notes in the calendar, select the month, select **Options > Delete all notes**.

### **Make a calendar note**

Select **Menu > Organizer > Calendar**. Scroll to the date you want, select **Options > Make a note > Meeting, Call, Birthday, Memo, or Reminder**.

### **Alarm for a note**

The phone beeps and displays the note. With a call note displayed, to call the displayed number, press the call key. To stop the alarm and to view the note, select **View**. Select **Snooze** and the phone sounds an alarm again after 10 minutes. To stop the alarm without viewing the note, select **Exit**.

### Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.



**Note:** This calculator has limited accuracy and is designed for simple calculations.

## Menu functions

Select **Menu** > *Organizer* > *Calculator*. When 0 is displayed on the screen, enter the first number in the calculation, press # for a decimal point. Select **Options** > *Add, Subtract, Multiply, Divide, Square, Square root, or Change sign*. Enter the second number. To get the answer, select **Equals**. To start a new calculation, first press and hold the **Clear** key.

### Perform a currency conversion

Select **Menu** > *Organizer* > *Calculator*. To save the exchange rate, select **Options** > *Exchange rate*. Select either of the displayed options. Enter the exchange rate, press # for a decimal point, and select **OK**. The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion, enter the amount to be converted, select **Options** > *In domestic or In foreign*.



**Note:** When you change base currency, you must enter the new rates because all previously set exchange rates are set to zero.

## ■ Applications



### Games and applications

Your phone software may include some games and Java applications specially designed for this Nokia phone.

#### Launching a game or an application

Select **Menu** > *Applications* > *Games* or *Collection*. Scroll to a game or an application and select **Open**.

The following options may be available for games and applications:

- *Delete* to delete the game or application from the phone
- *Move* to move the game or application to the other folder
- *Details* to give additional information about the game or application.
- *Update version* to check whether a new version is available for download from the services (network service)
- *Web page* to provide further information or additional data from an Internet page. This feature needs to be supported by the network.
- *App. access* to restrict the game or application from accessing the network to prevent you from accruing unexpected costs. Select in each category, if



## Menu functions

available, one of the following permissions: *Ask every time*, *Ask first time only*, *Always allowed*, *Not allowed*.

### Game and application downloads

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.

Select **Menu** > *Applications* > *Options* > *Downloads* > *Game downloads* or *App. downloads*. The list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *Web* menu, see "Bookmarks," p. 52.

Select a bookmark to connect to the desired service. For the availability of different services, pricing and tariffs, contact your service provider.



**Important:** Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

When downloading an application, it may be saved in the *Games* menu instead of the *Applications* menu.

### Game settings

Select **Menu** > *Applications* > *Options* > *App. settings* to set sounds, lights, and shakes for games.

### Memory status for games and applications

To view the amount of memory available for game and application installations, select **Menu** > *Applications* > *Options* > *Memory status*.

## ■ Web



**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

You can access various mobile Internet services with your phone browser. Check the availability of these services, pricing, and tariffs with your network operator or the service provider.

With your phone browser, you can view the services that use wireless mark-up language (WML) or extensible hypertext mark-up language (XHTML) on their pages. Appearance may vary due to screen size. Note that you may not be able to view all the details of the Internet pages.

## Menu functions

### Access services

1. Save the service settings that are required to access the service that you want to use. See "Setting up Web service," p. 50.
2. Make a connection to the given service. See "Service connection," p. 50.
3. Browse the pages of the service. See "Browse the Mobile Web," p. 51.
4. Once you are finished browsing, end the connection to the service. See "Disconnect from the Mobile Web," p. 51.

### Setting up Web service

Your phone may have stored some service settings. You can get additional settings as a configuration message from the service provider that offers the service. To receive the service settings as a configuration message, see "Configuration settings," p. 42.

For more information and for the appropriate settings, contact your service provider.

### Service connection

Make sure that the service settings of the service you want to use are activated. To activate the settings, select **Menu > Web > Settings > Configuration settings**. Select *Configuration* and the configuration set you want to activate.

Make a connection to the service in one of these ways:

- Open the start page, for example, the home page of the service provider, and select **Menu > Web > Home**; or in the standby mode, press and hold 0.
- Select a bookmark of the service: select **Menu > Web > Bookmarks** and a bookmark. If the bookmark does not work with the current active service settings, activate another set of service settings and try again.
- Select the last URL: select **Menu > Web > Last web address**.
- Enter the address of the service: select **Menu > Web > Go to address**. Enter the address of the service, and select **OK**.

### **Browse the Mobile Web**

After you connect to the service, you can browse its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Note that if GPRS is selected as the data bearer, the indicator **G** is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during an GPRS connection, the indicator **E** will be shown on the top left of the display to indicate that the GPRS connection is suspended (on hold). After a call, the phone tries to reconnect the GPRS connection.

While you are browsing, options such as Shortcuts, Home and Bookmarks may be available. The service provider may offer additional option.

Select **Options** and from the available options. The service provider may also offer other options.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache. To empty the cache, see "Cache memory," p. 54.

### **Direct calling**

The browser supports functions that you can access while browsing. You can make a voice call, send touch tones while a voice call is in progress, and save a name and a phone number from a page.

### **Disconnect from the Mobile Web**

To quit browsing and to end the connection, select **Options > Quit**. If *Quit browsing?* is shown, select **Yes**.

Alternatively, press the end key twice, or press and hold the end key.

### **Browser appearance settings**

While you are browsing, select **Options > Other options > Appear. settings**; or in the standby mode, select **Menu > Web > Settings > Appearance settings**; and select one of the following options:

- *Text wrapping*. Select **On** and the text continues on the next line. If you select **Off**, the text will be abbreviated.
- *Font size*. Choose a size.

#### Menu functions

- *Show images.* Select *No*, and any pictures appearing on the page are not shown.
- *Alerts.* Select *Alert for unsecure connection* > *Yes* to set the phone to alert when a secure connection changes to an insecure one during browsing. Select *Alert for unsecure items* > *Yes* to set the phone to alert when a secure page contains an insecure item. These alerts do not guarantee a secure connection. For more information, see "Browser security," p. 54.
- *Character encoding.* Select the character set for showing browser pages that do not include that information or to select whether to always use UTF-8 encoding when sending a Web address to a compatible phone.

#### Cookies

A cookie is data that a site saves in your phone browser cache memory. The data can be your user information or your browsing preferences. Cookies are saved until you clear the cache memory, see "Cache memory," p. 54.

While you are browsing, select **Options** > *Other options* > *Security* > *Cookie settings*. In the standby mode, select **Menu** > *Web* > *Settings* > *Security settings* > *Cookies*. Select *Allow* or *Reject* to allow or prevent the phone from receiving cookies.

#### Bookmarks

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select **Options** > *Bookmarks*;  
or in the standby mode, select **Menu** > *Web* > *Bookmarks*.
2. Select the bookmark that you want to use to make a connection to the page associated with the bookmark.

You can also select **Options** to view, change, or send the information, the title and the address of the selected bookmark; edit the selected bookmark; send it directly to another phone as a bookmark or as a text message; or create a new bookmark.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

### Receive bookmarks

When you receive a bookmark, *1 bookmark received* is displayed. Select **Show** to view the bookmark. To save the bookmark, select **Save** > **Options** > **View** to see the details or **Delete** to discard it.

### Download

To download more tones, graphics, games, videos, themes, or applications to your phone, select **Menu** > **Web** > **Downloads** > **Tone downloads**, **Graphic downloads**, **Game downloads**, **Theme downloads**, or **App. downloads**. Your menus may be different.



**Important:** Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

For the availability of different services, pricing, and tariffs, contact your network operator or service provider.

### Service inbox

The phone can receive service messages (pushed messages) sent by your service provider (a network service). Service messages are notifications such as news headlines, and they may contain a text message or an address of a service.

To read this service message, select **Show**. If you select **Exit** the message is moved to the *Service inbox*. To access the *Service inbox* later, select **Menu** > **Web** > *Service inbox*.

To access the *Service inbox* while browsing, select **Options** > *Other options* > *Service inbox*. Scroll to the message that you want; select **Retrieve** to activate the browser and download the marked content, or select **Options** > *Details* to display detailed information on the service notification, or select **Delete** to delete it.

### Service inbox settings

Select **Menu** > **Web** > **Settings** > *Service inbox settings*. Select *Service messages* > *On* or *Off* to set the phone to receive (or not to receive) service messages.

Select *Message filter* > *On* to set the phone to receive service messages only from content authors approved by the service provider. To view the list of the approved content authors, select *Trusted channels*.

Select *Automatic connection*. If you have set the phone to receive service messages and select *On*, the phone will automatically activate the browser from

## Menu functions

the standby mode when the phone has received a service message. If you select *Off*, the phone will activate the browser only after you select *Retrieve* when the phone receives a service message.

## Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache. To empty the cache, while browsing, select **Options > Other options > Clear the cache**. In the standby mode, select **Menu > Web > Clear the cache**.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

## Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

## Security module

The security module can contain certificates as well as private and public keys. The purpose of the security module is to improve security services for applications requiring a browser connection, and it allows you to use a digital signature. The certificates are saved in the security module by the service provider.

Select **Menu > Web > Settings > Security settings > Security module settings**, and from the following options:

- *Security module details* to show the security module title, status, manufacturer, and serial number.
- *Module PIN request* to set the phone to request the module PIN when using services provided by the security module. Enter the code, and select *On*. To disable the module PIN request, select *Off*.
- *Change module PIN* to change the module PIN, if allowed by the security module. Enter the current module PIN code; then enter the new code twice.

- *Change signing PIN.* Select the signing PIN that you want to change. Enter the current PIN code; then enter the new code twice.

See also "Access codes," p. 9.

## Certificates

There are three kinds of certificates: server certificates, authority certificates, and user certificates.

**Server certificates**—used to create a connection with improved security to the content server. The phone receives the server certificate from the service provider before the connection is established and its validity is checked using the authority certificates saved in the phone. Server certificates are not saved. The security indicator is displayed during a connection if the data transmission between the phone and the content server is encrypted. The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

**Authority certificates**—used by some services, such as banking, for checking the validity of other certificates. Authority certificates can either be saved in the security module by the service provider or they can be downloaded from the network, if the service supports the use of authority certificates.

**User certificates**—issued to users by a certifying authority. User certificates are required, for example, to create a digital signature, and they associate the user with a specific private enter a security module.



**Important:** Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If the expired certificate or certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.


Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

## Menu functions

### Digital signature

You can make digital signatures with your phone if your SIM card has a security module. The signature can be traced back to you by the private key on the security module and the user certificate that was used to perform the signature. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page (for example, the title of the book that you want to buy and its price). The text to sign (possibly including amount, date, etc.) is shown.

Check that the header text is *Read* and that the digital signature icon  is shown.



**Note:** If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

The text may not fit within a single screen. Make sure to scroll through and read all of the text; then select **Sign**.

Select the user certificate you want to use. Enter the signing PIN (see "General information," p. 9), and select **OK**. The digital signature icon disappears, and the service may display a confirmation of your purchase.

### ■ SIM services

In addition to the functions available on the phone, your SIM card may provide additional services that you can access in this menu, which is shown only if it is supported by your SIM card. The name and contents of the menu depend on the SIM card.



For availability, rates, and information on using SIM services, contact your SIM card vendor, network operator, service provider, or other vendor.

Depending on the operator, you can set the phone to show you the confirmation messages sent between your phone and the network when you use the SIM services. Select **Menu > Settings > Phone > Confirm SIM service actions > Yes**.

Accessing these services may involve sending messages or making a phone call for which you may be charged.



## 6. Battery information

---

### ■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger then disconnect and reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

## Battery information

### ■ Nokia battery authentication guidelines

 
Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.


#### Authenticate hologram



1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.

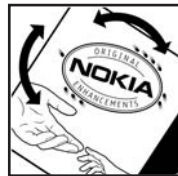

 2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.

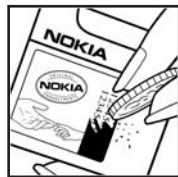

3. Scratch the side of the label to reveal a 20-digit code, for example 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.

4. Confirm that the 20-digit code is valid by following the instructions at [www.nokia.com/batterycheck](http://www.nokia.com/batterycheck).

## Battery information

### What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit [www.nokia.com/battery](http://www.nokia.com/battery).

Battery information

FCC DRAFT

## 7. Enhancements

---

**A few practical rules about accessories and enhancements.**

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Enhancements

FCC DRAFT

## Care and maintenance

---

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Care and maintenance

FCC DRAFT



## Additional safety information

---

### ■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with a hearing aid should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

### ■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

#### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and

#### Additional safety information

recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker;
- Not carry the device in a breast pocket; and
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device and move the device away.

#### Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

#### ■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft may be prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

#### ■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine.

#### Additional safety information

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

#### ■ Emergency calls



**Important:** Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

#### To make an emergency call:

1. If the device is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

## Additional safety information

### ■ Certification information (SAR)

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value according to international testing procedures for use at the ear for device type RM-74 is 0.70 W/kg, and for device type RM-75 is 0.59 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over 1 gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear for device type RM-75 is 0.91 W/kg and when properly worn on the body is 0.74 W/kg. Information about this device model can be found at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID: QTLRM-75.

## ■ Technical information

Feature	Specification	
Weight	89 g (3.1 oz) with BL-5C Li-Ion 900 mAh battery	
Size	Volume: 74.4 cm <sup>3</sup> (4.5 in <sup>3</sup> ) Length: 104 millimeters (4.1 in) Width: 43.6 millimeters (1.7 in) Thickness: 18.1 millimeters (0.7 in)	
Frequency range	RM-74 6030a EGSM 900 880–915 MHz (TX) 925–960 MHz (RX) EGSM 1800 1710–1785 MHz (TX) 1805–1865 MHz (RX)	RM-75 6030b GSM 850 824–894 MHz (TX) 869–894 MHz (RX) GSM 1900 1850–1910 MHz (TX) 1930–1990 MHz (RX)
Transmitter output power	Up to 2 W	
Battery voltage	3.7 V dc	
Number of channels	299	
Memory size	Up to 16 MB flash memory Up to 4 MB shared memory	
Operating times	Standby time: up to 300 hours Talk time: up to 5 hours	
Operating temperature	15°C to + 25°C (59°F to + 77°F)	

## Numerics

1-touch dialing 19, 36

## A

access codes 8  
alarm clock 45  
alerts 37  
answer a call 19  
applications 47

## B

battery  
    authentication 57  
    charging 12, 56  
    discharging 56  
    installing 11  
bookmarks 51  
business cards 35

## C

cache  
    clear 53  
    memory 53  
calculator 46  
calendar 46  
call 19  
    1-touch dialing 19  
    answer 19  
    log 33  
    reject 19  
    settings 38  
    waiting 20  
certificates 54  
charging, battery 12  
clock, alarm 45  
connectivity  
    computer 40  
    data 40  
connectors 15  
contacts 34  
cookies 51

## D

date setting 38  
dialing  
    1-touch 36

downloading 52

## E

enhancement settings 40

## G

gallery 43  
games 47  
GPRS 40

## I

icons 16  
indicators 16  
install  
    battery 11  
    SIM 11  
Internet 48

## K

key functions 15  
keypad lock (keyguard) 17

## L

lock keypad 17

## M

memory  
    cache 53  
    multimedia messages 30  
menu  
    applications 47  
    call log 33  
    functions 25  
    gallery 43  
    navigating 25  
    organizer 45  
    SIM services 55  
    Web 48  
messages  
    multimedia 28  
    read and reply 27  
    sending options 26  
    settings 31  
    templates 27  
    text 25

write and send 26  
MMS 28  
multimedia messages  
read and reply 29  
restrictions 28  
write and send 28

## O

organizer 45

## P

phone settings 39  
power 13  
predictive text 21  
profiles 36

## R

radio 44

## S

security  
browser 53  
certificates 54  
digital signature 54  
module 53  
settings 42  
settings  
call 38  
configuration 41  
enhancement 40  
message 31  
phone 39

profiles 36  
security 42  
themes 37  
time and date 38  
tone 37  
signature 54  
SIM  
install 11  
security module 53  
services 55  
SMS 25  
standby mode 15

## T

templates 27  
text  
entry 21  
messages 25  
predictive 21  
writing tips 22  
time setting 38  
tones 37

## W

Web  
bookmarks 51  
browsing 49  
cookies 51  
disconnecting 50  
downloading 52  
network service 48  
write message 26