

EXHIBIT C

User Manual

POWER SUPPLY CONNECTION

Use DC power supply could switch with adaptor supply or battery of 12V-18V. Connection DC supply, DC plug connection with "DC-IN" socket. (See fig 4) another plug terminal connection with battery or power supply.

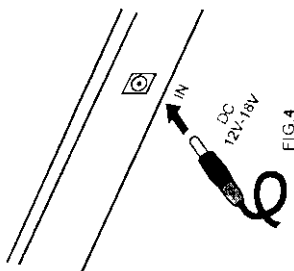


FIG. 4

POWER SWITCH

Make sure the correct current voltage. Push this power switch once to turn on, push it again to turn the power off. If unit still fails to operate, Please check the fuse. * (Internal in receiver). If unit still fails to operate. Secure a qualified technician or contact us for a Return Authorization prior to shipment.

*Disconnect power supply before removing receiver cover.

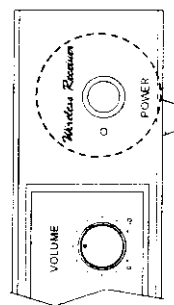


FIG. 5

CONTROLS AND CONNECTIONS

VOLUME ADJUSTOR

The purpose of this control is to give the ability to provide an audio output level from the wireless system that is similar to that of a wired microphone.

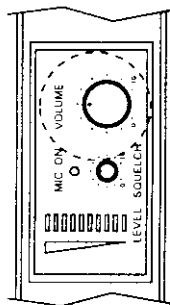


FIG. 8

RECEPTION INDICATORS

This indicators does not light during standby. When microphone signal is received, the red indicator light to indicate the reception of microphone.



 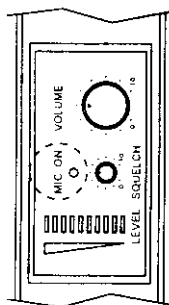


FIG. 9


SQUELCH ADJUST

SQ Noisy controlled adjustment: Before you turn-on the transmitter, Please turn-on the receiver at first. The receiver already have been jamming by outside signal. Please adjust SQ controlled until the jamming signal has disappeared (clock-wise)

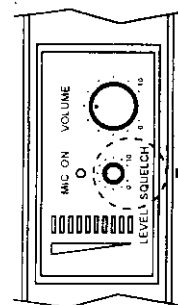


NOTE

RECEPTEUR :

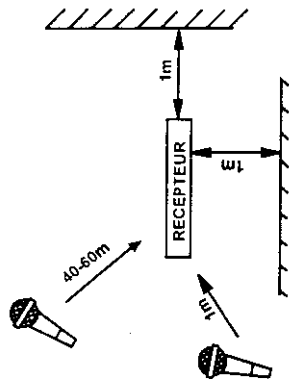


THE WIRELESS RECEIVER
LOCATED AT GOOD CONDITION
PLACE.

HELP!

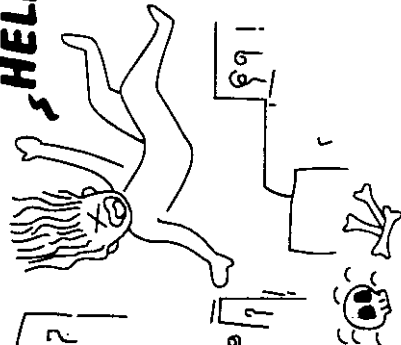

BE CAREFUL, DON'T DROP
OFF THE MICROPHONE TO
FLOOR

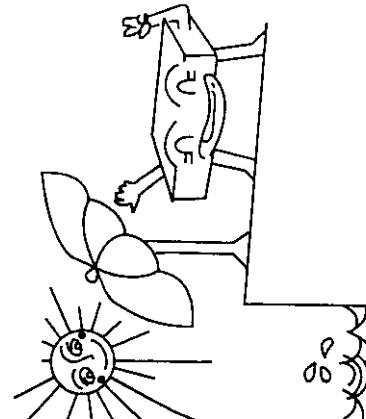

KEEP AWAY RAINING OR
SUN SHINE.

INSTRUCTION MANUAL

INSTALL ANTENNA

(See fig. 1)

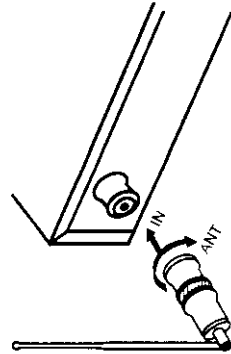


FIG 1

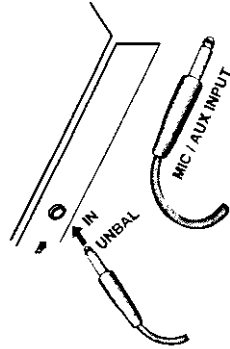


FIG 2

Audio output connection

Connect to "Mic In or Aux In" jack of
mic mixer or amplifier.
(See fig 2)

Output LEVEL Switch

This switch the output level from
the AUDIO output jack.
Set to LOW when the jacks is con-
nected to the MIC input jacks of the
amplifier and to HI when it is
connected to the AUX input jack.
(See fig 3)


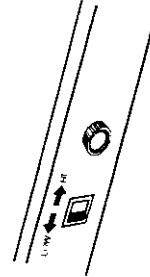


FIG 3



NOTE

NAMES OF PARTS

(FRONT PANEL)

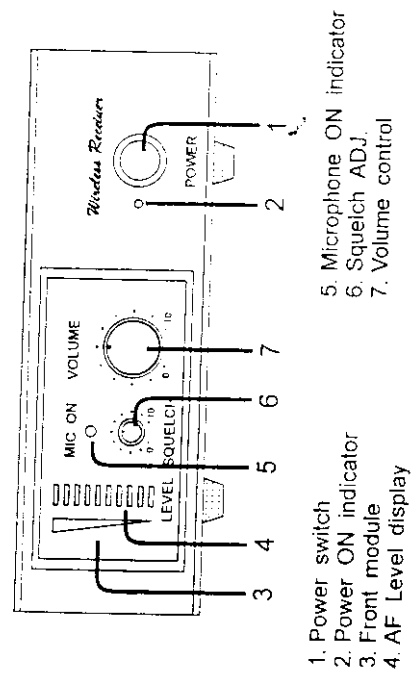

(REAR PANEL)

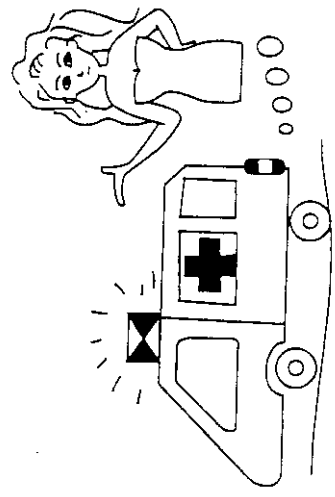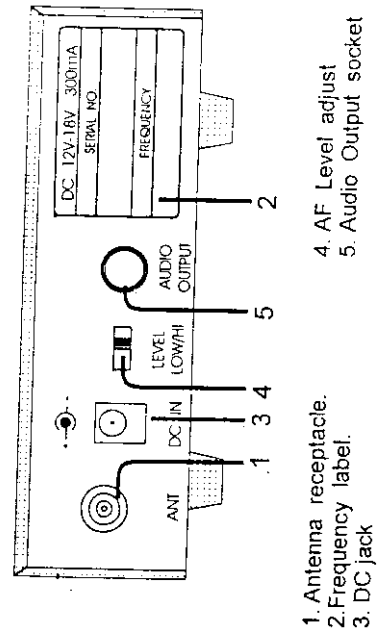

IF YOU ARE NOT TECHNICAL
ENGINEER PLS. DO NOT
MODIFIED OR KNOCK - DOWN
IT.

CHARACTER:

- It is very easy to change frequency module or replacement module from front panel. it is very convenient for user.
- Compact & Active construction design.
- Power switch, Volume control, LED/AF signal and Receiving display.
- Noise squelch circuit, Prevent RF disturbed.
- Wide dynamic range can be assured by the compressor and expander of bandwidth.

SPECIFICATIONS:

Receiving method	Non-diversity receiver
Receiver module	WTU-210
Frequency band	VHF high band 174-216MHz
Frequency stability	$\pm 0.005\%$
Modulation mode	FM (F3E)
Max deviation	$\pm 40\text{KHz}$ with limiting compressor
THD	$< 0.5\%$
Dynamic	$> 100\text{dB}$, A-weighted
S/N ratio	$> 90\text{dB}$ (with A-weighting)
Frequency response	50Hz-15KHz 3dB
Receiving mode	Quartz controlled fixed frequency
RF sensitivity	3 μV for 20dB sinad
Squelch	Noise control (External)
Audio A B output level	Unbalanced 10.5dBV, 10K ohm load
Output connector	Unbalanced, 6.3mm phone jack
Power supply	DC 12-18V 300mA
Dimensions/Weight	130(W)X190(D)X46.5(H) mm

CONTENTS

CHARACTER.....	1
SPECIFICATIONS.....	1
NAMES OF PARTS.....	2
INSTALLATION.....	3
POWER SUPPLY CONNECTION.....	4
CONTROLS AND CONNECTIONS.....	5
NOTE.....	6~7

Thank you for your kind using our wireless microphone with receiver. Before using the machine please read the instruction manual very carefully. According to our instruction manual for ensure you using of the best function and performance. If any defect please contact with our agent or dealer. It is our pleasure to serve you.

Thank you for your cooperation

WIRELESS SYSTEM

INSTRUCTION MANUAL

