

VICTROLA



**THE
RE-SPIN**

**MODEL: VSC-725SB
INSTRUCTION MANUAL**

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

Turntable Platter

45 RPM Adaptor

Lift Lever

Auto Stop Switch

Speed Switch

Tone Arm

Function Switch
see below for details

Power / Volume Dial

LED Indicator Light

Speaker

Function Switch

Bluetooth

Vinyl Stream

Vinyl

45°

REMOVE RECORD FROM UNIT & LOWER THE LID TO A 45° ANGLE

APPLY LIGHT PRESSURE TO THE BOTTOM SIDES OF THE LID

WHILE LID IS STILL AT 45°, PULL STRAIGHT UPWARD TO REMOVE

THE LID IS NOW AN AWESOME RECORD HOLDER

PLEASE NOTE THE ICONS FOR SINGLE OR DOUBLE LPs

FOLLOW THE STEPS ABOVE IN REVERSE TO REATTACH THE LID

GETTING STARTED

Remove the needle cover, by gently pulling towards the front of the unit. Carefully plug in the unit and remove any accessories from the platter.

Note: *It is recommended that this product should be operated only from the type of power source indicated on the power adaptor.*

Push the Power/Volume dial upward to turn the unit ON.

Slide the Function Switch to select the following playing modes:

VINYL: Play a Vinyl record.

VINYL STREAM: Connect to an external Bluetooth speaker or headphone.

BLUETOOTH: Connect and play music from a Bluetooth device (smartphone, etc).

VOLUME: Slide to raise or lower the volume.

 **HEADPHONE:** Use the headphone jack on the back of the unit to connect your headphones/earbuds. Be sure to first reduce the volume to a minimum level on the record player.

When the unit is powered ON, slide the Function Switch to Vinyl mode. The LED Indicator Light will turn RED and remain lit. Remove the needle cover, by gently pulling towards the front of the unit. Select the proper record speed, *if using a 45 RPM record, use the Included 45 adaptor*. Release the tone arm from the holder and gently place on the record using the lift lever. Slide the Volume Dial to adjust the volume.

Note: -Make sure to only touch the center or edges of the record to avoid damage to the vinyl grooves.
 -If no sound is playing, the unit may be in Vinyl Stream mode, adjust the Function Switch to make sure it is in Vinyl mode.

Auto and Manual Stop Selection Switch: If this switch is turned ON, the record will start spinning when the tone arm moves over the record and the record will stop automatically when playback is finished. If this switch is OFF, the record will automatically begin to spin when the unit is in "VINYL" function mode and the record will continue to spin after playback is finished.

VINYL STREAM: Listen to a vinyl record on a external Bluetooth speaker or headphones.

When the unit is powered ON, slide the Function Switch to Vinyl Stream Mode, the LED Indicator Light will turn RED and flash. Turn ON your external Bluetooth speaker or headphone, and set to pairing mode. Wait a few seconds for the unit to find your device

When connected the unit will chime and the LED light will remain RED. Follow the proper steps to play a vinyl record in the "Vinyl" section above. Use your external device to control the volume.

Note: -In Vinyl Stream mode, internal speakers will be disengaged.

-We recommend placing the Bluetooth device within 1m (33') of the product when initially pairing.

-Make sure the unit is within 10m (33ft) of your external device for the strongest connection.

-Vinyl Stream is only compatible with vinyl record playback.

-The product stays in the pairing mode for 30 seconds. If pairing is not properly completed, follow the above steps again from the beginning after turning all devices OFF.

BLUETOOTH: Connecting and playing music from an Bluetooth device (Smartphone).
 When the unit is powered ON, slide the Function Switch to Bluetooth mode. The LED Indicator Light will turn BLUE and flash. On your device, turn Bluetooth ON, then search for and select **"VICTROLA RE-SPIN"** in the settings menu. When connected, the unit will chime and the LED light will remain blue. Use your external device to control playback.

Note: -Make sure the unit is within 10m (33ft) from your external device for the strongest connection.

HOW TO REPLACE THE REMOVABLE STYLUS (replacement stylus + VHD-00)

Removing the Stylus from the Cartridge

1. Using your fingers, hold at point "A" and push down point "B".

WARNING: When applying force to stylus, too much may damage or break the stylus.

2. Continue to push down until the stylus separates from the front of the cartridge.
3. Remove the rear of the stylus carefully from the cartridge.

Installing the Stylus

1. Follow the previous steps but in reverse.

Caution:

- Do not remove or bend the stylus needle.
- Do not touch the needle to avoid injury to your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

Please note: The stylus should last about 50 hours under normal use. It is recommended that the stylus be replaced as soon as you notice a change in sound quality

GENERAL	
Power Adaptor	12V/1.5A
Power Consumption	10W
Power Output	1 x 10W
Operating Temperature	-5°C ~ 40°C
RECORD PLAYER	
Speeds	33-1/3, 45 & 78 RPM

Bluetooth Version	Bluetooth V5.2
Bluetooth Profile	A2DP, AVRCP
Bluetooth Frequency Range	2.40GHz-2.480GHz
Operating Distance	10 meters (33 ft.)

Manufacturer Shenzhen
Guangkaiyuan
Technology Co Ltd
Model GKYZB0150120UL

Re-Spin with Removable Lid, Power Adaptor, 45 RPM Adaptor, Instruction Manual

- Always follow basic safety precautions when using this appliance, especially when children are present.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not damage the power cord, neither do not place any heavy objects on it, do not stretch it or bend it. Also do not attach extension cables. Damage to the power cord may occur fire or electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the unit plugged into an AC 100-240V 50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or even catch fire.
- If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
- Turn off the unit before unplugging it from the power source to completely switch it off.
- Do not disconnect or connect the power cord with wet hands. It may cause an electrical shock.
- Ensure that the main plug is always easily accessible.
- This product does not contain any parts that are serviceable by the user. In case of a fault, contact the manufacturer or authorized service department. Exposing the internal parts inside the device may endanger your life. The manufacturers guarantee does not extend to faults caused by repairs done by unauthorized third parties.
- Ensure this product is used in moderate climates only (not in tropical/subtropical climates).
- Place product on a flat, stable surface that is not subject to vibrations.
- Ensure the product and its parts are not overhanging the edge of the supporting furniture.
- To reduce the risk of fire, electric shock or damage to this product, do not expose it to direct sunlight, dust, rain and moisture. Never expose it to dripping or splashing and do not place objects filled with liquids on or near the product.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not place the product where the humidity is high and ventilation is poor
- Do not mount this product on a wall or ceiling.
- Do not place the unit near TV's, speakers and other objects that generate strong magnetic fields.
- Do not leave the unit unattended when in use.
- Allow at least 30cm clearance from the rear and the top of the unit and 5cm from each side.
- Always ensure that the ventilation openings are not covered with items such as newspapers, tablecloths, curtains, etc.
- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- Storms are dangerous for all electric appliances. If the main or aerial wiring is struck by lightning, the appliance might get damaged, even if it turned off. You should disconnect all the cables and connectives of the appliance before a storm.
- Excessive sound pressure from headphones can cause hearing loss.
- Do not cover ventilation openings, this is not intended to be used on soft support.

POWER ADAPTER:

- To disconnect the unit from the main supply, unplug the lead from the main socket.
- Only use the supplied main adapter, as failure to do this may result in a safety risk and/or damage to the unit.
- The main plug of power adapter is used as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The lightning flash with arrowhead symbol is used to alert the user to the presence of unshielded "dangerous" voltages when the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. REFER TO INSTRUCTIONS TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (including disassembly) instructions in the literature accompanying the appliance.
--	---	---

Please read these safety instructions and respect the following warnings before the appliance is operated:

- AC Voltage
- DC Voltage
- Class II equipment
- For indoor use only
- Energy Efficiency marking with level VI
- ⚡ Polarity of D.C power connector

- The shown above appears on electrical and electronic equipment (or the packaging) to remind users of this.
- Users are requested to use existing return facilities for used equipment and batteries.



FOC STATEMENTS

Caution: the user is cautioned that charges or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC & IC RADIATION EXPOSURE STATEMENT:
This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20cm entre l'antenne et votre corps. Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

United States

Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.

To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at [victrola.com/contact](mailto:contact@victrola.com).

Except as limited below, if the product proves defective in either material or workmanship within one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model, Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com.

Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at [victrola.com/contact](mailto:contact@victrola.com).

If this product proves defective in either material or workmanship, Victrola will replace the product at no charge. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, Victrola at its sole option may replace the unit with a current model of equal or greater value.

Outside the U.S., Canada, and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

Thank you for buying a Victrola.