 



Reset

- Please try to reset the earphones according to following steps if the
- earphones fail to build connection or re-pair with your devices. . Clean pairing record of the earphones in all your devices.
- Place back both earphones into the charging case and make sure they are in charging status. The indicator of the charging case will flash once
- when the earphones are successfully put in.
- 3. Keep the charging case lid open, press and hold the button of the
- charging case for 10s until the white light flashes twice, reset complete. 4. Close the lid and open it again to activate the earphones.

Wearing





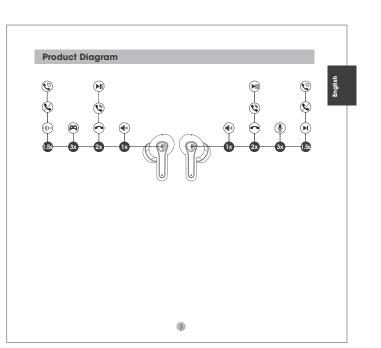



Touch Control	
Power On	Auto: Open up the case lid
	Manually: Press and hold the MFB for 1.5s
Power Off	Auto: Place earphones back into the charging case
	and close the lid
	Manually: Press and hold the MFB for 10s
Play / Pause	Double tap the MFB
Volume -	Single tap the left MFB
Volume +	Single tap the right MFB
Next Track	Press and hold the right MFB for 1.5s
Answer / Hang Up Phone	Double tap the MFB
Call	
Reject Phone Call	Press and hold the MFB for 1.5s
Switch Between Two Calls	Press and hold the MFB for 1.5s
Manually Enter Pairing	Press and hold the MFB of the charging case for 3s
Mode	
Activate Voice Assistant	Triple tap the right MFB
Enter / Exit Game Mode	Triple tap the left MFB
ANC / Transparency /	Long press the left MFB for 1.5s
Normal Mode	

Q&A

Q1: What does the indicator light of the charging case mean?

1. It shows the power of charging case while:

100%—50%	Green	
49%—10%	Yellow	
10%-0%	Red	

2. When charging the case	, the indicator light shows:
---------------------------	------------------------------

0%-20%	red light breathing slowly
21%-69%	yellow light breathing slowly
70%-99%	green light breathing slowly
100%	green light on

3. Open the charging case lid, every time you place back or take out the earphones, the indicator of the charging case will flash once and stay on for 10s(the indicator light will change according to the remaining power of the charging case).

5

 
Q2: How to charge the earphones and the charging case?

- 1. When the earphone is in low power state, a low power prompt will be broadcast. You can place back the earphones into the charging case to charge them.
- 2. Please use a Type-C adapter to charge the case (current no more than 1A).
- 3. Please charge the earbuds and charging case at least once per 3 months when not in use for a long time.

Q3: Why are the earphones still connected to my phone after placing them back and closing the case lid?

- 1. The charging case has no remaining power. The case can't turn off the earbuds if the case battery is dead.
- 2. Please make sure the earbuds are correctly placed in the charging case, and make sure the charging contactors and PIN pins are clean. Please try to clean
- where the charging case and the earphones are in contact with microfiber cloth.

6



FCC Statement

This equipment has been tested and found to compty with the limits for a Class & digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, it not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Nowever, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Recrient or relocate the receiving antenna. - Increase the separation between the equipment from that or which the receiver is connected. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/IV technician to high.

This device compiles with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired

operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC ID

English: "
 This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the tollowing two conditions:
 (1) this device may not cause interference, and
 (2) this device must accept any interference, including interference thatmay cause undesired operation of the device."

- French."

- French." Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts

te presen opputer si contorne da care an control e chica a presente control opputers racio exemps de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil nedoit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

(7)