


OUTER BOX




INNER CARD

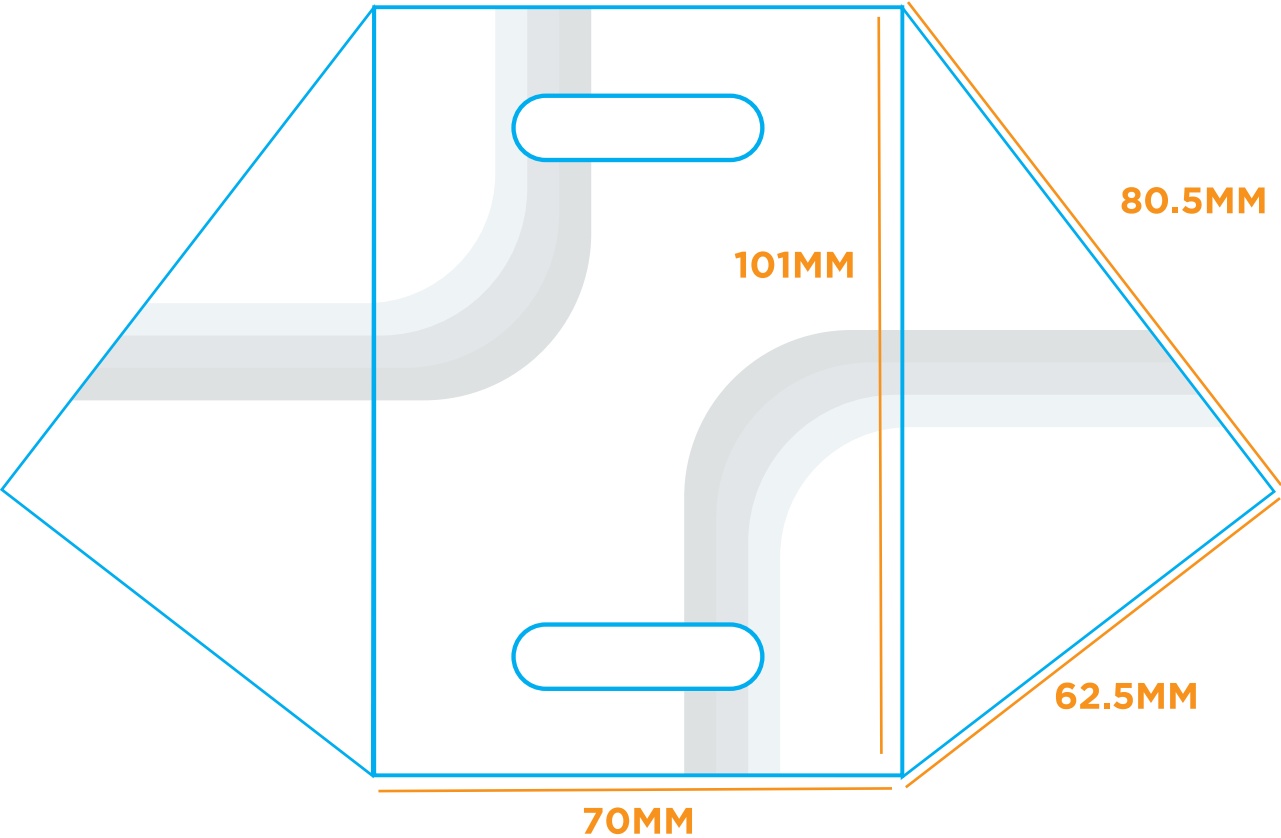

INNER CARD INSERT

Goes underneath the inner card and is secured to the watch with a zip tie.

Underneath this insert will be the manual and charging cable

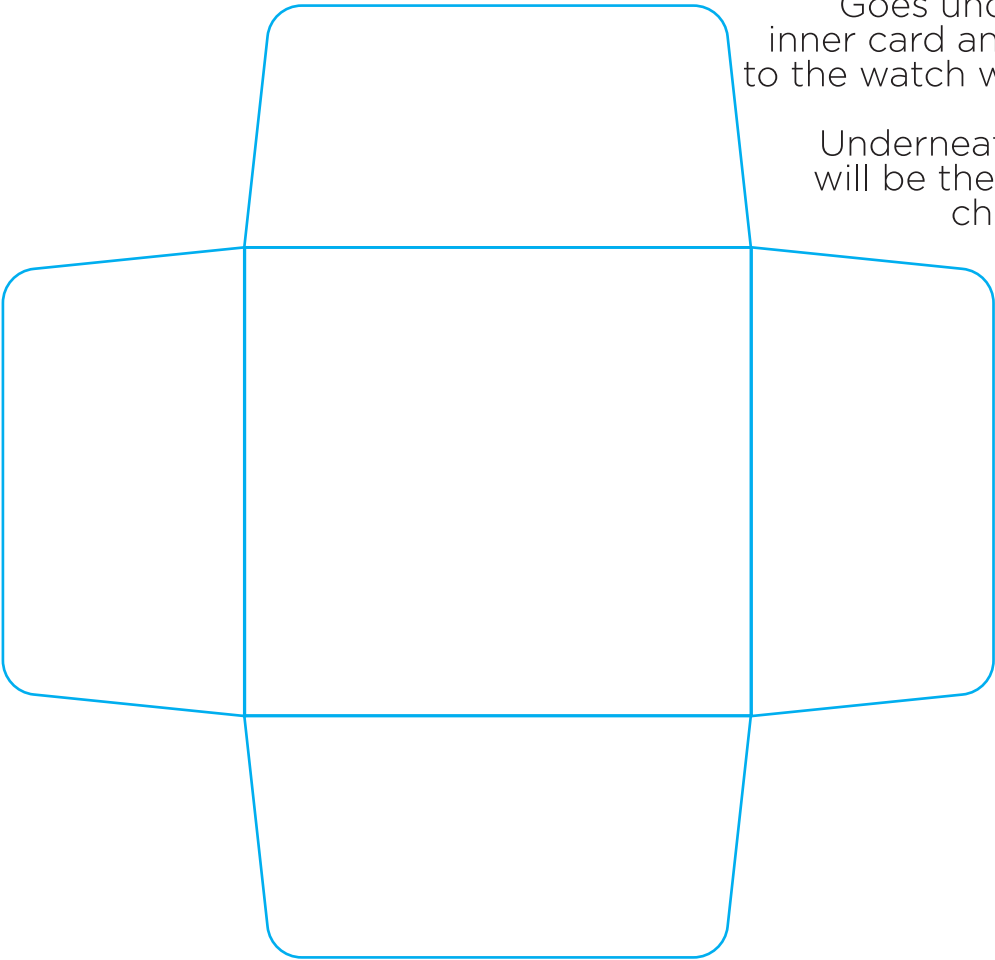

TRANSPARENT ACETATE COVER

