

<p>Do not:</p> <ol style="list-style-type: none"> Don't let children operate the machine, and cause personal injury and damage to the machine. Please follow the traffic rules when using satellite navigation function to drive. Please do not turn off the power of machine equipment or its batteries in case other device such as car stereo, battery, strong electromagnetic influences appear, otherwise may cause damage. Don't implement maintenance, installation of the machine itself. Under the condition of the plug on not installed or repair the machine, do not touch to electronic equipment or attach accessories installation personnel or the lack of experience installation and maintenance of this machine is very dangerous. Do not make the machine storage in direct sunlight place, don't put it in other harmful medium environment, especially the LCD screen. If the installation of the LCD screen is in the air conditioner near the air outlet, please keep cool and not an heat directly to the machine, otherwise it may damage the machine, even can the fire or prevent injury. Please do not use some sharp objects scratch screen. Don't use hard objects to press the screen, otherwise will cause damage to display or touch screen. In order to guarantee the normal operation of the machine, and prevent the occurrence of fire or get an electric shock, please don't expose machine to damp air, water or salt liquid drying machine. 	<p>Take care & warning:</p> <p>In order to emphasize the important information of user manual, it use this tag about any special attention to. It will show important warning and urgent information.</p> <p>Safety note:</p> <p>Please read all instructions before installation and suggested by car audio professional installation of this receiver.</p> <ul style="list-style-type: none"> The receiver is running the car 12V power supply system. If you have power free, please do not install the machine in 24V car, otherwise it will damage the machine. In no professional guidance, not to replace the power line, use only a fuse of the equipment can cause the damage of the machine and cause a fire. In order to avoid the violation of traffic rules, the driver shall not operating while driving and operating the machine, will produce unnecessary accidents. For safety and ensure that the product normal use, please to the professional of this product installation, independently or install the machine by yourself. And cause the machine damage and accidents, for please take contact with the local professional car audio store.
--	--

<p>Note: Please prevent this product in a humid environment and the water, it could be short circuit caused by moisture attack, or cause unnecessary damage and the equipment.</p> <p>Note: In order to prevent it short-cut. Before the installation, please disconnect the car's power and unplug the ACC connection of it.</p> <p>Machine reset:</p> <ol style="list-style-type: none"> The first use of this system before or after the replacement battery, the machine must be reset. When the machine function is not normal, the machine must be reset. Click factory factory settings in system settings interface, make the machine is in the initial state. Use a pointed object, press the RESET button on the panel, or click the system RESET in the system settings, the machine will be RESET to turn it off, back to the factory default state. <p>Note: Press the RESET button and the system initialization will take time and set the radio function.</p>	<p>INSTALLATION [Please take the DASH-TRIM]</p>
---	--

<p>Installation steps:</p> <ol style="list-style-type: none"> How to find the power point of the car? <p>Disconnect the car key to the ACC side. Then connect the Universal Match to the 12V power. Connect the black cable to the power ground (the body ground of the car body) and use the red cable to test each wire of the car. Normally a car has two wires about 12V (some cars only have one). That is the positive power line. How to distinguish the ACC and ignition wire? Put out the car key after you find the first positive pole line. The memory line is the electrically charged one after you closing the key. (Look at the Picture 1)</p>	<ol style="list-style-type: none"> Picture 1 Picture 2 Picture 3
--	---

<p>2. How to find the ground wire of the car (negative pole)?</p> <p>Turn the Universal Watch to the small lamp gear. Then connect the black cable to the power ground (the outer surface of the cigar lighter), and use the red cable to test each wire except the last power wire. The unconnected wire is the ground wire (negative pole). (Some cars have two ground wires.) (Look like Picture 2)</p> <p>3. How to find the fuse box of the car?</p> <p>Turn the Universal Watch to the small lamp gear. Disconnect the black cable to any wire except the power cord and ground wire. Then use the red cable to test each branching wire. The unconnected wire is the fuse box. Then you can use method 2 to find out the other fuse boxes. (Look like Picture 3)</p> <p>4. How to test whether the car will work properly?</p> <p>When you get the car, you'll know best the car with battery or power supply failure. When connected, turn the red wire and yellow wire together and then connect them to the positive pole. Connect the black wire to the negative pole. Then turn the switch to turn on the car and get a user to connect to the fuse box. Turn wires connected to the front or the rear spring cable. The white wire is supposed to be connected to the positive pole and the white wire with black part connected to the negative pole of the fuse. You can make no distinction between the positive and negative poles of the fuse. (Check the fuses of the car.)</p>	<p>5. How to connect Bluetooth?</p> <p>Turn on the left and right (Bluetooth) function of phone, and then search for the user name of the unit. Click the connect button until the phone will show it is connected. If you want to play music with Bluetooth, insert the SD card into the unit to connect to Bluetooth receiver and then play on your phone. You can also use remote on your phone to make a power call with Bluetooth.</p> <p>6. How to fix the unit?</p> <p>Since each car has a different way of fixing the unit and the location of the screws are different. There is no standard way to fix the unit. You may consult the fitting method of the engine unit. If it is not fixed by tightening screw with the initial angle, you can tighten the steel angle of the original unit to both sides of our unit. Then use the self-adhesive tape to tight the steel angle (please notice hole size is probably inconsistent). If the original unit was fixed with nuts, you can use the thin frame of nut well in the car first, and then pass the nut and tighten it. If the space is not fit, you can wrap the unit with electro tape to increase the volume of the unit, and then put it in and fasten it. (Or you can think of a better way to fit it, but anyway, you can fit it.)</p> <p>7. How to install the navigation antenna?</p> <p>Find one spot against the screen of the navigation antenna and the unit. Then you need to fix the navigation antenna module in a place that has enough air on the windshield. (That's very important, because poor installation will affect navigation signals.)</p>
---	--

<p>8. The default factory mode password: Factory mode password: 4888 9. The default Bluetooth PIN Code: Bluetooth PIN Code: 123321</p> <p>SCHEMATIC DIAGRAM OF REVERSING CAMERA WIRING</p> <p>FIXED MACHINE</p> <ol style="list-style-type: none"> Fix the bracket on the left and right sides of the machine with screws, and adjust the position of the bracket according to the actual installation. (Picture 1) Lower the machine to the lowest position of the central console of the car. (Picture 2) 	<p>Picture 1</p> <p>Picture 2</p> <p>SIMPLE TROUBLE SHOOTING</p> <table border="1"> <thead> <tr> <th>PROBLEMS CAUSES & SOLUTIONS</th> </tr> </thead> <tbody> <tr> <td>1. Unable to heat normally</td> </tr> <tr> <td>- Receiver is not heating</td> </tr> <tr> <td>1. The cable route caused. If the blue cable (heater cable) and power supply is connected to the power cable of the unit, an automatic shutdown will occur. Please follow the correct wiring method to solve the problem.</td> </tr> <tr> <td>2. The voltage is unstable please find a 12V/5A which can be the power supply and no instant to see if it will automatically shut down or not. If it does not automatically shut down after the test, please replace the power supply. If it will automatically shut down, it is positive with the unit.</td> </tr> <tr> <td>2. Hearing noise</td> </tr> <tr> <td>- The general situation of noise is caused by two reasons</td> </tr> <tr> <td>1. The longer speaker power is too small. When the volume of the unit is turned up, many will be noise.</td> </tr> <tr> <td>2. The speaker cable is grounded.</td> </tr> <tr> <td>3. The speaker cable is grounded.</td> </tr> <tr> <td>3. Remote control cannot be used</td> </tr> <tr> <td>- Check if the battery of the remote control has power</td> </tr> </tbody> </table>	PROBLEMS CAUSES & SOLUTIONS	1. Unable to heat normally	- Receiver is not heating	1. The cable route caused. If the blue cable (heater cable) and power supply is connected to the power cable of the unit, an automatic shutdown will occur. Please follow the correct wiring method to solve the problem.	2. The voltage is unstable please find a 12V/5A which can be the power supply and no instant to see if it will automatically shut down or not. If it does not automatically shut down after the test, please replace the power supply. If it will automatically shut down, it is positive with the unit.	2. Hearing noise	- The general situation of noise is caused by two reasons	1. The longer speaker power is too small. When the volume of the unit is turned up, many will be noise.	2. The speaker cable is grounded.	3. The speaker cable is grounded.	3. Remote control cannot be used	- Check if the battery of the remote control has power
PROBLEMS CAUSES & SOLUTIONS													
1. Unable to heat normally													
- Receiver is not heating													
1. The cable route caused. If the blue cable (heater cable) and power supply is connected to the power cable of the unit, an automatic shutdown will occur. Please follow the correct wiring method to solve the problem.													
2. The voltage is unstable please find a 12V/5A which can be the power supply and no instant to see if it will automatically shut down or not. If it does not automatically shut down after the test, please replace the power supply. If it will automatically shut down, it is positive with the unit.													
2. Hearing noise													
- The general situation of noise is caused by two reasons													
1. The longer speaker power is too small. When the volume of the unit is turned up, many will be noise.													
2. The speaker cable is grounded.													
3. The speaker cable is grounded.													
3. Remote control cannot be used													
- Check if the battery of the remote control has power													

<p>1. The engine car line and wire can not be connected to the car, the side of the original car line is not identified. If you connect like that it can not only be turned on but also may start.</p> <p>2. The engine car plug can't be plugged directly into the line car, need a 3pin plug. It can't be used, otherwise it won't be turned on or turned off.</p> <p>3. The 3 wires are connected right, but it does not heat. Check if the fuse on the positive line is broken. If there is no problem with the fuse, find the yellow and red wires together. Turn on the key and press the unit's power button to see if it can be turned on.</p> <p>4. Every time you change the fuse, it burns. Please don't change it again. The reason is that when you first connect the positive and negative poles, the protection circuit of the unit is short-circuited. The unit can be repaired under the guidance of our master. We have our own repair manual. To the after-sales or new unit. If there are no problems, or take don't heat, please make this final step to confirm. Find a 12V battery or 12V power supply "yellow" and "red". Inter together with the positive, back to the negative pole, press the button check if it can heat or not. If you can't heat, it showed that the engine car line is not right connected, or there is a problem with the car line. If it can't heat, the unit is broken. Please do not touch. Once it is broken, check the line carefully, do not touch the unit problem.</p>	<p>5. Automatic shutdown</p> <p>- Automatic shutdown usually has these following conditions</p> <ol style="list-style-type: none"> The cable route caused. If the blue cable (heater cable) and power supply is connected to the power cable of the unit, an automatic shutdown will occur. Please follow the correct wiring method to solve the problem. The voltage is unstable please find a 12V/5A which can be the power supply and no instant to see if it will automatically shut down or not. If it does not automatically shut down after the test, please replace the power supply. If it will automatically shut down, it is positive with the unit. <p>6. Hearing noise</p> <p>- The general situation of noise is caused by two reasons</p> <ol style="list-style-type: none"> The longer speaker power is too small. When the volume of the unit is turned up, many will be noise. The speaker cable is grounded. <p>7. Remote control cannot be used</p> <p>- Check if the battery of the remote control has power</p>
--	--

<p>1. Your mobile: Turn on the camera of the mobile phone and align the light of the remote control, then press the button of the remote control to see if the phone will light up. If it is not, then there will be no power. Replace the battery. That is, there is electricity, which proves that there is no problem with the remote control.</p> <p>2. Settings cannot be saved no memory</p> <ul style="list-style-type: none"> - There is no memory function, there is only 2 models in memory. <p>3. The previous day and the red line are connected together (camera cannot be positioned, not to keep control)</p> <p>4. Yellow and red are reversed (will change position)</p> <p>5. Car audio with Bluetooth but it can't work</p> <ul style="list-style-type: none"> - Check the phone to see if you can connect. Not the car model of you. <p>6. Open driver app, turn on the car, open the phone Bluetooth search, search for 1234 (4888)</p> <ul style="list-style-type: none"> - Then click the connection, after connecting, you just unplug the phone or Bluetooth to stop the song. <p>7. PIN Code: 3333</p> <p>8. The product which has proved that the internal circuit has been learned and change the insurance FUSE can not solve the problem</p> <ul style="list-style-type: none"> - At this point, the unit needs to be repaired. 	<p>9. How to adjust the sound, when is the equalizer set, the sound can not be adjusted</p> <ul style="list-style-type: none"> - Adjust the sound power from the volume button. - Equalizer settings, in general, please the sound mode to display the equalizer SEL, and rotate the volume button to adjust each sound effect. <p>10. How to repair no image of reversing camera</p> <p>Commonly two situations</p> <ol style="list-style-type: none"> 1. Connect the wrong line or bad wiring. Camera connection method: a) The first step is to fit the part of the wiring first (fit the remaining control line on the power line of the unit). The control line is a pair line or ground line, connect the red to the positive pole of 12V and the green will turn blue. Fit the back of the unit the CAN-B bus must connect. And the positive and negative of the driving light. The second step is to connect three line has inserted on the camera, the red should be connected to the power cable. The yellow is inserted into the video cable, the red line of the power cable and the wire of the video cable are connected.
---	--

<p>12. USB flash disk can not be played.</p> <p>The card slot does not enter the card, the read card reader has no content?</p> <ul style="list-style-type: none"> - USB flash disk can not play. - Format the USB flash disk, and the file system is set to NTFS, no content or new songs will be added. If it still doesn't work, please format the USB flash disk. - The music card cannot be recognized. - Insert the card into the connector to format, and then the card or change the memory card to eliminate the software. - The card slot does not enter the card. - Check whether the memory card is inserted, the plug is broken. - There is no content in the new card folder. - Insert the card into the computer to check it. If there is no content, you need to download songs. <p>13</p>	<p>12. FM does not receive the program</p> <p>- Can AM receive the station, check the 2 points</p> <ol style="list-style-type: none"> 1. The antenna plug is not fully inserted, the antenna is disconnected or the line is damaged. 2. Search channel. Hold A/B/C keys for 3 seconds. The unit will automatically search for programs. If the unit does not perform a channel search, don't move the antenna. Please unplug the antenna plug, and find a suitable or a better way to insert it instead of the antenna. <p>13. How to install?</p> <p>This depends on your personal home-use car. Most people use remote installation. If it is not possible, it's better than it and tell you how to do it. Installation methods: Replaces the original car radio, the new unit can be installed back according to the installation method of the original car radio. If not, how the original car unit is installed, you will install it here, you will fit it.</p> <p>14. How to remove the original car radio?</p> <p>The best way is to do it yourself. If it doesn't, you can get the worker to do it for you.</p> <p>15. Install it without removing the cover or USB flash disk</p> <ul style="list-style-type: none"> - Before the unit is shipped, it is tested that the USB flash disk and the card are not read. Do not touch the card. First format the card or USB flash on the computer and then install it. <p>14</p>
---	--

<p>16. Just installed no sound</p> <ul style="list-style-type: none"> - Dear customer, this unit has been tested before shipment. If there is no sound, it is usually a setting error or the original car speaker wire is not connected well. Please do not adjust the unit. According to the steps below: 1. Check if the antenna cable is disconnected and connected. Please reconnect if you have any loose cables. 2. Check how many speakers are connected to the original speaker. Listen if there are only 2 speakers connected to the original car. If there are not enough, you need to re-connect the original car wires. One speaker must lead to 2 speaker wires. If speaker lead to 1 wire, it is speaker location is available. 17. After a while there is no sound <ul style="list-style-type: none"> - Disconnect all the speaker wires from the car. Do not disconnect all of them, and then find an external speaker to connect the stereo and people of the last few of the car. Once any person, and then try to test if there is any sound. If there is no sound, it is proved that the car is connected. It is connected with one or the speaker is damaged. If there is no sound, the unit is broken. <p>15</p> 	<p>[INTRODUCTION TO BASIC FUNCTIONS]</p> <p>Math Unit Operation</p> <table border="1"> <thead> <tr> <th>Symbol/Function</th> <th>Description & Controls</th> </tr> </thead> <tbody> <tr> <td>=</td> <td>For value operation, press either [Result]-operator. Press after a portion input (such as not press) to make the unit to its initial setting by the factory (default shape).</td> </tr> <tr> <td>AC</td> <td>When the unit is turned off, press to turn on the unit. When the unit is turned on, long press for 2 seconds to turn off the unit. Long short press immediately to mute and volume more.</td> </tr> <tr> <td>OFF</td> <td>Press to turn off the previous function.</td> </tr> <tr> <td>±</td> <td>Press repeatedly to press & hold to increase sound output level.</td> </tr> <tr> <td>±</td> <td>Press repeatedly to press & hold to reduce sound output level.</td> </tr> </tbody> </table> <p>16</p>	Symbol/Function	Description & Controls	=	For value operation, press either [Result]-operator. Press after a portion input (such as not press) to make the unit to its initial setting by the factory (default shape).	AC	When the unit is turned off, press to turn on the unit. When the unit is turned on, long press for 2 seconds to turn off the unit. Long short press immediately to mute and volume more.	OFF	Press to turn off the previous function.	±	Press repeatedly to press & hold to increase sound output level.	±	Press repeatedly to press & hold to reduce sound output level.
Symbol/Function	Description & Controls												
=	For value operation, press either [Result]-operator. Press after a portion input (such as not press) to make the unit to its initial setting by the factory (default shape).												
AC	When the unit is turned off, press to turn on the unit. When the unit is turned on, long press for 2 seconds to turn off the unit. Long short press immediately to mute and volume more.												
OFF	Press to turn off the previous function.												
±	Press repeatedly to press & hold to increase sound output level.												
±	Press repeatedly to press & hold to reduce sound output level.												

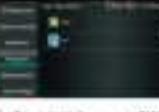
<p>ON SCREEN - MAIN MENU OPERATION</p> <p>Search the menu on the bottom screen of the unit, and the unit will start under the mode that selected for connection.</p> <p>1. Hold & tap. The operation mode will switch to drift to other MAIN MENU. Each shows the following step or functions:</p> <ol style="list-style-type: none"> 1. Touch to drift screen to MAIN MENU. 2. Touch to drift screen to the Music, Radio, Settings screen. Touch the top and pull down of this screen and easy up the scroll bar button. 3. Touch to drift screen to the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to drift screen to return to the previous interface. 5. Touch to drift screen to SPEAKER MENU. 6. Touch to drift screen to EQ MENU. 7. Touch to easy all items of the current interface to the default value. 8. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 9. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 10. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 11. The user can select different system preset EQ modes and set different values. 12. The user can select different system preset DSD modes and set different values. 13. The user can select different system preset DS modes and set different values. 14. Touch the third, four, left and right arrows to decrease the volume steps of the speaker corresponding to the route. You can touch and drag the scroll bar on the screen to set it as possible to the best to achieve the effect of using the speaker. <p>17</p>	<p>ON SCREEN - SYSTEM SETTINGS</p> <p>1. Touch to drift screen to drift various System Settings(Page1) of the unit.</p> <ol style="list-style-type: none"> 2. Touch to drift screen to the Basic Functions(Page1) of the installed app. 3. Touch to drift screen to navigation. 4. Touch to drift screen to Music Play Operation(Page1). 5. Touch to drift screen to BlueTooth Operation(Page1). 6. Touch to drift screen to Radio Operation(Page1). 7. Touch to drift screen to drift various System Settings(Page2) of the unit. 8. Touch to drift screen to Video Play Operation(Page2). <p>18</p>
--	--

<p>1. Touch to drift screen to MAIN MENU.</p> <ol style="list-style-type: none"> 2. Touch to drift the electrical audio function. Touch the top and pull-down of the screen and pick up the electric audio button. 3. Touch to chapter of the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to drift screen to the previous interface. 5. Touch to drift screen to SPEAKER MENU. 6. Touch to drift screen to EQ MENU. 7. Touch to easy all items of the current interface to the default value. 8. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 9. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 10. With continuous touch and movement, you can set the value of the slider to achieve the desired effect. 11. The user can select different system preset EQ modes and set different values. 12. The user can select different system preset DSD modes and set different values. 13. The user can select different system preset DS modes and set different values. 14. Touch the third, four, left and right arrows to decrease the volume steps of the speaker corresponding to the route. You can touch and drag the scroll bar on the screen to set it as possible to the best to achieve the effect of using the speaker. <p>19</p>	<p>[System Info]</p> <p>Touch to view information about important parts of the system.</p> <p>Factory Settings</p> <p>20</p>
---	--

<p>1. Enter the password to enter the Factory Settings. The password is: 12345. 2. The Factory Setting function is an option for reinitializing data of the system. Please use it carefully.</p> <p>[Car Settings]</p>  <p>4. The original car is not proceeding as the present law requires, provides the agreement to not the original car. Accept.</p> <p>But the body family and detailed information Operate the menu with the original car panel issue and panel mode. Display on touch display vibration and radio information etc. (Note: This original car can not function in accordance with the agreement is completed.)</p> <p>26</p>	<p>[Android Settings]</p>  <p>1. Touch to off screen to MAIN MENU. 2. Touch to raise the electrical motor button area. Touch the top and bottom of the screen and wake up the electrical motor button. 3. Touch to display all the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to off screen to return to the previous interface. 5. WiFi: Touch to open the WiFi connection interface, search for the WiFi route you need, then click set the connection. 6. Data usage: Touch to open the monitoring interface for data usage. You can view the usage of data traffic in the corresponding date.</p> <p>27</p>
---	--

<p>7. Main: you can return on all the Appliance menu, including Telephone & portable device. 8. Display: Touch to open Display Interface. You can setting the Wallpaper and Font size. Turn on or off the video output function of the machine. 9. Sound & notification: Touch to open Sound & notification interface. The user can set the alarm (beep), the bell and the ring tone of the system. 10. App: Touch to open App interface. You can especially note that all the apps that have been installed on the machine. 11. Storage & USB: To switch Agent Storage & USB interface. You can see the total capacity and usage of built-in memory and the expandable memory. 12. Location: Touch to not use location function in the system. 13. Accounts: Touch to open account information. 14. Google: Touch to setting Google service information. 15. Language & input: To set up language for the system. You may choose the 43 languages to choose from, and you can also set up the system's input method on this page. 16. Backup & restore: Touch to still connect to Backup & restore interface. You can perform the following actions on this page: ① Touch to my data, check up app data, WiFi, Location and other applications Google services. 28</p>	<p>② Network account: Need to set the tracking account. ③ Automatic resume: When resuming an app, instead back to setting and data. 17. Date & time: Touch to open Date & time-interface. In this interface, you can do the following: ① Automatic date & time: You can set it to Use network-provided time Use GPS synchronized time Off. ② Set date: Touch to set the date, provided that Automatic date & time must be set to Off. ③ Set time: Should be set the time, provided that Automatic date & time must be set to Off. ④ Set local time: Touch to set the time zone. ⑤ Use 24-hour format: Touch to switch the time display format to 12-hour or 24-hour representation. 18. Accessibility: Touch to open Accessibility interface. Users can perform the following operations: ① Captions: Users can turn on or turn off the captions, and setting Language, Text size, Caption style. ② Magnification gestures: Users can turn on or turn off this operation. ③ Large text: Turn on this setting to make the text displayed on the screen larger. ④ High contrast text: Users can turn on or turn off this operation. ⑤ Train & talk ability: Users can choose three levels: short, Medium, Long.</p> <p>29</p>
--	--

<p>⑩ Blank icon: Users can turn on or turn off this operation. ⑪ Cross icon: It turns on that switch the function of the screen will turn off. ⑫ Color icon: Green icon turn on or turn off this operation.</p> <p>[GPS Management]</p>  <p>It is used to display the number of satellites currently monitored by GPS, the signal strength of the monitored satellites, and other information of the satellites.</p> <p>30</p>	<p>[Volume settings]</p>  <p>1. Touch to off screen to MAIN MENU. 2. Touch to raise the electrical motor button area. Touch the top and bottom of the screen and wake up the electrical motor button. 3. Touch to display all the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to off screen to return to the previous interface. 5. After touching the sound, every time you tap on the machine, the volume will go back to the value set in volume volume. 6. Touch and drag to set the volume of the media.</p> <p>31</p>
--	--

<p>⑯ Touch and drag to set the volume of the call. ⑰ Touch and drag to set the mixing ratio of the source music. ⑱ Touch and drag to set the default volume of the media output.</p> <p>[Brightness]</p>  <p>1. Touch to off screen to MAIN MENU. 2. Touch to raise the electrical motor button area. Touch the top and bottom of the screen and wake up the electrical motor button. 3. Touch to display all the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to off screen to return to the previous interface. 32</p>	<p>⑲ Correct the R/L line of the left line of the headlight to the positive pole of the headlight of the car. When the headlight is off, touch “+” or “-” to adjust the brightness of the right headlight. ⑳ Correct the R/L line of the left line of the headlight to the positive pole of the headlight of the car. When the headlight is on, touch “+” or “-” to adjust the brightness of the left headlight.</p> <p>[Photograph]</p>  <p>1. Touch to off screen to MAIN MENU. 2. Touch to raise the electrical motor button area. Touch the top and bottom of the screen and wake up the electrical motor button.</p> <p>33</p>
---	--

<p>1 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>2 Touch to shift screen to MAIN MENU.</p> <p>3 After touching the task, touch automatically run navigation.</p> <p>4 If multiple navigation softkeys is installed in the system, after touching the task, the softkey will always run which navigation softkey should be opened last time the navigation is started.</p> <p>5 One of navigation softkeys installed in the system, the user can select one of the navigation softkeys when the navigation is turned on, the system will automatically run the navigation softkey.</p> <p>[Display Layout]</p> 	<p>1 Touch to shift screen to MAIN MENU.</p> <p>2 Touch to hide the phone menu status area. Touch the top and pull down of the screen and wake up the phone menu status.</p> <p>3 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>4 Touch to shift screen to the previous interface.</p> <p>5 Touch to close all running related buttons.</p> <p>6 List of closing short keys that can be used for closing.</p> <p>[Display when taking hearing aid]</p> <p>1 Display LTP and off BT screen when plug of the microphone to the hearing aid and control over the hearing aid. After turning on the hearing aid, touch the screen quickly find the corresponding function key on the legend of the hearing aid running when and press the button to turn volume until the maximum volume prompted, then touch and hold the button indicating that the hearing has succeeded, and the next button can be learned.</p> <p>[Logo Setting]</p> <p>1 Logo Off: The user can set the car logo display when the machine is turned on. The user can select from the pictures preset by the system or select their own customized pictures.</p> <p>2 Automatic: The user can set the atmosphere when the machine is turned on. The user can select from the pictures preset by the system or select their own customized pictures.</p>
--	---

<p>[POWER Settings]</p>  <p>1 Touch to shift screen to MAIN MENU.</p> <p>2 Touch to hide the phone menu status area. Touch the top and pull down of the screen and wake up the phone menu status.</p> <p>3 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>4 Touch to shift screen to the previous interface.</p> <p>5 Touch the Power button to switch on. Power On/Off icon will appear on the screen, just touch Power On/Off icon to switch off.</p> <p>6 Hold touch. Touch the power selection icon. When this switch is turned on, watching the video will play and will be stopped during the decoding process. When this switch is turned off, you can watch the video in play at any time.</p>	<p>7 Screen Setting: Touch screen selection icon. The machine screen display will turn a background screen display.</p> <p>8 Remote Setting: The user can set whether the machine is in silent mode when remote.</p> <p>[On screen - icon desktop]</p>   <p>[Bluetooth]</p> <p>Connection method: via pairing power on, mobile phone open Bluetooth function search equipment, the linked Bluetooth name of the machine is 'Car BT', after searching for the name, press on the paired connection, confirmation password 0000.</p>
---	---

   	<p>1 Touch to shift screen to BT SETTINGS MENU.</p> <p>2 Touch number display area, numeric display area entered by numeric keypad.</p> <p>3 Touch to enter the phone number of the current input device.</p> <p>4 Touch to re-entering the last dialed number.</p> <p>5 Registered area for making telephone numbers.</p> <p>6 Search contacts in the named address book.</p> <p>7 Set a contact from the address book.</p> <p>8 Select a contact from the contact list and touch the button to dial the contact number.</p> <p>9 Touch to download the personal book of the currently-connected cell phone.</p> <p>10 Touch to view a list of all incoming phone numbers.</p> <p>11 Touch to view a list of all phone numbers that have been dialed.</p> <p>12 Touch to view a list of all outgoing phone numbers.</p> <p>13 Corresponding phone number list display area.</p> <p>14 Make a contact from the contact list and touch the button to add the contact number.</p> <p>15 Touch to download the personal book of the currently-connected cell phone.</p> <p>16 Touch to enter to the previous contact playback.</p> <p>17 Touch to pause/pause and back again to resume playback.</p> <p>18 Touch to listen to the next music playback.</p> <p>19 The name and singer of the currently playing song.</p> <p>20 Single phone input of paired connection.</p>	<p>21 Touch to BT screen to MAIN MENU.</p> <p>22 Touch to hide the phone menu status area. Touch the top and pull down of the screen and wake up the phone menu status.</p> <p>23 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>24 Touch to shift screen to the previous interface.</p> <p>25 Touch to close all running related buttons.</p> <p>[Bluetooth]</p> <p>1 Touch to shift screen to MAIN MENU.</p> <p>2 Touch to hide the phone menu status area. Touch the top and pull down of the screen and wake up the phone menu status.</p> <p>3 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>4 Touch to shift screen to the previous interface.</p> <p>5 Touch to close all running related buttons.</p>
---	---	---

<p>21 Touch to shift screen to BT SETTINGS MENU.</p> <p>22 Touch number display area, numeric display area entered by numeric keypad.</p> <p>23 Touch to enter the phone number of the current input device.</p> <p>24 Touch to re-entering the last dialed number.</p> <p>25 Registered area for making telephone numbers.</p> <p>26 Search contacts in the named address book.</p> <p>27 Set a contact from the address book.</p> <p>28 Select a contact from the contact list and touch the button to dial the contact number.</p> <p>29 Touch to download the personal book of the currently-connected cell phone.</p> <p>30 Touch to view a list of all incoming phone numbers.</p> <p>31 Touch to view a list of all phone numbers that have been dialed.</p> <p>32 Touch to view a list of all outgoing phone numbers.</p> <p>33 Corresponding phone number list display area.</p> <p>34 Make a contact from the contact list and touch the button to add the contact number.</p> <p>35 Touch to download the personal book of the currently-connected cell phone.</p> <p>36 Touch to enter to the previous contact playback.</p> <p>37 Touch to pause/pause and back again to resume playback.</p> <p>38 Touch to listen to the next music playback.</p> <p>39 The name and singer of the currently playing song.</p> <p>40 Single phone input of paired connection.</p>	<p>40 Device name: Touch to change the virtual Bluetooth device name. The default Bluetooth device name is 'Car BT'.</p> <p>41 Device PIN: Touch to change the virtual Bluetooth device PIN. The default Bluetooth device name is '0000'.</p> <p>42 Auto answer: Touch to turn on or turn off the auto answer operation. When this operation is turn on, and the phone call in, the phone will be automatically answered.</p> <p>43 Auto connect: Touch to turn on or turn off the auto connect operation. When this operation is turn on, each device needs to be manually connected after disconnection.</p> <p>44 Power: Touch to turn on or turn off the BT Power. When BT Power is turn off, the phone will not be able to search for the Bluetooth device.</p> <p>[Bluetooth]</p> <p>1 Touch to shift screen to MAIN MENU.</p> <p>2 Touch to hide the phone menu status area. Touch the top and pull down of the screen and wake up the phone menu status.</p> <p>3 Touch to display all the programs running in the background, where you can choose to close the programs running in the background.</p> <p>4 Touch to shift screen to the previous interface.</p> <p>5 Touch to close all running related buttons.</p>
--	--

 1. Touch and drag the progress bar to adjust the volume. 2. Show full display mode. 3. Detailed information display area of the controller screen during playback. 4. The progress bar of the currently playing song, touch and drag the progress bar to change the playback progress. 5. Touch to shift screen to MUSIC LIST MENU. 6. Touch to switch the play mode button. [Repeat off / Repeat on] 7. Touch to shift to previous track playback. 8. Return to start, pause or resume playback. 9. Touch to shift screen to Sound Settings (page 21). 46	 10. Touch up song name field. 11. Touch down song name field. 12. Touch to search from Library, Device, or click search, enter a song name, and search for songs from the song list. 13. Touch to select to display songs from all media, or just show songs from the SD card, or just show songs from cards. 14. Touch to show a list of favorite songs. 15. Touch sequentially to show songs in all formats, MP3 format, or CD format. 16. Touch to switch off song name. 17. Touch to display the song list in the background, where you can choose to close the program running in the background. 18. Touch to shift screen to Sound Settings (page 21). 47
--	--

 1. Touch and drag the progress bar to adjust the volume. 2. Touch to fine-tune the radio frequency forward or backward. Touch & hold shortly to search for available stations forward or downward, and remember the station. Touch again to stop search. 3. Touch to shift screen to MAIN MENU. 4. The touch starts scanning the FM band station and stores the scanned valid radio station in the station list (4), over the stored first station is automatically played after the scan is completed. 5. Touch forward or backward to scan in valid radio station. After scanning in a valid station, it will stop to play the station and will not continue scanning. 48	 11. Search sequentially to switch between FM and AM. 12. Search sequentially to switch between DAB/DAB+ and WEWAC, which is a station that can keep a specific degree of a station that only has a strong signal when searching at stations. 13. Touch to shift screen to return to the previous interface. 14. A list of stations that have been stored in the radio, and the user can select one of the stations to listen to this station. When the user sets a radio frequency by touch, he can press and hold the key position in one of the lists to save the Frequency in the list. Touch according the list to flip the page for a total of 8 pages. [Dot Navigation] Touch to open GPS navigation, the system will just to select multiple navigation software installed to automatically search the default navigation without that has been set. [Phone] 1. Touch to shift screen to MAIN MENU. 2. Touch to make the phone menu button area. Touch the top and pull-down of the screen and wake up the smartphone screen button. 3. Touch to display the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to shift screen to return to the previous interface.
---	---

 1. Touch to shift screen to VIDEO LIST MENU. 2. The progress bar of the currently playing video, touch and drag the progress bar to change the playback progress. 3. Touch to shift screen to RECENT LISTINGS (page 21). 4. Touch to shift to next or previous track playback. 5. Touch to select, pause or resume playback. 6. Touch to shift screen to VIDEO MENU. 7. Touch to shift screen to the action display menu, like, Put Screen, 4:3, 16:9. 8. Touch to shift screen to VIDEO MENU. 9. Video full display area. 10. Select different later to display more video list information. 11. Touch to select to display content from all media, or just show video from the SD card, or just show video from cards. 49	 [Video] The user can input external video to the monitor through the terminal box on the front of the monitor. CHINADIGITALVIDEO is input external audio to the monitor. [Calculator]  1. Touch to shift screen to MAIN MENU. 2. Touch to make the phone menu button area. Touch the top and pull-down of the screen and wake up the smartphone screen button. 3. Touch to display all the programs running in the background, where you can choose to close the programs running in the background. 4. Touch to shift screen to return to the previous interface.
---	---

[Calculator] 1. The calculator is displayed and the command bar is displayed. 2. User can freely choose the date setting mode and other operators. [Car Settings] Touch to shift screen to SYSTEM SETTINGS (page 21). [Chrome] Touch to connect to the Google Chrome. When the unit is connected to the Internet, you can use Google Chrome to go online. [Downloads] Touch to connect to your a list of all files that the user has downloaded. [File Manager] Touch to open the file manager user can delete, copy, cut, move and often use as the machine memory and extended memory. You can also create new files, folders. 49	  50
---	---

<p>MAIN MENU</p> <ol style="list-style-type: none"> Touch to shift screen to MAIN MENU. Touch to rotate the phone in every direction. Touch to switch all the programs running in the background, where you can choose to close the programs running in the background. Touch to shift screen to ANDROIDLINK MENU. Touch to shift screen to SPHERELINK MENU. Touch to display information about the software. Touch to control the remote interface. Touch to open a USB port and the screen shows the GDI code to download the TMA APP. <p>ANDROIDLINK MENU</p> <ol style="list-style-type: none"> Open USB cable to connect mobile phone. Open the download option on the phone, enter the download option, and open USB debugging. Open TMA app, and complete the connection according to prompt on mobile phone. <p>Note: If the navigation module is not found in the phone storage, please go to "About the phone" and click on the update transfer, it needs to download "TMA APP" package. You can provide a download link.</p> <p>48</p>	<p>SPHERELINK MENU</p> <ol style="list-style-type: none"> Open mobile phone laptop and select your language in the list. Take up your iPhone, join the pairing mode. Open USB port and download TMA APP, install TMA APP. <p>ON SCREEN - FLOAT BAR</p> <p>For the satellite interface, other settings, etc; the float bar will change to 4x4.</p> <ol style="list-style-type: none"> Float bar can access in any interface, touch to open the control menu. Touch to shift screen to return to the previous interface. Touch to reduce the volume. Touch to increase the volume. Touch by shift screen to MAIN MENU. Touch to eliminate the reaction. <p>49</p>
---	---

<p>SPECIFICATION</p> <p>VIDEO SECTION</p> <table border="0"> <tr> <td>Video System:</td> <td>HDMI</td> </tr> <tr> <td>Video Output Level:</td> <td>1.2 (0.75Vpp)</td> </tr> <tr> <td>Resolution:</td> <td>1080</td> </tr> </table> <p>BLUETOOTH SECTION</p> <table border="0"> <tr> <td>Communication Type:</td> <td>V4.0</td> </tr> <tr> <td>Maximum Distance:</td> <td>10m</td> </tr> </table> <p>50</p>	Video System:	HDMI	Video Output Level:	1.2 (0.75Vpp)	Resolution:	1080	Communication Type:	V4.0	Maximum Distance:	10m	<p>SPECIFICATION</p> <p>GENERAL</p> <table border="0"> <tr> <td>Power Requirements:</td> <td>DC 12V (With negative ground)</td> </tr> <tr> <td>Current Requirements:</td> <td>4A (Max)</td> </tr> <tr> <td>Maximum Power Output:</td> <td>30Watts x 4 (RMS)</td> </tr> <tr> <td>Band Control:</td> <td>Bass (0-100Hz)</td> </tr> <tr> <td>Band Control:</td> <td>Treble (0-10KHz)</td> </tr> </table> <p>FM RADIO SECTION</p> <table border="0"> <tr> <td>Frequencies Range:</td> <td>87.0 - 108 MHz</td> </tr> <tr> <td>Antenna Sensitivity:</td> <td>1-20 dB</td> </tr> <tr> <td>Signal-to-Noise Ratio:</td> <td>>30 dB</td> </tr> <tr> <td>Inter-Signal Separation (at 100%):</td> <td>>30 dB</td> </tr> <tr> <td>Frequency Response:</td> <td>30 Hz - 15 kHz</td> </tr> </table> <p>AUDIO SECTION</p> <table border="0"> <tr> <td>Maximum Output Level:</td> <td>2 Watts (per 0.9W)</td> </tr> <tr> <td>Frequency Response:</td> <td>20 Hz - 20 kHz</td> </tr> <tr> <td>Signal-to-Noise Ratio:</td> <td>>40 dB</td> </tr> <tr> <td>Channel Separation:</td> <td>>40 dB</td> </tr> </table> <p>51</p>	Power Requirements:	DC 12V (With negative ground)	Current Requirements:	4A (Max)	Maximum Power Output:	30Watts x 4 (RMS)	Band Control:	Bass (0-100Hz)	Band Control:	Treble (0-10KHz)	Frequencies Range:	87.0 - 108 MHz	Antenna Sensitivity:	1-20 dB	Signal-to-Noise Ratio:	>30 dB	Inter-Signal Separation (at 100%):	>30 dB	Frequency Response:	30 Hz - 15 kHz	Maximum Output Level:	2 Watts (per 0.9W)	Frequency Response:	20 Hz - 20 kHz	Signal-to-Noise Ratio:	>40 dB	Channel Separation:	>40 dB
Video System:	HDMI																																						
Video Output Level:	1.2 (0.75Vpp)																																						
Resolution:	1080																																						
Communication Type:	V4.0																																						
Maximum Distance:	10m																																						
Power Requirements:	DC 12V (With negative ground)																																						
Current Requirements:	4A (Max)																																						
Maximum Power Output:	30Watts x 4 (RMS)																																						
Band Control:	Bass (0-100Hz)																																						
Band Control:	Treble (0-10KHz)																																						
Frequencies Range:	87.0 - 108 MHz																																						
Antenna Sensitivity:	1-20 dB																																						
Signal-to-Noise Ratio:	>30 dB																																						
Inter-Signal Separation (at 100%):	>30 dB																																						
Frequency Response:	30 Hz - 15 kHz																																						
Maximum Output Level:	2 Watts (per 0.9W)																																						
Frequency Response:	20 Hz - 20 kHz																																						
Signal-to-Noise Ratio:	>40 dB																																						
Channel Separation:	>40 dB																																						

<p>Offline Map Operation Guide</p> <p>Thank you for purchasing our offline map navigation device. In order to use the offline function of the device, please follow below steps for setup.</p> <ol style="list-style-type: none"> Power on the unit and connect the network internet by WiFi. Find the APP named "Map" on the main menu. <p>52</p>	<ol style="list-style-type: none"> Home screen of the app, in the main map page and find the option menu. Click "Sync Offline" and download your preferred map data in the cache file. <p>53</p>
---	--

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.