

True Wireless **Bluetooth Earbuds**

User Manual | VWS-D80

Specifications

- Model: NRI
- Bluetooth version: Bluetooth 5.3
- Compatible Bluetooth profile: AVRCP/A2DP/HFP/HSP
- + Supported codec: SBC/AAC
- Maximum communication range: <10 m • Frequency band: 2402MHz-2480MHz
- Frequency range: 50Hz-20KHz
- Earbuds' battery capacity: 25mAh/0.0925Wh
- · Earbuds'input power: 5V-25mA
- Charging case's battery capacity: 250mAh/0.925Wh
- . Charging case's input power: 5V=250mA
- Charging case's interface: USB-C
- · Material: ABS

Operating instructions

1 Power on

a. When the charging case opens, the earbuds power on

2. Pairing and connection

① Earbuds are ready to pair right out of the charging case Note: If the pairing fails, please check whether the earbuds are fully

② Open the Bluetooth menu on your device. In the list of discovered Bluetooth devices, tap or click your Vention T12.

Note: For the first-time pairing, please keep the pairing range within

- Auto power off
- a. The earbuds will automatically power off after 5 minutes of not being connected.
- b. When the earbuds are not paired with the phone due to the long distance, it will automatically power off if it is not connected for more than 5 minutes.
- a. Earbuds automatically power off when place back in the charging case with the lid closed.
- b. When it is connected and not playing any content, press and hold the multi-function button for 5 seconds to power off (left or right).

4. Music mode



• Play/Pause: Tap the multi-function button twice = 10.000 function



Skip backward: Press and hold the multi-function button on the left earbud for 2 seconds



button on the right earbud for 2 seconds • Decrease the volume: Tap the multi-function button

on the left earbud

quickly(left or right)



. Increase the volume: Tap the multi-function button

on the right earbud



. Decline the call: Press and hold the multi-function • Answer a call: Tap the multi-function button twice



End a call: Press and hold the multi-function button for 2 seconds (left or right)

6. Using the voice assist function



 When the phone is in standby or playing music, tap the multi-function button for 3 times(left or right)to activate yourvoice assistant. Tap the multi-function button for 3 times(left or right) to stop mobile device voice control.

7. Clear the Earbuds device list



· When the earbuds are powered on (and the device's Bluetooth function is turned off), press and hold the setup button for 5 seconds. After the white light flashes 5 times, the earbuds will be reset, deleting all pairing data.

Contents















For more interesting information and events, please follow us on







8. Charging case status light

Status	Color	Indication	
During charging	Orange	The indicator lights up in orang while charging. The indicato lights up in green after chargin is complete.	
Take out or place back the earbuds	Green	Take out: The indicator lights up in green for about 10 seconds, and then turns off.	
		Place back: When the remaining battery charge of the earbuds is between 99% and 5%, the indicate on the charging case lights up in green. When the battery is fully charged, the indicator turns off.	
Open or close the case lid	Green	The indicator lights up in green for about 10 seconds, and then turns off.	
Require charging	Green	5% or lower: The indicator on the charging case repeatedly flashes slowly in orange for about 15 seconds, and then turns off.	
Checking the remaining Gree		Whenyoupress the setup button you can check the remaining battery charge of the rechargeable battery. When the remaining charge becomes low, the color of the operating indicator (green) becomes orange.	

Important safety instructions

Inappropriate use will cause damage to the product or personal safety.

- 1. Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire, or the like); do not store this product in high temperature, strong light, and strong magnetic fieldenvironment, do not place it in other harsh environments such as fire source, If your earbuds ever go into the water, please dry it naturally before using.
- 2. Improper use of the product can easily cause product damage or may endanger personal and property safety.
- 3. If consumers violate the product instructions and use them improperly. the company will not bear any consequences or legal liability for personal and property damage.
- 4. Non-professionals are strictly forbidden to disassemble this product. 5. Use this product only with an agency-approved power supply that meets local regulatory requirements oved power supply that meets local regulatory requirements.

Declaration on toxic or hazardous substances

Parts name	Toxic or Hazardous Substances or Elements						
	Lead	Mercury	Cadmium	Heravolent	Polybrominated bipherals	Polybrominates diphenyl ether	
					(P910)		
PCBs	X	0	0	0	0	0	
Ceramic Parts	Х	0	0	0	0	0	
IC Parts	Χ	0	0	0	0	0	
Charging Cables	0	0	0	0	0	0	
Casing	0	0	0	0	0	0	

- This table is prepared in accordance with the provisions of SJ/T 1184.

 O Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of BB/T 26572.

 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit require GB/T 28572.

ECC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device $must \, accept \, any \, interference \, received, \, including \, interference \, that \,$ may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help. NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE3: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCCID: 2A7Z4-NBL