


TECKNET

Wireless Rechargeable Silent Mouse

TK-MS001

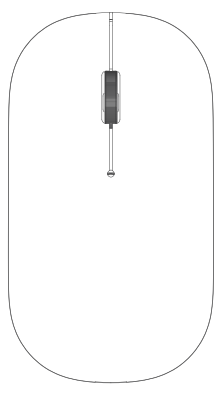


User Manual


EN


Thank you for purchasing Tecknet Wireless Rechargeable Silent Mouse. Please read this User Manual thoroughly before use of the product and retain it for future reference. If you have any problem using this mouse, please contact us by email at support@tecknet.co.uk.

Tips:
After receiving the product, please charge the mouse before using it.


Package Contents:


 x 1


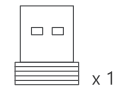
 x 1

 x 1

Product Overview:

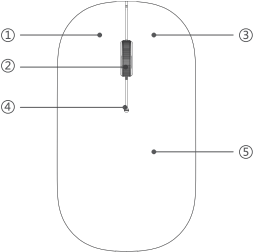

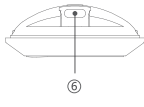

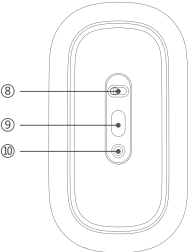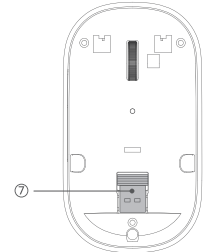

EN

1. Left Button

2. Scroll Wheel

3. Right Button

4. Status Indicator

5. Magnetic Removable Cover

6. USB-A Charging Port

7. USB-A Receiver

8. 2.4GHz/Off/Bluetooth 3-mode Switch

9. sensor

10. Round Button (Bluetooth Connection Switch/DPI Switch)

Specifications:

1. DPI: 600/1200/2400/4000 (default 1200)

2. Battery: 500mAh 3.7V

3. Charging input: USB-C port, 5V

4. Charging cable: black; USB-A to USB-C; length: 80cm; material: PVC

5. Connection mode: Bluetooth 3.0/5.0, 2.4GHz connection

6. Bluetooth device name: "BT5.0 Mouse" or "BT3.0 Mouse"

7. Receiver type: USB 2.0

8. Color of sensor light: blue

9. Working voltage: 3.7V

10. Working current: ≤15mA

11. Standby power consumption: 20 uA

12. Transmission distance: ≤15 m

13. Button durability: about 5 million clicks

14. Color: silver gray

15. Size of the mouse: 4.3*2.4*0.9 in (110*61*24 mm)

16. Mouse net weight: 2.5 oz (72 g)

17. Casing material: PC+ABS

18. Surface processing technique: texturing, lacquer spray

System Requirements:

Windows 2000/2003/XP/Vista, Win7, Win8, Win10, Mac OS X 10 (or higher).

Note:
The scroll wheel only works with the operating systems listed above. If you use the mouse with other operating systems, the mouse may either not work or lose its enhanced features.

Connect the mouse to your device:

2.4GHz connection

This mouse supports 2.4 GHz connection. Verify that your computer has an available USB-A port for inserting the USB-A receiver that comes with the mouse. If your computer does not have a USB-A port, you can use a hub for connection. If you don't have a hub and your computer has Bluetooth function, you may connect via Bluetooth connection. Here are the steps for 2.4GHz connection:

1. Open the cover of the mouse, take out the USB-A receiver, and close the cover.


2. Plug the USB-A receiver into the USB-A port of your computer.

3. Slide the 3-mode switch at the bottom of the mouse to the right. The mouse is now turned on to the 2.4GHz connection mode.


4. After the mouse is connected, the green indicator on the top of the mouse goes out, and you can use the mouse now.

Note:
This mouse is produced with 2.4GHz mode and has been paired with the USB-A receiver, so you don't need to re-pair it. (If disconnection occurs due to unconventional operations, press and hold the left button, scroll wheel, and right button at the same time for about 3 seconds. At this time, the green light flashes quickly indicating the mouse entering the pairing mode. Plug the receiver into the USB-A port of your computer to complete pairing.)


①

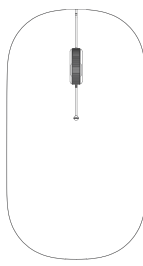


②

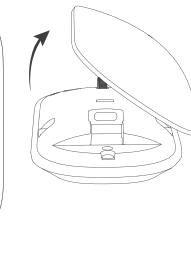


③

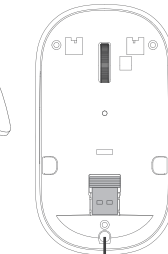


④

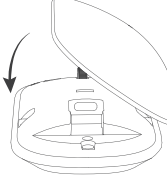

⑤

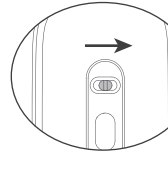

⑥

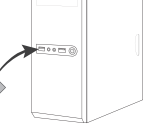

Bluetooth connection:

To be compatible with older devices, this mouse supports Bluetooth 3.0 and Bluetooth 5.0 connections. If your device does not support Bluetooth connection, use the 2.4GHz connection. Here are the steps for Bluetooth connection:

1. Verify that your computer has Bluetooth function and Bluetooth is turned on.

2. Slide the 3-mode switch at the bottom of the mouse to the left. The mouse is now turned on to the Bluetooth connection mode.

3. Long press the round button at the bottom of the mouse, and the indicator light on the top of the mouse flashes quickly in blue.

4. Search Bluetooth devices on your computer, select "BT5.0 mouse" or "BT3.0 mouse" and connect.

Tip:
For a better user experience, we recommend trying to use Bluetooth 5.0 connection, that is, connect "BT5.0 mouse". If the mouse cannot be used, it means that your device does not support Bluetooth 5.0. Then try to use Bluetooth 3.0 connection, that is, connect "BT3.0 mouse".

5. When connected successfully, the blue indicator on the top of the mouse goes out, and you can use the mouse now.

Tip: If your computer supports both 2.4GHz connection and Bluetooth connection, we recommend that you use 2.4GHz connection.

EC

REP

UE Fast Refund GmbH
Friedrich-Alfred-Straße 184
Duisburg 47226 Deutschland
+49 (0)211-97538868
EUROPECUSTOMERSERVICE@outlook.com

FCUKCA

Made In China

Adjust DPI level:

The mouse supports 4-level DPI adjustment (600/1200/2400/4000), and the default DPI is 1200. You can adjust the DPI level according to your needs. Short press the round button at the bottom of the mouse and the indicator light on the top of the mouse flashes three times and then goes out, indicating that the mouse is switched to the next DPI level. If the current DPI level is not enough, repeat the above step.

Charge the Mouse:

The mouse has a built-in 500mAh polymer rechargeable lithium battery, which requires no replacement. It takes about 2.5 hours to reach a full charge from zero power. In the case of using for 2 hours a day, and the rest of the time is in standby/sleep mode, it can be used for about 150 days after a full charge. When the mouse runs out of power, the indicator light on the top keeps flashing. Charge the mouse through the charging port inside the mouse.

Follow the charging steps below:


1. Open the cover of the mouse, take out the USB-A receiver and you can see the USB-C charging port.

2. Plug a charger with a USB-A port into a power source (charger not supplied).


3. Connect the mouse to the charger or a laptop with a USB-A port with the supplied USB-A to USB-C charging cable. When connected to power, the status indicator on the top of the mouse lights red, indicating that the mouse is charging, and the red light is off when charging is complete.

4. After charging is complete, put away the charging cable for further use, and close the mouse cover.


①

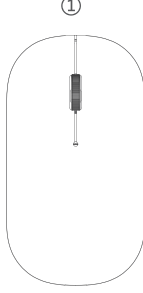


②

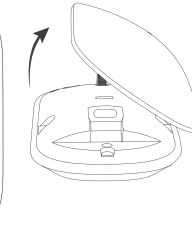


③

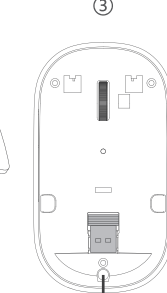

④

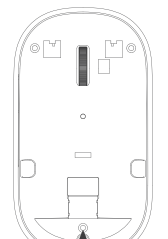

⑤

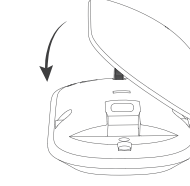


Tip:
If the mouse will not be used for a long time, slide the 3-mode switch to the middle to turn off the mouse for saving power and increasing battery life.

Wake up the Mouse from Sleep Mode:


The mouse has an auto-sleep function, which saves power consumption and increases battery life. When there is no operation for over 30 minutes, the mouse enters sleep mode. Move the mouse or press any button to wake up the mouse without any other operations.

Tip:
Before waking up the mouse, verify that your computer is turned on and not in sleep mode.


IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.




1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.




2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product.




3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.




4. Children should be supervised to ensure that they do not play with the appliance.




5. Keep the product away from fire or explosion may occur.




6. Do not place product in or near inflammable, explosive or hazardous object.




7. Do not place in or near water, rain, excess moisture or extreme heat.




8. Do not operate product with damaged cord or plug.



9. Do not operate product if it has been damaged in any way.



10. Do not disassemble the product. Disassembly may result in a risk of safety hazards.



11. Do not throw or shake the product.

Limited 18-Month warranty

What this warranty covers.

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TeckNet product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Unichain warrants the TeckNet product for 18 Months.

What will we do to correct problems?

Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TeckNet product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TeckNet product has been improperly installed, altered in any way, or tampered with. The TeckNet Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.d. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TeckNet website www.tecknet.co.uk for more information.

18

MONTH

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.

~ Increase the separation between the equipment and receiver.

~ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

~ Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Correct Disposal of This Product
(Waste Electrical& Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

尺寸：74.5 x 105 MM

材质：80g 书纸 单色印刷 双面印刷 风琴折