



DRH-12/1119
WIRELESS RETRACTABLE EXECUTIVE
AROUND THE NECK HEADSET



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Deluxe Wireless Neckband Headset with Retractable Earbuds
- USB charging cable
- 2 different sizes of silicon tips included
- Instruction Manual

Key Features


- Deluxe Wireless Neckband Headset with Retractable Earbuds
- Unique design with Retractable Earbuds
- Connects to your Bluetooth device and stream wireless music
- Built-in Mic; never miss your calls and enjoy wireless
- Phone conversation
- Built-in rechargeable battery
- Charging cable included

Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

2

Description of Parts:

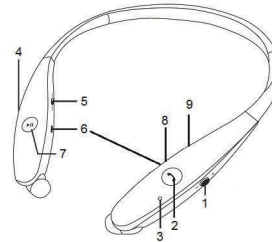

1	Volume Control Knob
2	Phone Button
3	Built-in MIC
4	Track Control Knob
5	ON/OFF Switch
6	Earbud Retractable Button
7	Play/Pause
8	LED Light Indicator (side)
9	Charging port (side)

INSTRUCTIONS FOR USE

Charging Instructions

The Bluetooth Earbuds come with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Cord to charge the Bluetooth Earbuds. Please charge for about 2 hours. Connect the USB charging cable to a computer USB port and the Micro USB plug to the charging port of the device. The Red LED light turns on while the device is charging. It takes about 2 hours for the unit to fully charge. When the battery is fully charged, the LED light will turn off.

Switching on/off the device

Slide the ON/OFF Switch to ON or OFF position to turn on or off the device correspondingly.

3

Pairing the device with Bluetooth devices (phone or music device)

Ensure the device is turned off, then, slide the ON/OFF Switch to ON position to turn on the device, an indication tone will be heard and the LED flashes red and blue. Place the Bluetooth Earbuds and Bluetooth device (phone or music device) so that they are no further than 3 feet apart;

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the "SL EXECUTIVE" from the list of available Bluetooth devices.

If required, enter the password '0000' to confirm & finalize pairing.

Once paired successful, another indication tone will be heard and the LED stays blue.

You can now start to use the device.

If pairing is unsuccessful, turn off the device first and then re-pair following the above steps. Once you have paired the Bluetooth Earbuds with a device, the Earbuds will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The Bluetooth Earbuds will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Once the Bluetooth Earbuds is paired with your device the music will transmit through the Bluetooth Earbuds. Please refer to your device's user manual for further information.

Function Summary

Listening to Music

Once the Earbuds are paired with your device you can stream music wirelessly through the Bluetooth Earbuds. Should you encounter any problems while streaming please refer your device's user manual for further information.

Control Function

Function	Operation	Button
Increase Volume	Playing music	A short push the Volume Control Knob to + will increase the volume
Decrease Volume	Playing music	A short push the Volume Control Knob to - will decrease the volume
Pause	Playing music	A short press on the Play/Pause Button will pause the music
Play	Pausing	A short press on the Play/Pause Button will restart the music

4

Previous track	Playing music	A short push the Track Control Knob to backward will return you to the previous track
Next track	Playing music	A short push the Track Control Knob to forward will take you to the next track

An indication tone will alert you when the volume is adjusted to the minimum or maximum level.

Making a call with the Bluetooth Earbuds in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone Button once to answer an incoming call
Reject a call	Incoming Call	Long press the Phone Button
End a call	Incoming Call	After your phone conversation, short press the Phone Button.
Increase Volume	During a call	A short push the Volume Control Knob to + will increase the volume
Decrease Volume	During a call	A short push the Volume Control Knob to - will decrease the volume
Redial last number	Standby mode and connected to a device	Long press the Phone Button

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

LED Indicator

Please refer to the below tables for a list of the LED statuses whilst using the Bluetooth Earbuds.

Charging Indication

LED Indicator	Status of the BT Earbuds
Red LED	Charging
Red LED off	Charging Completed

LED Indication

LED Indicator	Status of the BT Earbuds
---------------	--------------------------

5

LED flashes red and blue alternately	Pairing mode
--------------------------------------	--------------

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth specification	Bluetooth 4.1
Operating distance	33 Feet
Working time	Up to 3 hours
Charging input voltage	DC 5V
Charging time	about 2 hours
Speaker Power	2 x 5mW
Built-in Battery	110mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.

6

- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

7

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

8