

INTRODUCTION

Enjoy your favorite media with clear visuals and portable convenience, whether it's video games, movies, or sports. The GOTheater is a compact, screen mirroring enabled LED projector that wirelessly connects to your mobile devices (smartphones, laptops, tablets, etc.) via WiFi, so you can enjoy a distinctive home theater experience wherever you want. Set the perfect scene in motion with the GOTheater!


PLEASE READ THIS USER GUIDE CAREFULLY BEFORE USING OR SETTING UP THE GOTHEATER, AND KEEP IT HANDY FOR FUTURE REFERENCE.

FEATURES

- Projection size up to 180".
- Mirrors your iPhone/Android smartphone screen via WiFi.
- Includes 120" screen for fun movie nights.
- Bluetooth compatibility & multiple input ports.
- Built-in 3W speaker.

HOW TO CONNECT THE GOTHEATER TO WIFI

On the projector's main menu, click Settings, or press the MENU button on the remote. Click --> --> Network Information --> Scan. Choose the home network and Wi-Fi name you wish to connect to, then input the network's password from the on-screen/soft keyboard. Hit "Enter" on the keyboard to save the password. The GOTheater should then connect to the Wi-Fi network. Once connected, the name of the Wi-Fi network will be displayed on the top-right corner of the screen.



WHAT'S IN THE BOX?

GOTheater LED Cinema Projector
120" Projection Screen
Wireless Remote
AC Cable
RCA Cable
User Guide

SPECIFICATIONS

Display Native Resolution: 1280 x 720p
Max Supported Resolution: 1920 x 1080p
Input: AC 90-260V
Projection Size: 24-180"
Input Ports: HDMI/VGA/USB/MicroSD/AV

LET'S GET STARTED

 
- Place the GOTheater projector on a flat, stable surface, making sure there is at least 6 in. of free space on each side for ventilation purposes.
- Plug one end of the AC power cable into the side of the GOTheater, and the other end into an AC wall outlet. Once the projector is plugged in, its LED indicator light will glow red.
- Press the POWER Button on either the GOTheater or the remote to turn the projector on. The projector's LED indicator light will glow green. A loading image will display on the screen while the GOTheater warms up. It won't respond to any commands while it is warming up.
- To adjust the image focus, turn the knob just above the lens while observing the on-screen pixels near the center of the screen. Optimal focus occurs when the on-screen pixels are clearly visible. Depending on how large your (projected) screen is, the focus near the edges of the screen may be less sharp than at the center of the screen.
- Projecting the GOTheater's beam at an angle can result in a distorted, trapezoidal image. Turn the Keystone adjustment knob located behind the Focus knob to adjust the angle of the projection and restore the distorted screen to a rectangular or square shape.

IMPORTANT NOTE: THE GOTHEATER'S MIRRORING FUNCTION WILL NOT WORK WITH DRM-ENABLED PROGRAMS SUCH AS NETFLIX, AMAZON PRIME VIDEO, AND OTHER SECURED VIDEO CONTENT DISTRIBUTORS. SOME OF THE SETTINGS AND VISUALS ON THE PROJECTOR AND PHONES MAY LOOK DIFFERENT THAN ON THIS GUIDE DUE TO SYSTEM CHANGES AND UPDATES. THE GOTHEATER PROJECTOR IS DESIGNED FOR MULTIMEDIA AND ENTERTAINMENT PURPOSES, AND MAY NOT WORK WELL WITH TEXT FILES.

SETTING UP AN ANDROID SCREEN MIRROR


NOTE: Make sure the projector and your device are both connected to the same network. Click on the Android Miracast icon on the GOTheater's home page.

Follow the instructions in the image below to mirror your iOS device's screen.

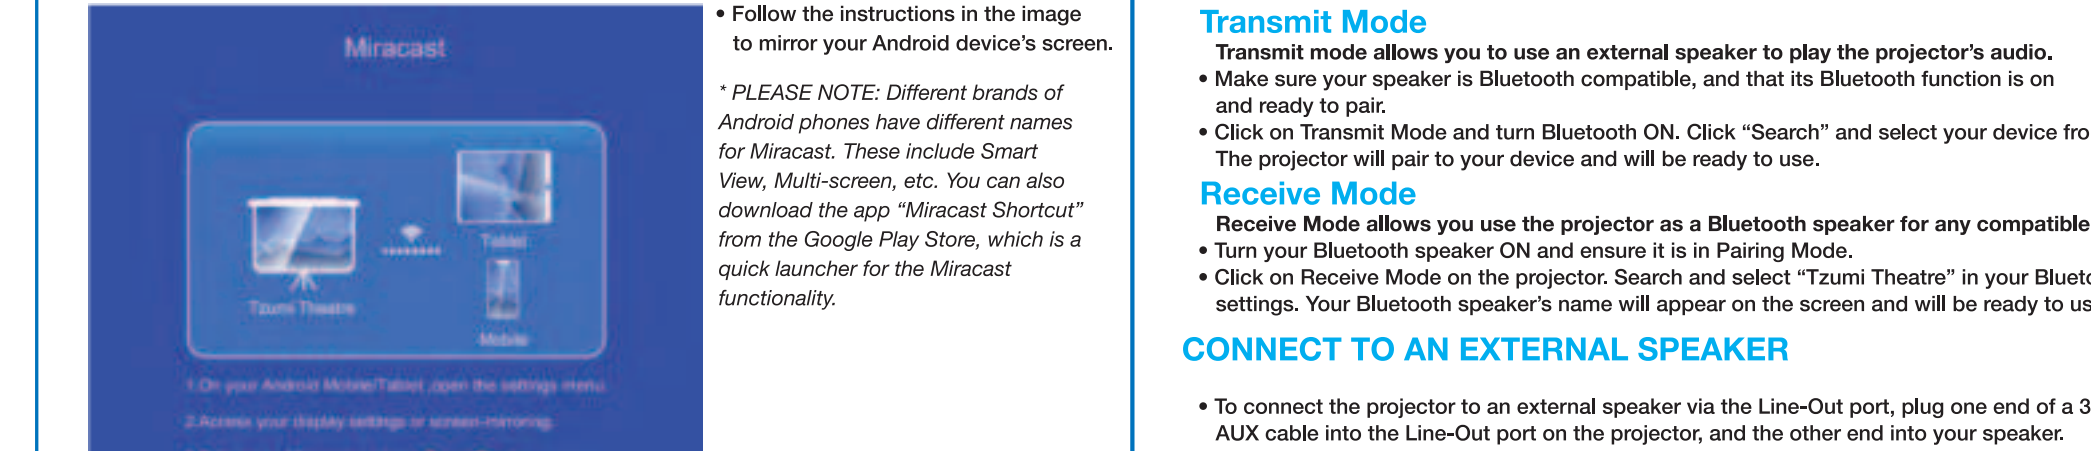


LET'S TAKE A LOOK AT THE REMOTE

 *NOTE: Insert two AAA batteries into the battery compartment on the back of the remote before using.

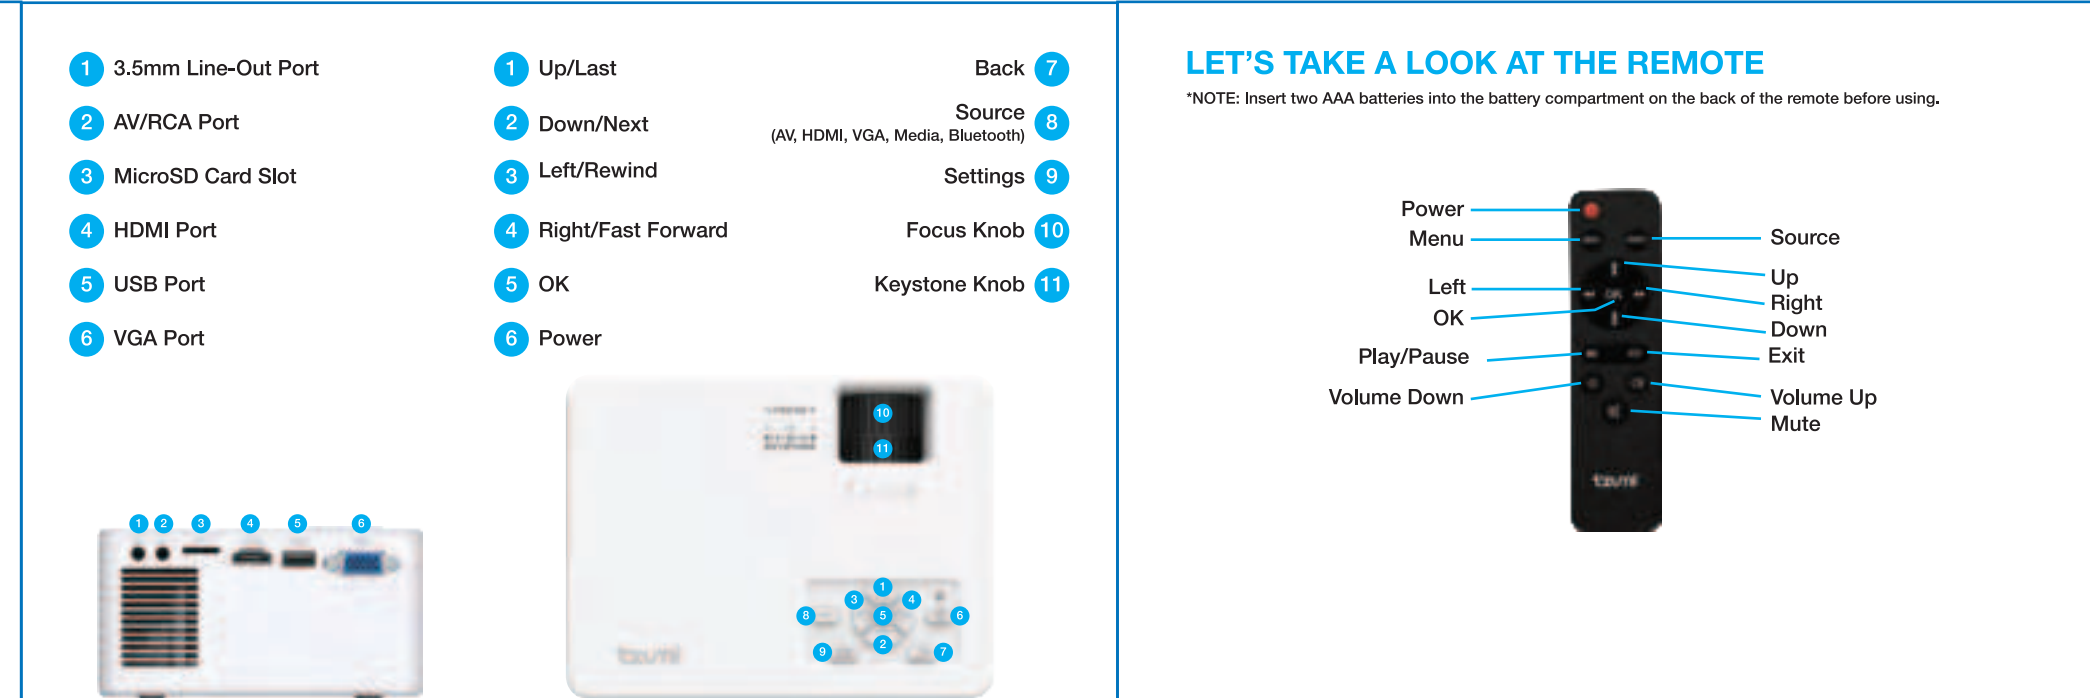


SETTINGS

- Press the Menu button on the remote, or click on the Settings icon on the GOTheater's Home page to bring up the Settings menu.
- The Settings menu will let you change your Wi-Fi, Bluetooth, Picture, Sound, and Projection options. You can also adjust the aspect ratio and OSD language, check for a software upgrade, perform a factory reset, and more.




GOTheater HOME SCREEN

 When the GOTheater powers on, the main screen will display as shown below. You can use the arrow buttons on either the remote or the GOTheater itself to make the appropriate selection:

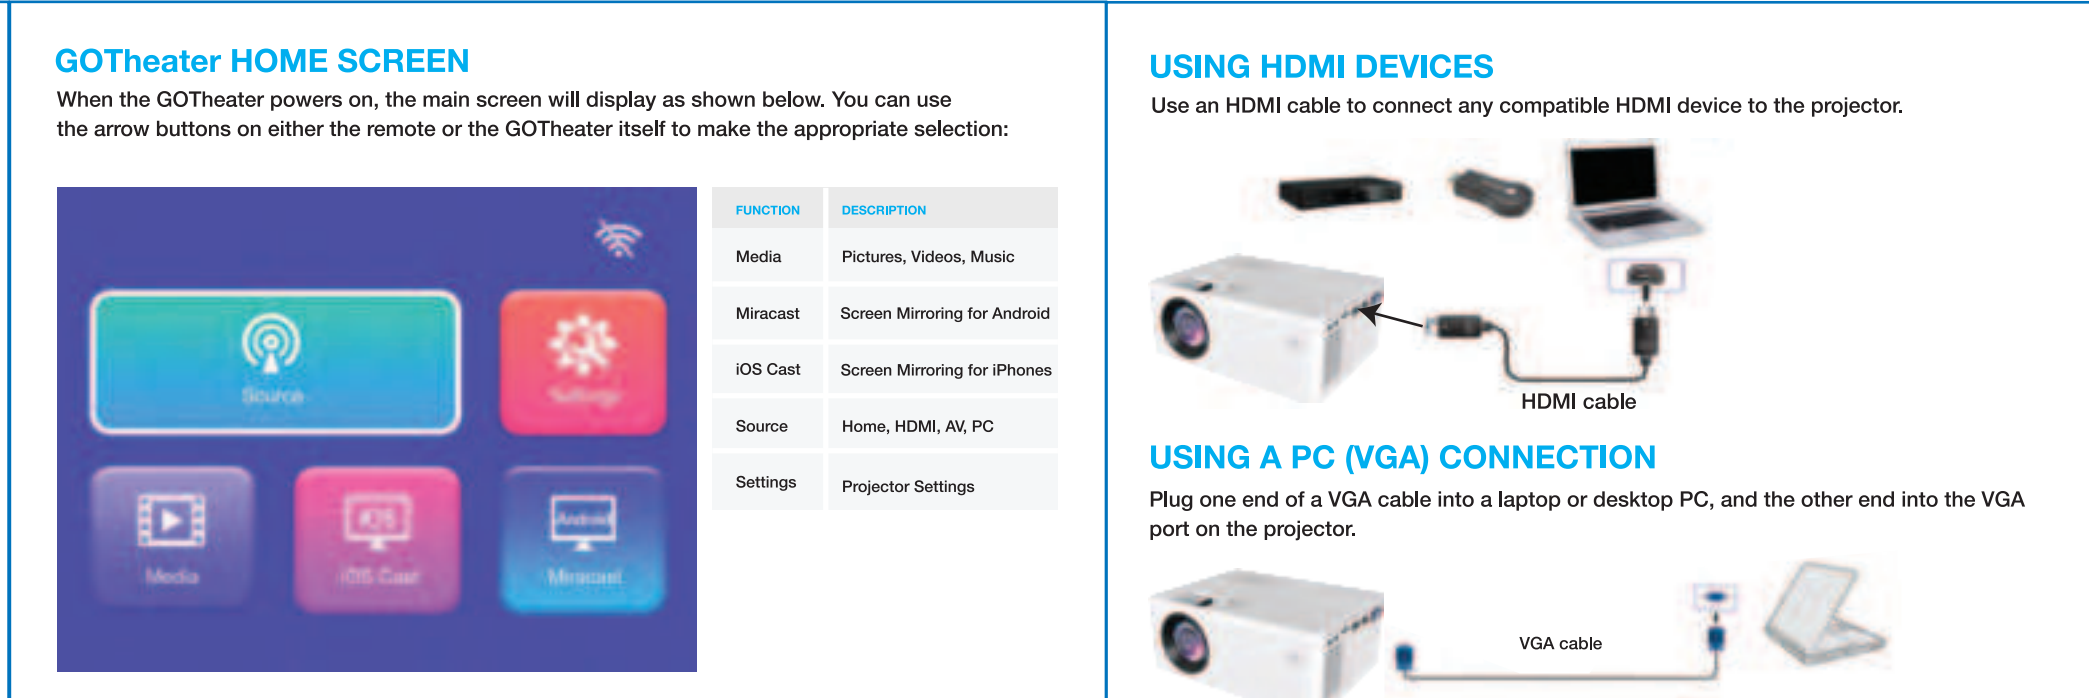


FUNCTION	DESCRIPTION
Media	Pictures, Videos, Music
Miracast	Screen Mirroring for Android
iOS Cast	Screen Mirroring for iPhones
Source	Home, HDMI, AV, PC
Settings	Projector Settings

 PROJECTION DISTANCE & SIZE

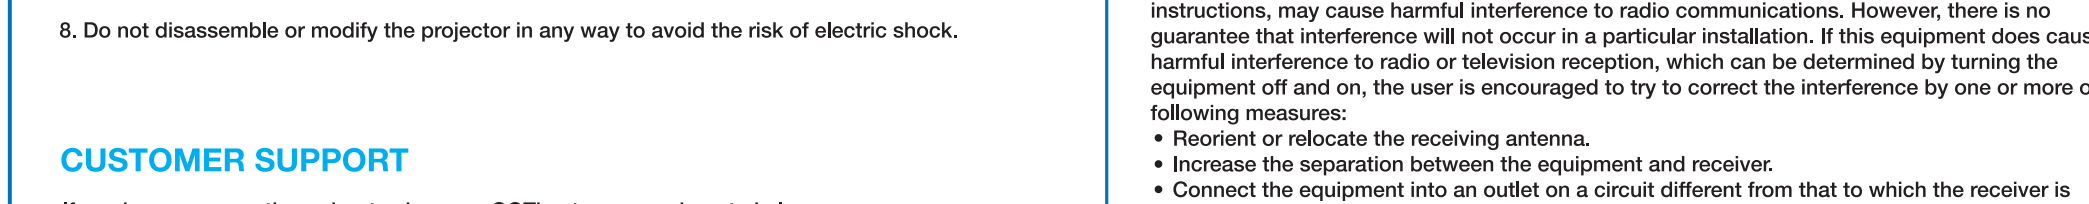


USING HDMI DEVICES

 Use an HDMI cable to connect any compatible HDMI device to the projector.

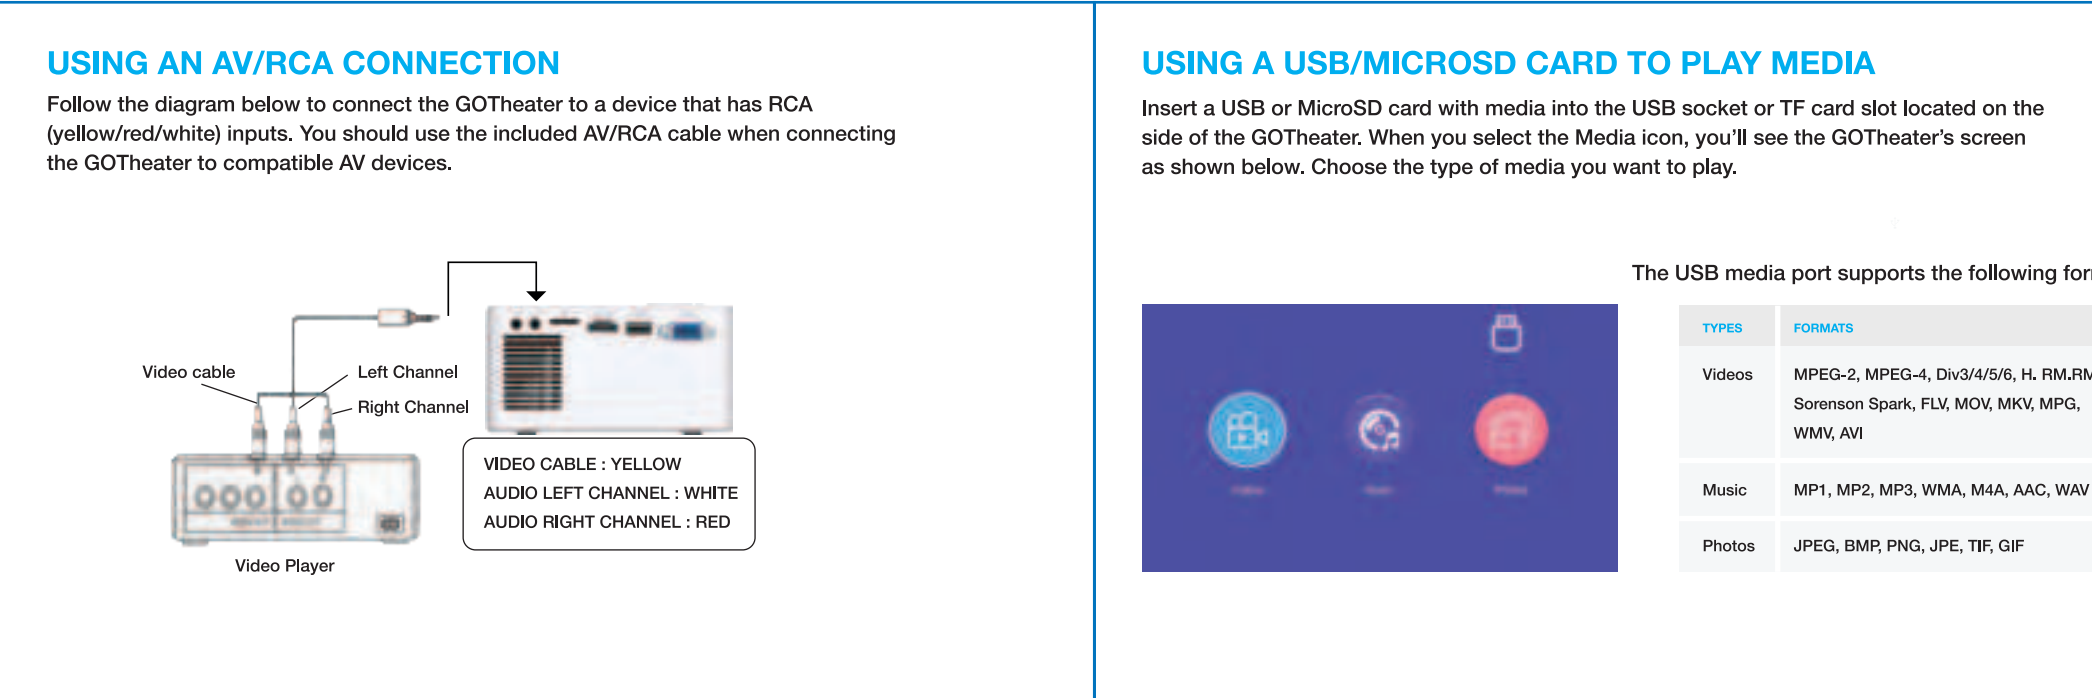


USING A PC (VGA) CONNECTION

Plug one end of a VGA cable into a laptop or desktop PC, and the other end into the VGA port on the projector.




USING AN AV/RCA CONNECTION

 Follow the diagram below to connect the GOTheater to a device that has RCA (yellow/red/white) inputs. You should use the included AV/RCA cable when connecting the GOTheater to compatible AV devices.

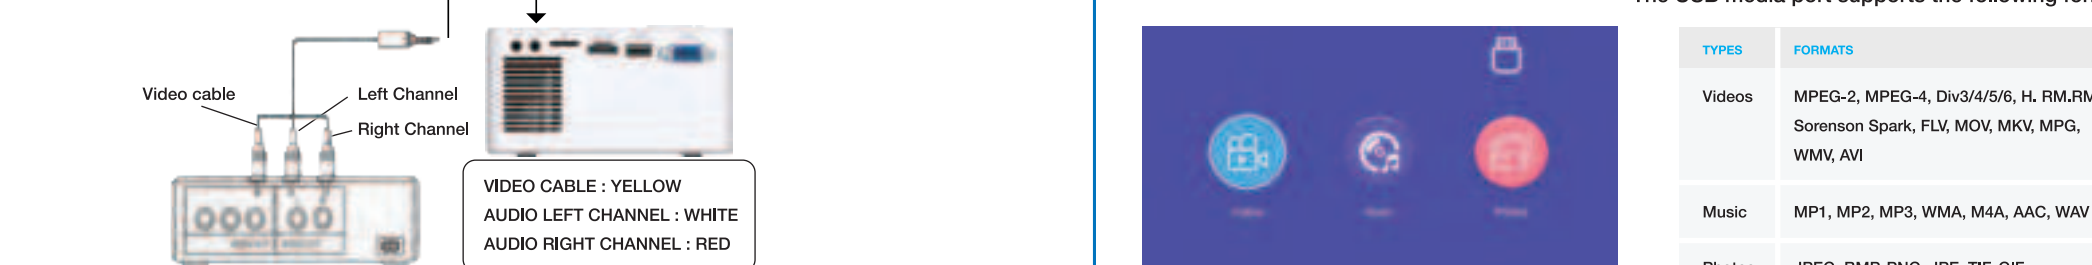

USING A USB/MICROSD CARD TO PLAY MEDIA

Insert a USB or MicroSD card with media into the USB socket or TF card slot located on the side of the GOTheater. When you select the Media icon, you'll see the GOTheater's screen as shown below. Choose the type of media you want to play.



TYPES	FORMATS
Videos	MPEG-2, MPEG-4, DivX/4/5/6, H.264/AVC, H.265/HEVC, Screen Spark, FLV, MOV, MKV, MPQ, WMV, AVI
Music	MP1, MP2, MP3, WMA, M4A, AAC, WAV
Photos	JPEG, BMP, PNG, JPE, TIF, GIF

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

life just got better.
tzumi®

GOTheater LED Home Cinema Projector. Distributed by tzumi Inc., NY, NY 10016. ©Copyright 2024 tzumi Inc. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.

