

H:95mm

W:135mm



Genius web : www.geniusnet.com
OEM/ODM : www.kyecom.com

KYE Systems Corp.

#492, Sec. 5, Chongxin Rd., Sanchong Dist.,
New Taipei City 24160, Taiwan
Tel: 886-2-2995-6645
Fax: 886-2-2995-6649
Email: sim@geniusnet.com.tw
Email: csd@geniusnet.com.tw (Tech. Support)
<http://www.geniusnet.com>

KYE International Corp. (USA & Canada)

 
12675 Colony Street, Chino, CA 91710, USA
Tel: 1-626-226-2678
Tel: 1-800-756-4115 (Toll Free Line)
Fax: 1-626-226-2679
<http://www.geniusnetusa.com>
<http://www.geniushop.com>



12030051400-A

LuxeMate Q8100 2.4Ghz Wireless Keyboard & Mouse Combo

Model:LuxeMate Q8100/K
FCC ID:FSUGKZHM

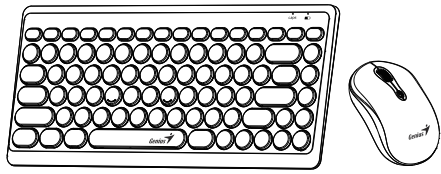


Quick Guide


Copyright© 2019 KYE SYSTEMS CORP.

Figure

 - 1 Remove the battery cover from the mouse.
Install two AAA batteries into the mouse.

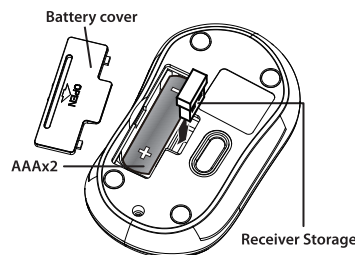

 - 2 Remove the battery cover from the keyboard.
Install two AAA batteries into the keyboard.

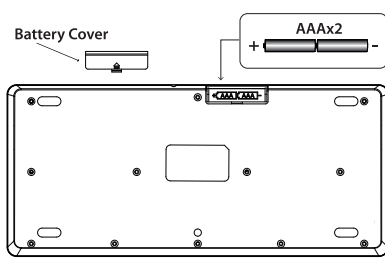

Replace Batteries

If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them.
Warning: do not mix or use different types of batteries at the same time.

Notes on Battery Usage

 
 
- When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below:
- Different battery types and surrounding temperatures may affect the battery performance.
 - Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
 - If you are using a new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations. you can use this device. Therefore, to maximize their performance and lifetime, we recommend that you fully charge the batteries and discharge them for at least one complete cycle before use.
 - The battery or wireless device may feel warm when using for an extended period of time. This is normal and not a malfunction.
 - If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
 - Always keep the terminals in a clean state.
 - Risk of explosion if battery is replaced by an incorrect type.
 - Dispose of used batteries according to local regulations.

3

Plug the receiver into your computer



Connect both devices, wait 5-10 seconds and you are ready to begin

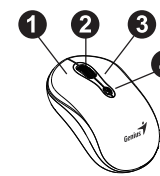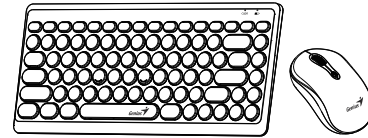

Mouse Button Assignments

1. **Left Button:** Provides traditional mouse functions like click, double click and drag.
2. **Magic-Roller:** Scroll the button to surf the Internet and Windows documents.
3. **Right Button:** Provides traditional mouse right click function
4. **DPI:** 800 / 1200 / 1600

English

Keyboard function key definition

🎵	Fn + F1	Media Player
⏮	Fn + F2	Volume -
⏭	Fn + F3	Volume +
🔇	Fn + F4	Mute
⏮	Fn + F5	Previous Track
⏭	Fn + F6	Next Track
⏸	Fn + F7	Play/Pause
■	Fn + F8	Stop Playing
🏠	Fn + F9	Web / Homepage
✉	Fn + F10	Email
💻	Fn + F11	My computer
★	Fn + F12	My favorite

Русский

Определение функциональных клавиш клавиатуры

🎵	Fn + F1	проигрыватель Windows Media
⏮	Fn + F2	понижение уровня звука
⏭	Fn + F3	повышение уровня звука
🔇	Fn + F4	отключение звука
⏮	Fn + F5	назад
⏭	Fn + F6	далее
⏸	Fn + F7	воспроизведение и пауза
■	Fn + F8	остановка воспроизведения
🏠	Fn + F9	веб-браузер
✉	Fn + F10	электронная почта
💻	Fn + F11	Мой компьютер
★	Fn + F12	Мое любимое

Deutsch

Tastaturfunktionstastendefinition

🎵	Fn + F1	Media Player
⏮	Fn + F2	Lautstärke -
⏭	Fn + F3	Lautstärke +
🔇	Fn + F4	Stumm
⏮	Fn + F5	Vorheriger
⏭	Fn + F6	Nächster
⏸	Fn + F7	Wiedergabe/Pause
■	Fn + F8	Wiedergabe stoppen
🏠	Fn + F9	Webbrowser
✉	Fn + F10	Email
💻	Fn + F11	Mein Computer
★	Fn + F12	Mein Favorit

Français

Définition de la touche de fonction du clavier

🎵	Fn + F1	Lecteur multimédia
⏮	Fn + F2	Volume -
⏭	Fn + F3	Volume +
🔇	Fn + F4	Sourdine
⏮	Fn + F5	Précédent
⏭	Fn + F6	Suivant
⏸	Fn + F7	Lecture/Pause
■	Fn + F8	Arrêt de la lecture
🏠	Fn + F9	Navigateur
✉	Fn + F10	Email
💻	Fn + F11	mon ordinateur
★	Fn + F12	mon préféré

Italiano

Definizione del tasto funzione tastiera

🎵	Fn + F1	Media Player
⏮	Fn + F2	Volume -
⏭	Fn + F3	Volume +
🔇	Fn + F4	muto
⏮	Fn + F5	Precedente
⏭	Fn + F6	Prossimo
⏸	Fn + F7	Riproduzione/Pausa
■	Fn + F8	Ferma Riproduzione
🏠	Fn + F9	Web Browser / Home
✉	Fn + F10	E-mail
💻	Fn + F11	Il mio computer
★	Fn + F12	Il mio preferito

Español

Definición de la tecla de función del teclado

🎵	Fn + F1	Reproductor multimedia
⏮	Fn + F2	Volumen -
⏭	Fn + F3	Volumen +
🔇	Fn + F4	Silencio
⏮	Fn + F5	Anterior
⏭	Fn + F6	Siguiente
⏸	Fn + F7	Reproducir/Pausar
■	Fn + F8	Pausar reproducción
🏠	Fn + F9	Navegador de Internet
✉	Fn + F10	Correo electrónico
💻	Fn + F11	Mi computadora
★	Fn + F12	Mi favorito

Brasil

Definição da tecla de função do teclado

🎵	Fn + F1	Tocador de Mídia
⏮	Fn + F2	Volume -
⏭	Fn + F3	Volume +
🔇	Fn + F4	Mudo
⏮	Fn + F5	Anterior
⏭	Fn + F6	Próximo
⏸	Fn + F7	Play / Pausa
■	Fn + F8	Parar Reprodução
🏠	Fn + F9	Navegador Web
✉	Fn + F10	E-mail
💻	Fn + F11	Meu computador
★	Fn + F12	Meu favorito

Česky

Definice funkční klávesy na klávesnici

🎵	Fn + F1	Media Player
⏮	Fn + F2	Hlasitost -
⏭	Fn + F3	Hlasitost +
🔇	Fn + F4	Ztlumení zvuku
⏮	Fn + F5	Předchozí
⏭	Fn + F6	Další
⏸	Fn + F7	Přehrát / Pauza
■	Fn + F8	Ukončení přehrávání
🏠	Fn + F9	Internetový prohlížeč
✉	Fn + F10	Email
💻	Fn + F11	Můj počítač
★	Fn + F12	Můj oblíbený

Magyar

Billentyűzet funkciógomb meghatározása

🎵	Fn + F1	Médialejátszó
⏮	Fn + F2	Hangerő -
⏭	Fn + F3	Hangerő +
🔇	Fn + F4	Néma
⏮	Fn + F5	Előző
⏭	Fn + F6	Következő
⏸	Fn + F7	Lejátszás / Szünet
■	Fn + F8	Lejátszás leállítása
🏠	Fn + F9	Webböngésző
✉	Fn + F10	E-mail
💻	Fn + F11	A számítógépem
★	Fn + F12	A kedvencem

Polski

Definicja klawisza funkcyjnego klawiatury

🎵	Fn + F1	Odtwarzacz multimedialny
⏮	Fn + F2	Głośność -
⏭	Fn + F3	Głośność +
🔇	Fn + F4	Wyciszenie
⏮	Fn + F5	Poprzednie
⏭	Fn + F6	Następne
⏸	Fn + F7	Odtwarzanie / Pauza
■	Fn + F8	Zatrzymanie odtwarzania
🏠	Fn + F9	Przeglądarka internetowa
✉	Fn + F10	E-mail
💻	Fn + F11	Mój komputer
★	Fn + F12	Mój ulubiony

Slovensko

Definicija funkcijske tipke na tipkovnici

🎵	Fn + F1	Predvajalnik medijev
⏮	Fn + F2	Glasnost -
⏭	Fn + F3	Glasnost +
🔇	Fn + F4	Utišaj
⏮	Fn + F5	Prejšnja
⏭	Fn + F6	Naslednja skladba
⏸	Fn + F7	Predvajaj/zaustavi
■	Fn + F8	Ustavi predvajanje
🏠	Fn + F9	Spletni brskalnik
✉	Fn + F10	E-pošta
💻	Fn + F11	Moj računalnik
★	Fn + F12	Moj najljubši

Slovenčina

Definicija funkčného klávesu klávesnice

🎵	Fn + F1	Media Player
⏮	Fn + F2	Hlasitosť -
⏭	Fn + F3	Hlasitosť +
🔇	Fn + F4	Stíšenie
⏮	Fn + F5	Predchádzajúci
⏭	Fn + F6	Nasledujúci
⏸	Fn + F7	Prehrať/Prerušit
■	Fn + F8	Zastavenie prehrávania
🏠	Fn + F9	Webový prehliadač
✉	Fn + F10	e-mail
💻	Fn + F11	Môj počítač
★	Fn + F12	Môj obľúbený

Srpski

Definicija tipkovnice za funkcijsku tipkovnicu

🎵	Fn + F1	Media plejer
⏮	Fn + F2	Jačina zvuka -
⏭	Fn + F3	Jačina zvuka +
🔇	Fn + F4	Prigušenje
⏮	Fn + F5	Prethodno
⏭	Fn + F6	Sljedeće
⏸	Fn + F7	Reprodukcija/Pauza
■	Fn + F8	Prekid reprodukcije
🏠	Fn + F9	Pregledač veba
✉	Fn + F10	E-pošta
💻	Fn + F11	moje računalo
★	Fn + F12	moj favorit

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.