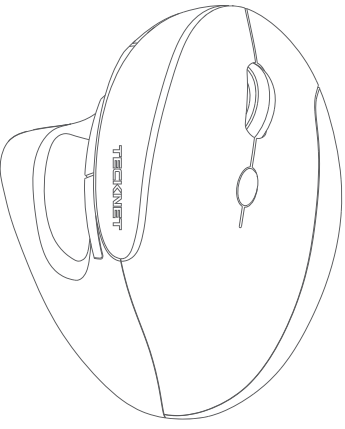 
 
 
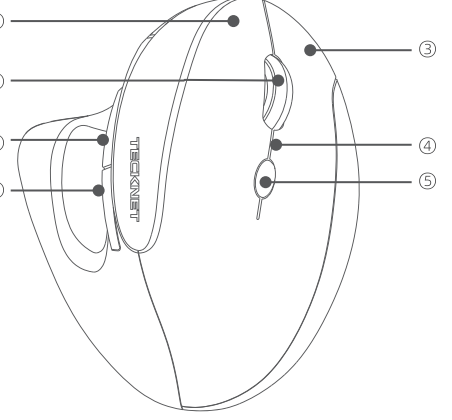 
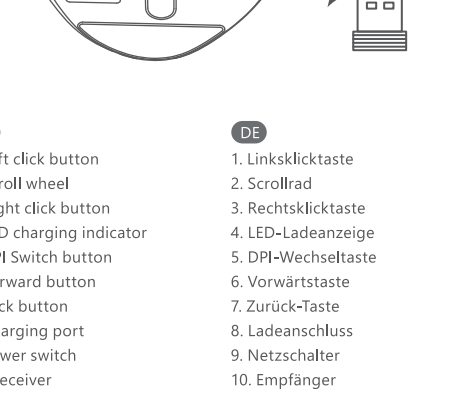 
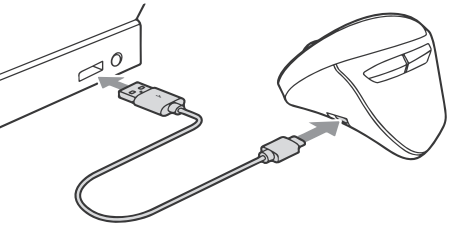 
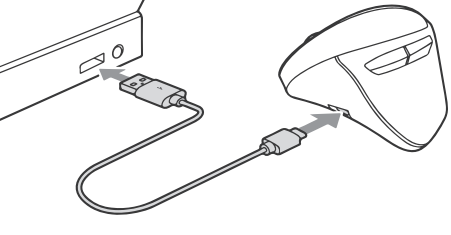 
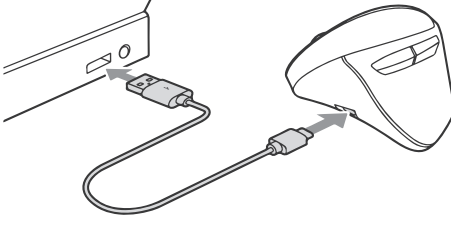 
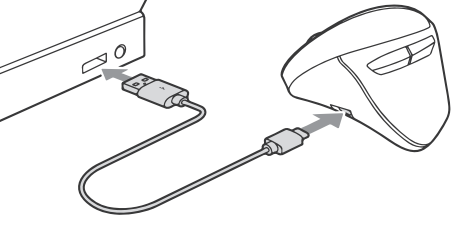 
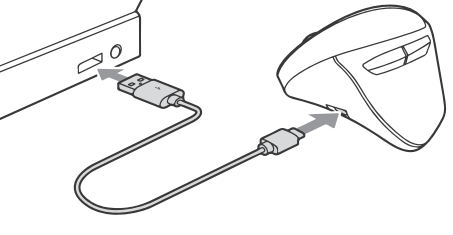 


TECKNET Wireless Mouse  User Manual Model: EWM01576 ENDEFRESITJP	Package Contents: x 1 x 1 x 1 x 1 Button Instructions:  	FR 1. Bouton clic gauche 2. Molette de défilement 3. Bouton clic droit 4. Voyant de charge LED 5. Bouton changement DPI 6. Bouton avancer 7. Bouton reculer 8. Port de chargement 9. Bouton d'alimentation 10. Récepteur ES 1. Botón de clic izquierdo 2. Rueda de desplazamiento 3. Botón de clic derecho 4. Indicador de carga LED 5. Botón de cambio de DPI 6. Botón de avance 7. Botón de retroceso 8. puerto de carga 9. Interruptor de encendido 10. Receptor IT 1. Tasto sinistro 2. Rotellina di scorrimento 3. Tasto destro 4. Indicatore di ricarica LED 5. Tasto Interruttore DPI 6. Tasto Avanti 7. Tasto Indietro 8. Porta di ricarica 9. Interruttore di Alimentazione 10. Ricevitore	Product Specifications: Working current: <3mA DPI: 800/1200/1600/2000/2400DPI Receive distance: <10m Battery capacity: 300mAhmAH Charging Cable: Type-C Transmission Power: 1.5dBm System compatible: Windows7/8/8.1/macOS/Android (Note: for macOS, the side buttons cannot be used.) Charging method: 1. Connect the charging cable supplied with the mouse to charge it. Connect the USB Type-C connector to the charging port of the mouse and the USB A connector to a USB port such as a PC as shown below.  EN	2. Charging is complete when the LED turns off. Please unplug the charging Cable. (Charging time is about 3 to 4 hours) The status of charging can be seen with the following LED indicators. Red: The battery is low Orange: Charging Off: Charging is complete Tips: Even if the power switch is turned on, if the mouse has not been used for a period of time, the mouse will go to sleep. Click the mouse to return to working state. (There may be a slight delay in the initial recovery) EN	IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.  1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions.  2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product.  3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  4. Children should be supervised to ensure that they do not play with the appliance.  5. Keep the product away from fire or explosion may occur.  6. Do not place product in or near inflammable, explosive or hazardous object.  7. Do not place in or near water, rain, excess moisture or extreme heat.  8. Do not operate product with damaged cord or plug.  9. Do not operate product if it has been damaged in any way.  10. Do not disassemble the product. Disassembly may result in a risk of safety hazards.  11. Do not throw or shake the product.	Limited 12-Month Warranty What this warranty covers. Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship. What the period of coverage is. Unichain warrants the TECKNET product for 12 Months. What will we do to correct problems? Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). What is not covered by this warranty? All above warranties are null and void if the TECKNET product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TECKNET product has been improperly installed, altered in any way, or tampered with. The TECKNET Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration. How to claim the warranty Please contact retailers or visit TECKNET website or email support@tecknet.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase. 12 MONTH	Disclaimer Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein. FCC STATEMENT This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ~ Increase the separation between the equipment and receiver.	~ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. ~ Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. SIMPLIFIED EU DECLARATION OF CONFORMITY Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type EWM01576 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.tecknet.com/support
---	---	---	--	--	---	---	--	--

Correct Disposal of This Product (Waste Electrical& Electronic Equipment) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal. 	Produktspezifikationen: Arbeitsstrom: <3mA DPI: 800/1200/1600/2000/2400DPI Empfangsentfernung: <10m Batteriekapazität: 300mAhmAH Ladekabel: Type-C übertragungsleistung: 1.5dBm Systemkompatibel: Windows7/8/8.1/macOS/Android (Hinweis: Bei einem macOS können die Seitentasten nicht verwendet werden.) Lademethode: 1. Schließen Sie das mit der Maus gelieferte Ladekabel an, um sie aufzuladen. Verbinden Sie den USB-Typ-C-Anschluss mit dem Ladeanschluss der Maus und den USB-A-Anschluss mit einem USB-Anschluss wie z. B. einem PC (siehe Abbildung unten).  DE	2. Der Ladevorgang ist abgeschlossen, wenn die LED erlischt. Bitte ziehen Sie dann das Ladekabel ab. (Die Ladezeit beträgt ca. 3 bis 4 Stunden) Der Ladezustand wird mit den folgenden LED-Anzeigen angezeigt. Rot: Der Akku ist schwach Orange: Aufladen Aus: Der Ladevorgang ist abgeschlossen Tips: Selbst wenn der Netzschalter eingeschaltet ist, die Maus längere Zeit jedoch nicht benutzt wurde, geht die Maus in den Ruhezustand. Klicken Sie mit der Maus, um zum Arbeitszustand zurückzukehren. (Es kann zu einer leichten Verzögerung bei der ersten Wiederherstellung kommen) DE	Spécifications du produit: Courant de fonctionnement : <3mA DPI: 800/1200/1600/2000/2400DPI Portée de réception: <10m Capacité de la batterie: 300mAhmAH Câble de chargement: Type-C Puissance de transmission: 1.5dBm Systèmes compatibles: Windows7/8/8.1/macOS/Android (Remarque: pour macOS, les boutons latéraux ne peuvent pas être utilisés.) Méthode de chargement: 1. Connectez le câble de chargement fourni avec la souris pour charger. Connectez le connecteur USB Type-C au port de chargement de la souris et le connecteur USB A au port USB comme un PC comme montré ci-dessous.  FR	2. Lorsque le chargement est terminé, quand le LED s'éteint, veuillez débrancher le câble de chargement. (Le temps de chargement est d'environ 3 à 4 heures) Le statut du chargement est indiqué par les voyants LED suivants. Rouge: La batterie est faible Orange: Chargement Éteint: Chargement terminé Conseils: Même si le courant est éteint, si la souris n'a pas été utilisée depuis longtemps, la souris va se mettre en veille. Cliquez sur retour pour la réactiver. (Il peut y avoir un décalage dans la récupération initiale) FR	Especificaciones del producto: Corriente de trabajo: <3mA DPI: 800/1200/1600/2000/2400DPI Distancia de recepción: <10m Capacidad de la batería: 300mAhmAH Cable de carga: Tipo-C Poder de transmisión: 1.5dBm Compatible con: Windows7/8/8.1/macOS/Android (Nota: para macOS, no se pueden usar los botones laterales.) Método de carga: 1. Conecte el cable de carga suministrado con el mouse para cargarlo. Conecte el conector USB tipo C al puerto de carga del mouse y el conector USB A a un puerto USB como una PC, como se muestra a continuación.  ES	2. La carga se completa cuando el LED se apaga. Desenchufe el cable de carga. El tiempo de carga es de aproximadamente 3 a 4 horas). El estado de carga se puede ver con los siguientes indicadores LED. Rojo: la batería está baja Naranja: carga Apagado: la carga está completa Consejos: Incluso si el interruptor de encendido está on, si el mouse no se ha utilizado durante un período, el mouse se apagará. Haga clic con el mouse para volver al estado de trabajo. (Puede haber un ligero retraso en la recuperación inicial) ES	Specifiche del Prodotto: Corrente di funzionamento: <3mA DPI: 800/1200/1600/2000/2400DPI Distanza di ricezione: <10 metri Capacità della batteria: 300mAhmAH Cavo di ricarica: Tipo-C Potenza di trasmissione: 1.5dBm Compatibile con il sistema: Windows7/8/8.1/macOS/Android (Nota: con il macOS non si possono usare i tasti laterali.) Come si ricarica: 1. Collegare il cavo per la ricarica fornito con il mouse per ricaricarlo. Collegare il connettore USB Type-C alla porta per la ricarica del mouse e il connettore USB A ad una porta USB, ad esempio ad un PC, come illustrato di seguito.  IT	2. La ricarica è completa quando il LED si spegne. Scollegare il Cavo per la ricarica. (Il tempo di ricarica è di circa 3 a 4 ore) Lo stato della ricarica può essere visto con i seguenti indicatori LED. Rosso: la batteria è scarica Arancione: ricarica in corso Off: ricarica completata Suggerimenti: Anche se l'interruttore di alimentazione fosse acceso, se il mouse non fosse stato usato per un periodo di tempo, il mouse passerà alla modalità di sospensione (sleep). Fare clic con il mouse per tornare allo stato di operatività. (Potrebbe verificarsi un leggero ritardo nel recupero iniziale) IT	
--	--	--	--	---	--	--	---	--	--

尺寸：74.5 x 105 MM
材质：80g 书纸 单色印刷 双面印刷 十字折